



Block E-1 CYLINDER HEAD COVER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	12310-MS8-000	COVER, FR. CYLINDER HEAD	001	0
2	12320-MS8-000	COVER, RR. CYLINDER HEAD	001	0
3	12351-MF5-000	COVER, TAPPET ADJUSTING HOLDER	002	0
4	12361-MF5-000	CAP, TAPPET ADJUSTING HOLDER	002	0
5	12391-MF5-750	GASKET, HEAD COVER	002	0
6	90011-MA6-000	BOLT, FLANGE, 6X30	004	0
7	90541-MB0-000	WASHER, MOUNTING RUBBER	004	0
8	90542-MB0-000	RUBBER, MOUNTING	004	0
9	91303-MF5-003	O-RING, 44X3 (ARAI)	002	0
10	91304-MF5-003	O-RING, 62.4X2.5 (ARAI)	002	0
11	91413-679-000	CLIP, 2X70	001	0
12	96001-0602000	BOLT, FLANGE, 6X20	004	0

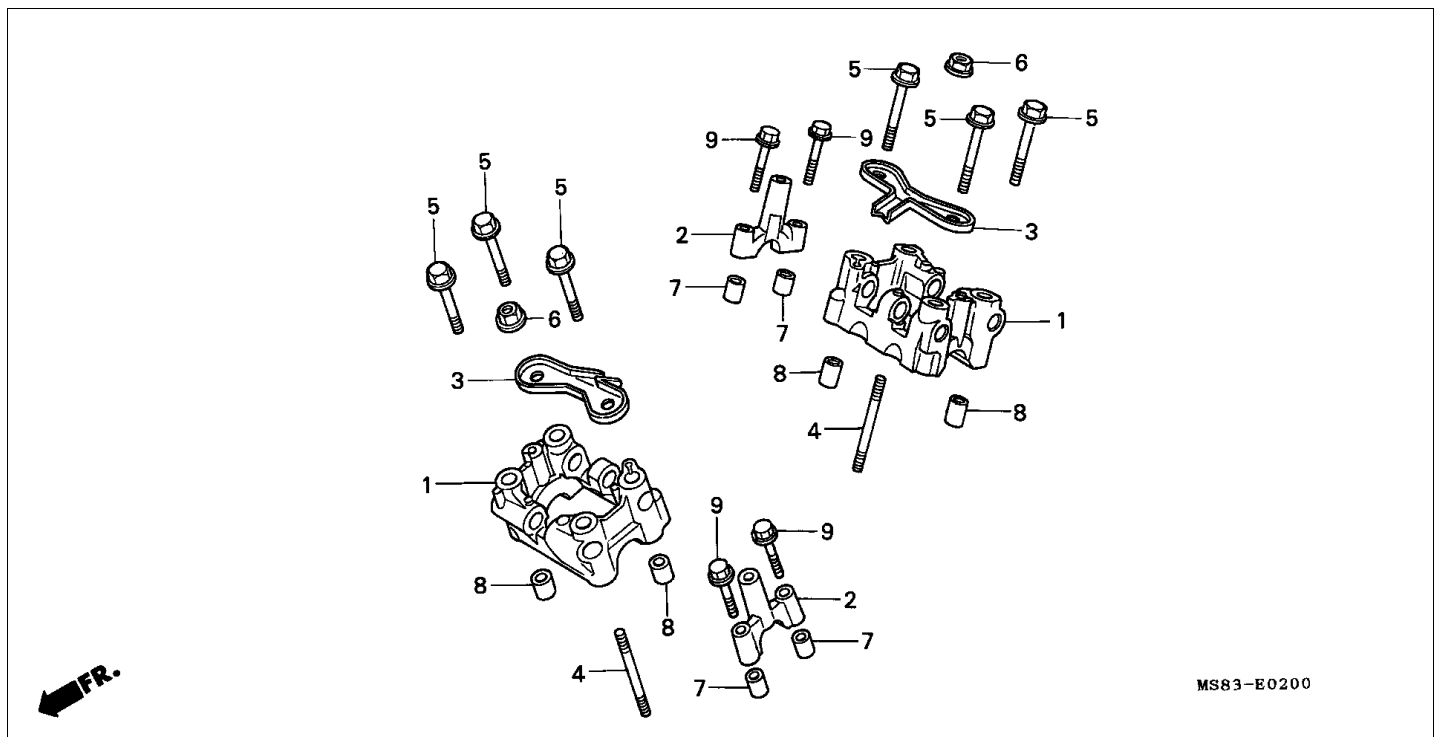


Block E-2 CAMSHAFT HOLDER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	12223-MF5-030	HOLDER, RR. CAMSHAFT	002	0
2	12225-MF5-000	HOLDER, SIDE CAMSHAFT	002	0
3	12226-MF5-000	PLATE, VALVE OIL GUIDE	002	0
4	90013-MF5-000	BOLT, STUD, 8X50	002	0
5	90066-MC7-000	BOLT, FLANGE, 8X68	006	0
6	94050-08080-	NUT, FLANGE, 8MM	002	0
7	94301-08140-	DOWEL PIN, 8X14	004	0
8	94301-10160-	DOWEL PIN, 10X16	004	0
9	96001-0604000	BOLT, FLANGE, 6X40	004	0

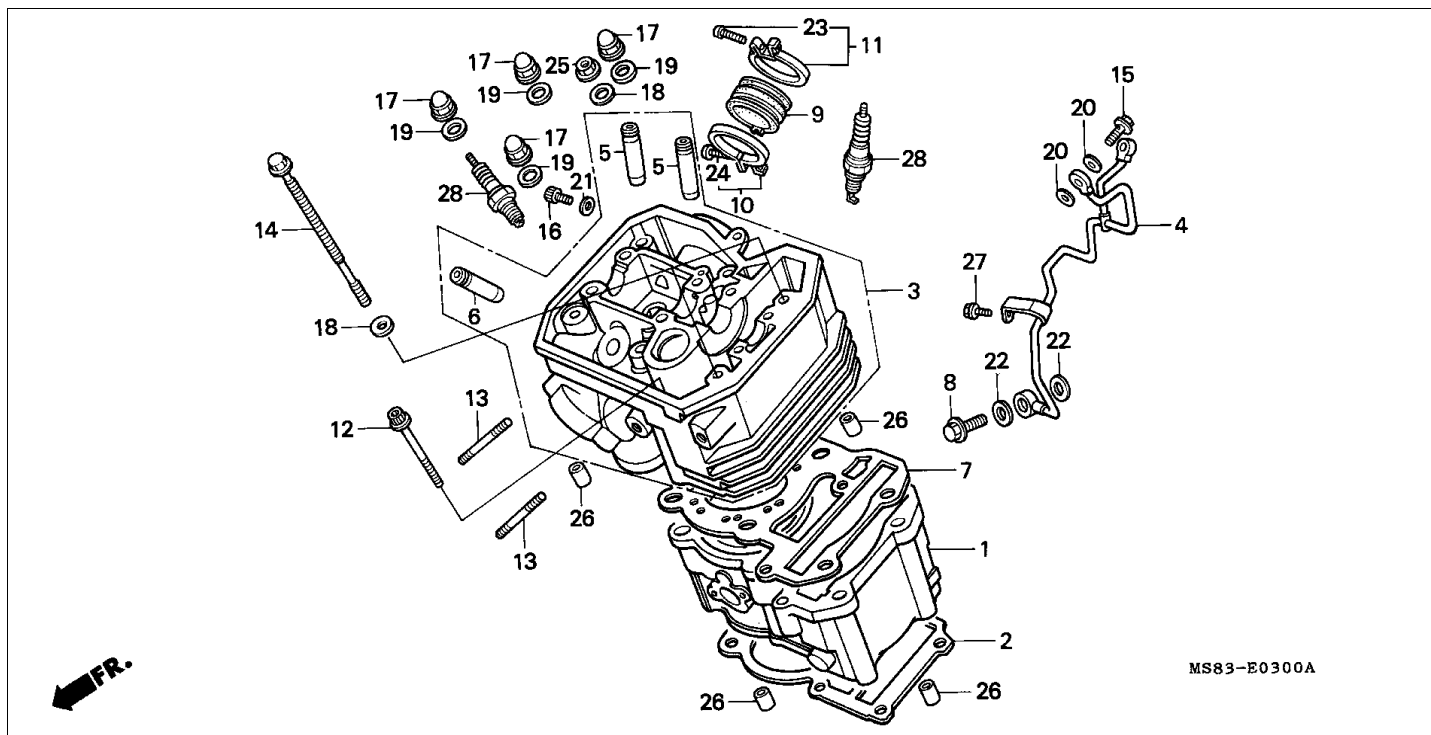

Block E-3 CYLINDER/CYLINDER HEAD (FRONT)


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	12100-MN8-000	CYLINDER COMP., FR.	001	0
2	12191-MN8-003	GASKET, CYLINDER	001	0
3	12210-MN8-000	HEAD COMP., FR. CYLINDER	001	0
4	12230-MR1-700	PIPE, OIL PASS	001	0
4	12230-MR1-020	PIPE, OIL PASS	001	0
5	12231-MF5-305	GUIDE, IN. VALVE (O.S.)	002	0
6	12241-MF5-315	GUIDE, EX. VALVE (O.S.)	001	0
7	12251-MN8-003	GASKET, CYLINDER HEAD	001	0
8	15532-KN8-730	BOLT, FLANGE, 8X30	001	0
9	16211-MS8-610	INSULATOR, CARBURETOR	001	0
10	16219-ME9-000	BAND, INSULATOR	001	0
10	16218-MN8-750	BAND A, INSULATOR	001	0
11	16219-MS8-000	BAND B, CARBURETOR INSULATOR	001	0
12	90094-MK4-600	BOLT, FLANGE SOCKET, 6X70	001	0
13	90015-MN8-000	BOLT, STUD, 8X22	002	0
14	90081-MM9-003	BOLT, CYLINDER, 8X187	002	0
15	90085-MF5-000	BOLT, SPECIAL, 7X26.5	002	0
16	90089-MN8-000	BOLT, SOCKET, 5X8	001	0
17	90202-329-000	NUT, FLANGE CAP, 10MM	004	0
18	90401-MR1-000	WASHER, 8MM	003	0
19	90410-HC4-000	WASHER, 10MM	004	0
20	90441-MC0-000	WASHER, SEALING, 7MM	004	0
21	90452-323-000	WASHER, SEALING, 5MM	001	0
22	90475-703-000	WASHER C, 8MM	002	0
23	93500-050220G	SCREW, PAN, 5X22	001	0
24	93500-050250G	SCREW, PAN, 5X25	001	0
25	94050-08080-	NUT, FLANGE, 8MM	001	0
26	94301-14200-	DOWEL PIN, 14X20	004	0
27	96001-0601400	BOLT, FLANGE, 6X14	001	0
28	98069-57916-	PLUG, SPARK (DPR7EA-9)(NGK)	(2)	0
28	98069-57926-	PLUG, SPARK (X22EPR-U9)(DENSO)	(2)	0
28	98069-58916-	PLUG, SPARK (DPR8EA-9)(NGK)	002	0
28	98069-58926-	PLUG, SPARK (X24EPR-U9)(DENSO)	002	0
28	98069-59916-	PLUG, SPARK (DPR9EA-9)(NGK)	(2)	0
28	98069-59926-	PLUG, SPARK (X27EPR-U9)(DENSO)	(2)	0

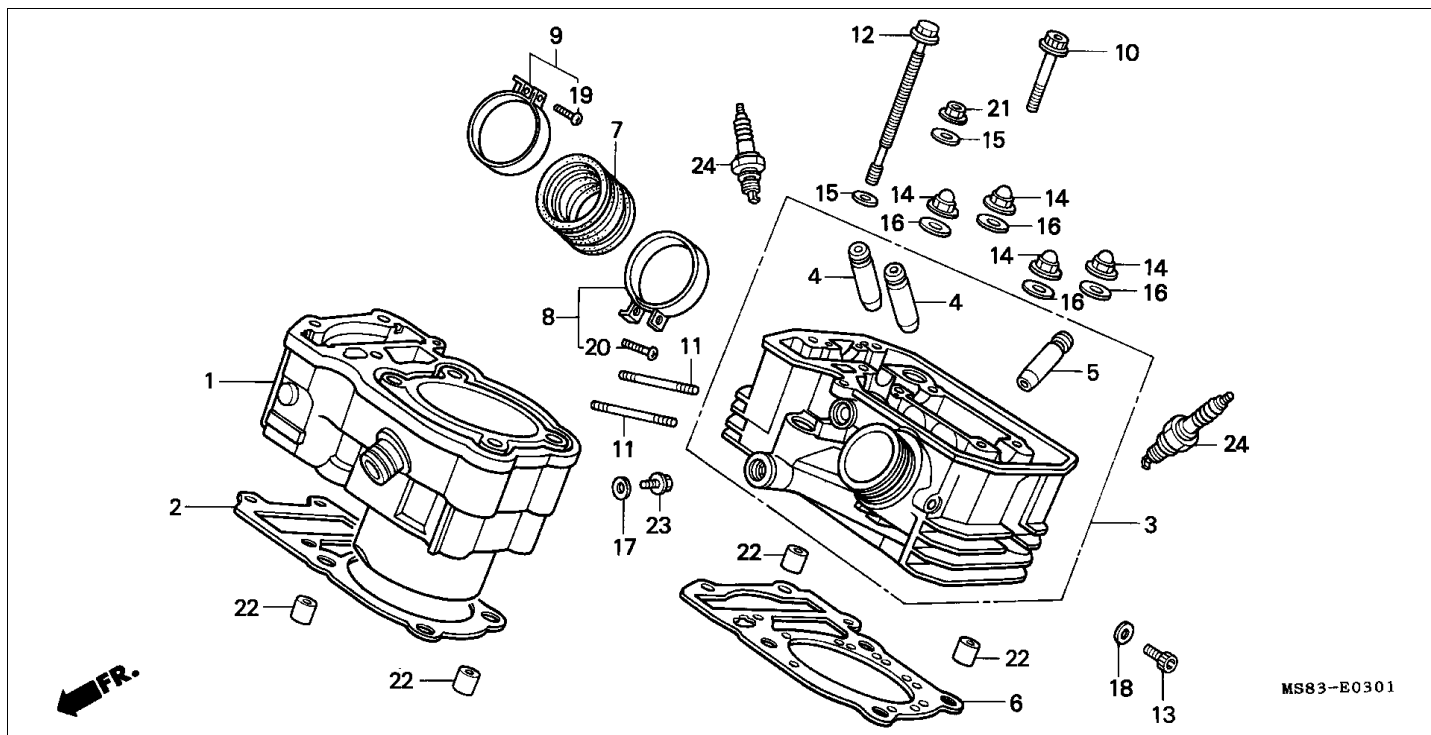

MS83-E0301


Block E-3-1 CYLINDER/CYLINDER HEAD (REAR)

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	12110-MN8-000	CYLINDER COMP., RR.	001	0
2	12191-MN8-003	GASKET, CYLINDER	001	0
3	12220-MN8-000	HEAD COMP., RR. CYLINDER	001	0
4	12231-MF5-305	GUIDE, IN. VALVE (O.S.)	002	0
5	12241-MF5-315	GUIDE, EX. VALVE (O.S.)	001	0
6	12251-MN8-003	GASKET, CYLINDER HEAD	001	0
7	16211-MS8-610	INSULATOR, CARBURETOR	001	0
8	16219-ME9-000	BAND, INSULATOR	001	0
9	16219-MS8-000	BAND B, CARBURETOR INSULATOR	001	0
10	90094-MK4-600	BOLT, FLANGE SOCKET, 6X70	001	0
11	90015-MN8-000	BOLT, STUD, 8X22	002	0
12	90081-MM9-003	BOLT, CYLINDER, 8X187	002	0
13	90089-MN8-000	BOLT, SOCKET, 5X8	001	0
14	90202-329-000	NUT, FLANGE CAP, 10MM	004	0
15	90401-MR1-000	WASHER, 8MM	003	0
16	90410-HC4-000	WASHER, 10MM	004	0
17	90441-706-000	WASHER, SEALING, 6MM	001	0
18	90452-323-000	WASHER, SEALING, 5MM	001	0
19	93500-050220G	SCREW, PAN, 5X22	001	0
20	93500-050250G	SCREW, PAN, 5X25	001	0
21	94050-08080-	NUT, FLANGE, 8MM	001	0
22	94301-14200-	DOWEL PIN, 14X20	004	0
23	95701-0601000	BOLT, FLANGE, 6X10	001	0
24	98069-57916-	PLUG, SPARK (DPR7EA-9)(NGK)	(2)	0
24	98069-57926-	PLUG, SPARK (X22EPR-U9)(DENSO)	(2)	0
24	98069-58916-	PLUG, SPARK (DPR8EA-9)(NGK)	002	0
24	98069-58926-	PLUG, SPARK (X24EPR-U9)(DENSO)	002	0
24	98069-59916-	PLUG, SPARK (DPR9EA-9)(NGK)	(2)	0
24	98069-59926-	PLUG, SPARK (X27EPR-U9)(DENSO)	(2)	0

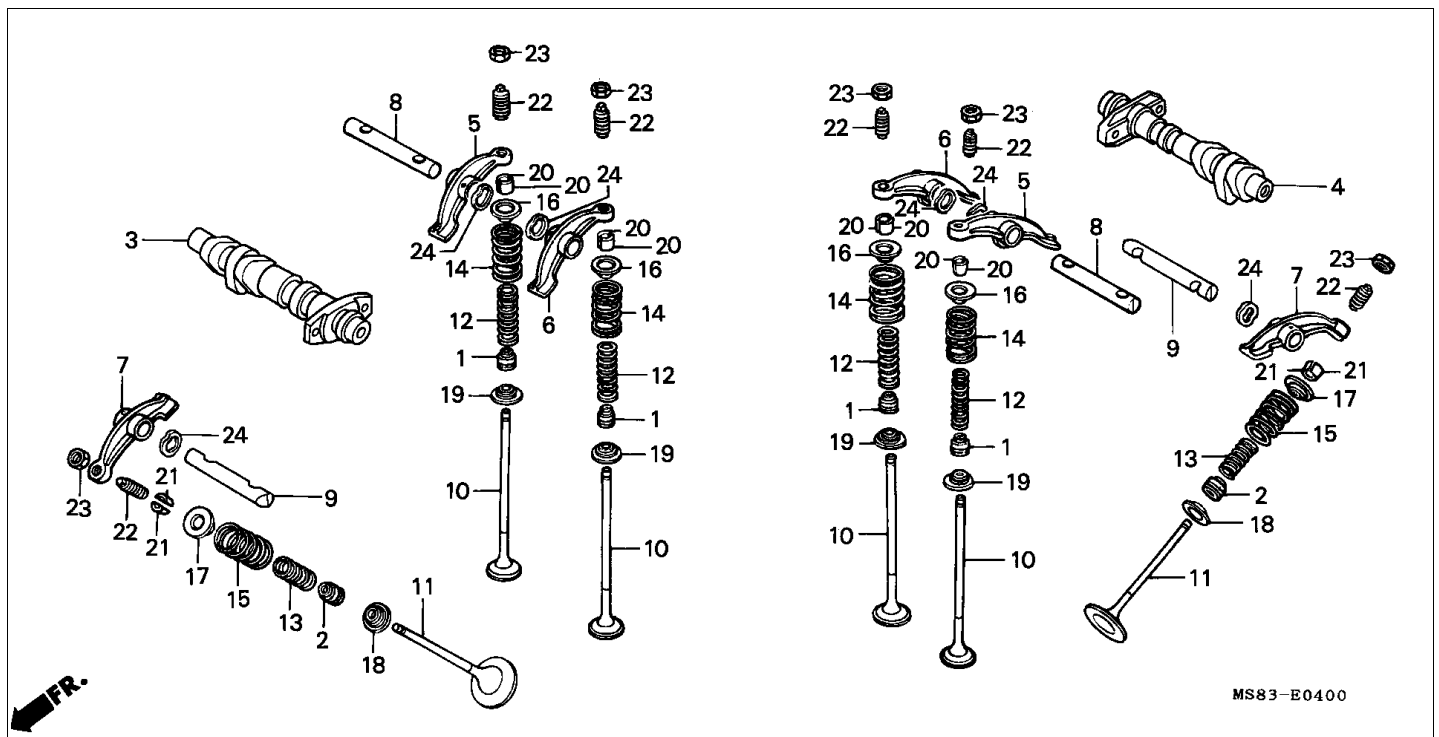


Block E-4 CAMSHAFT/VALVE

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	12208-413-003	SEAL, VALVE STEM (ARAI)	004	0
2	12209-413-003	SEAL, VALVE STEM (ARAI)	002	0
3	14110-MS8-000	CAMSHAFT COMP., FR.	001	0
4	14120-MS8-000	CAMSHAFT COMP., RR.	001	0
5	14421-MR1-000	ARM A, IN. ROCKER	002	0
6	14422-MR1-000	ARM B, IN. ROCKER	002	0
7	14431-MR1-000	ARM, EX. VALVE ROCKER	002	0
8	14441-MF5-000	SHAFT, IN. ROCKER ARM	002	0
9	14451-MF5-000	SHAFT, EX. ROCKER ARM	002	0
10	14711-MR1-000	VALVE, IN.	004	0
11	14721-MR1-000	VALVE, EX.	002	0
12	14751-MR1-003	SPRING, IN. VALVE INNER (CHUO HATSUJO)	004	0
13	14752-MR1-003	SPRING, EX. VALVE INNER (CHUO HATSUJO)	002	0
14	14761-MR1-003	SPRING, IN. VALVE OUTER (CHUO HATSUJO)	004	0
15	14762-MR1-003	SPRING, EX. VALVE OUTER (CHUO HATSUJO)	002	0
16	14771-MF5-000	RETAINER, IN. VALVE SPRING	004	0
17	14771-MR1-000	RETAINER, VALVE SPRING	002	0
18	14775-ME9-000	SEAT, VALVE SPRING	002	0
19	14775-MF5-000	SEAT, VALVE SPRING	004	0
20	14781-MB4-000	COTTER, VALVE	008	0
21	14781-MB9-000	COTTER, VALVE	004	0
22	90014-MF5-000	SCREW, TAPPET ADJUSTING	006	0
23	90206-590-000	NUT, TAPPET ADJUSTING	006	0
24	90402-428-000	WASHER, WAVE, 12MM	006	0

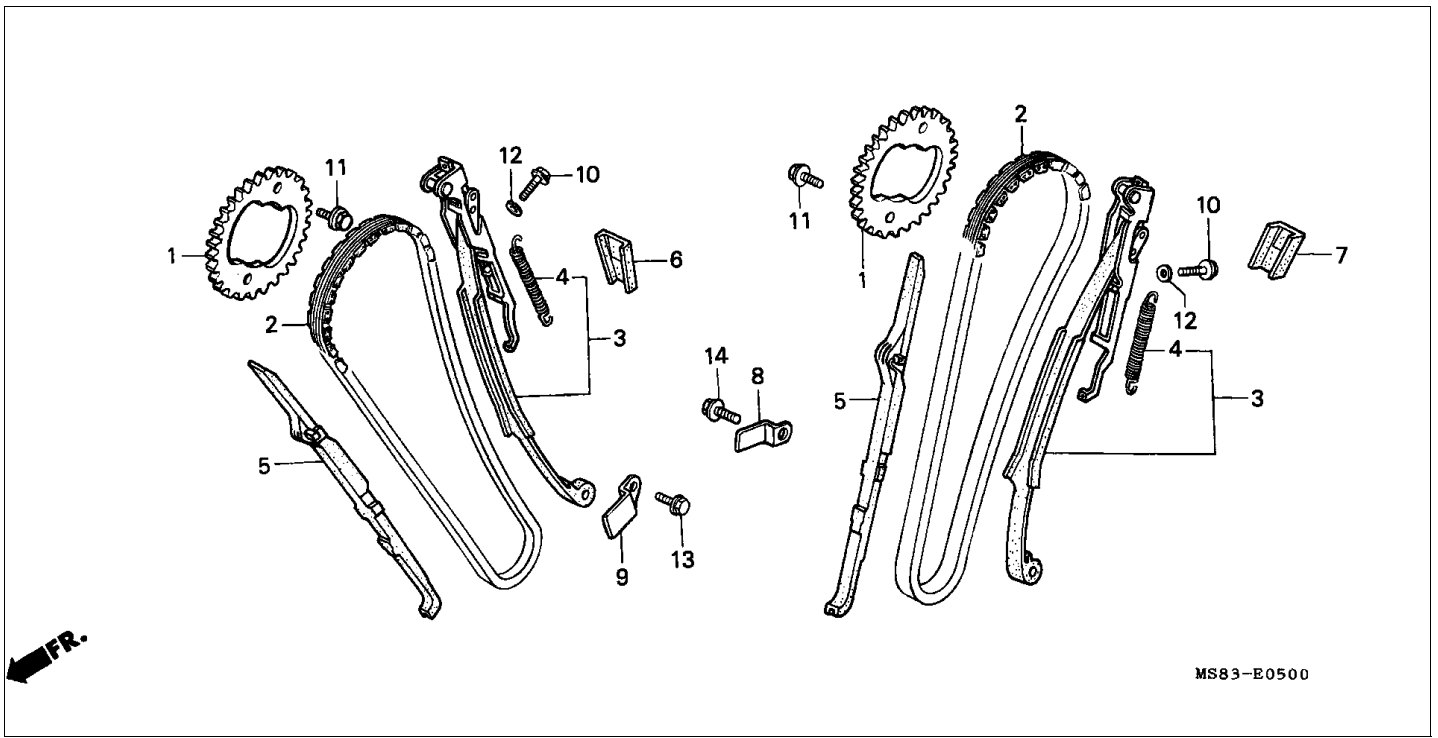


Block E-5 CAM CHAIN/TENSIONER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	14322-MR1-000	SPROCKET, CAM (40T)	002	0
2	14401-MN1-671	CHAIN, CAM (BORG WARNER)(118L)	002	0
3	14510-MR1-000	TENSIONER COMP., CAM CHAIN	002	0
4	14516-MG8-003	SPRING, CAM CHAIN TENSIONER (NIPPON HATSUJO)	002	0
5	14522-MR1-000	GUIDE, CAM CHAIN	002	0
6	14531-MN8-000	RUBBER, FR. CUSHION	001	0
7	14532-MN8-000	RUBBER, RR. CUSHION	001	0
8	14623-MF5-000	PLATE A, TENSIONER SETTING	001	0
9	14624-MF5-000	PLATE B, TENSIONER SETTING	001	0
10	90021-KE9-000	BOLT, SPECIAL, 6MM	004	0
11	90086-MF5-000	BOLT, FLANGE KNOCK, 7X13	004	0
12	90441-706-000	WASHER, SEALING, 6MM	004	0
13	95701-0601400	BOLT, FLANGE, 6X14	001	0
14	95701-0601600	BOLT, FLANGE, 6X16	001	0

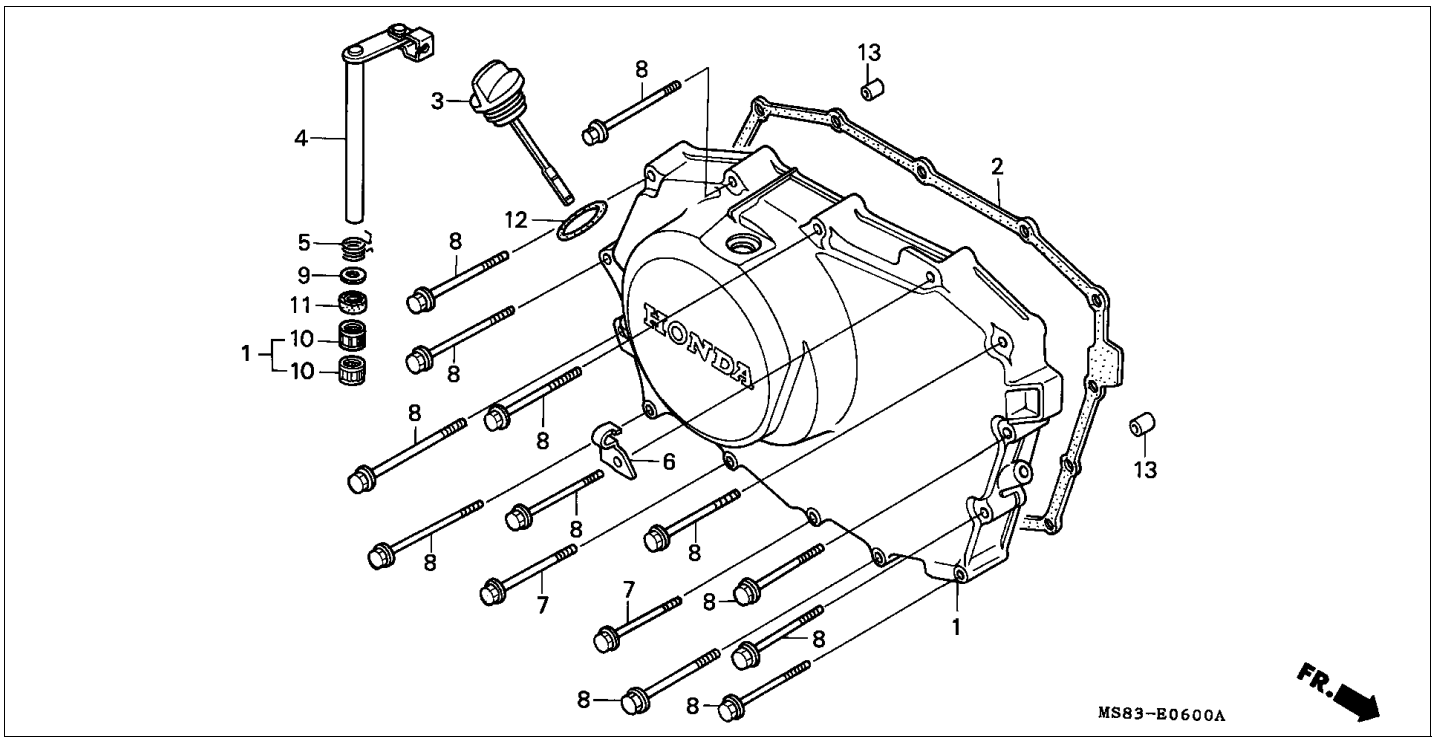

Block E-6 RIGHT CRANKCASE COVER


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	11330-MS8-000	COVER COMP., R. CRANKCASE	001	0
2	11394-MR1-000	GASKET, R. COVER	001	0
3	15650-MM9-000	GAUGE COMP., OIL LEVEL	001	0
4	22810-MS8-000	LEVER COMP., CLUTCH	001	0
5	22815-MS8-000	SPRING, CLUTCH LEVER	001	0
6	22825-MS8-000	RECEIVER, CLUTCH WIRE	001	0
7	90003-MS8-000	BOLT, FLANGE, 6X35	002	0
8	90004-MS8-000	BOLT, FLANGE, 6X45	012	0
9	90546-KF0-000	WASHER, 12MM	001	0
10	91053-719-003	BEARING, NEEDLE, 12X16X10 (TOMUSON)	002	0
10	91053-719-004	BEARING, NEEDLE, 12X16X10 (TOYO)	002	0
10	91053-719-005	BEARING, NEEDLE, 12X16X10 (NTN)	002	0
11	91204-KK0-003	OIL SEAL, 12X18X5 (ARAI)	001	0
12	91301-250-000	O-RING, 21.5MM	001	0
13	94301-08140-	DOWEL PIN, 8X14	002	0

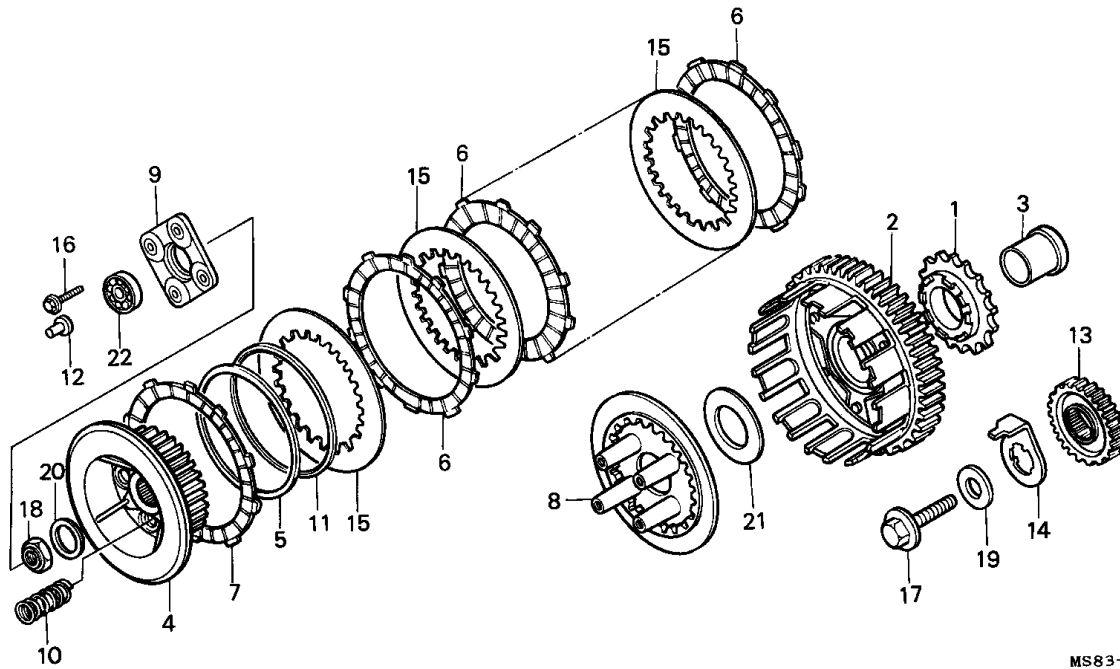

MS83-E0700


Block E-7 CLUTCH

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	15131-MR1-000	SPROCKET, OIL PUMP DRIVE (31T)	001	0
2	22100-MR1-000	OUTER COMP., CLUTCH	001	0
3	22116-MF5-000	COLLAR, PRIMARY DRIVEN	001	0
4	22120-MM9-010	CENTER COMP., CLUTCH	001	0
5	22125-MN8-000	SEAT, JUDDER SPRING	001	0
6	22201-MN8-000	DISK, CLUTCH FRICTION	007	0
6	22201-MN8-700	DISK, CLUTCH FRICTION	007	0
7	22201-302-010	DISK, CLUTCH FRICTION	001	0
8	22350-MR1-000	PLATE, CLUTCH PRESSURE	001	0
9	22361-MR1-000	PLATE, CLUTCH LIFTER	001	0
10	22401-MS8-000	SPRING, CLUTCH	004	0
11	22402-435-000	SPRING, JUDDER	001	0
12	22847-415-000	ROD, CLUTCH LIFTER	001	0
13	23103-MR1-010	GEAR, PRIMARY DRIVE (36T)	001	0
14	23105-MS8-000	PLATE, PULSER	001	0
15	23311-200-000	PLATE A, CLUTCH	007	0
15	22321-MN8-000	PLATE, CLUTCH	007	0
16	90007-MR1-000	BOLT, FLANGE SPECIAL, 6X30	004	0
17	90013-415-000	BOLT, UBS, 12X28	001	0
18	90236-MN8-000	NUT, LOCK, 18MM	001	0
19	90402-PC6-000	WASHER, 12.5X34X5	001	0
20	90432-MR1-000	WASHER, SPECIAL, 18MM	001	0
21	90452-471-000	WASHER, THRUST, 22MM	001	0
22	96100-6001000	BEARING, RADIAL BALL, 6001	001	0

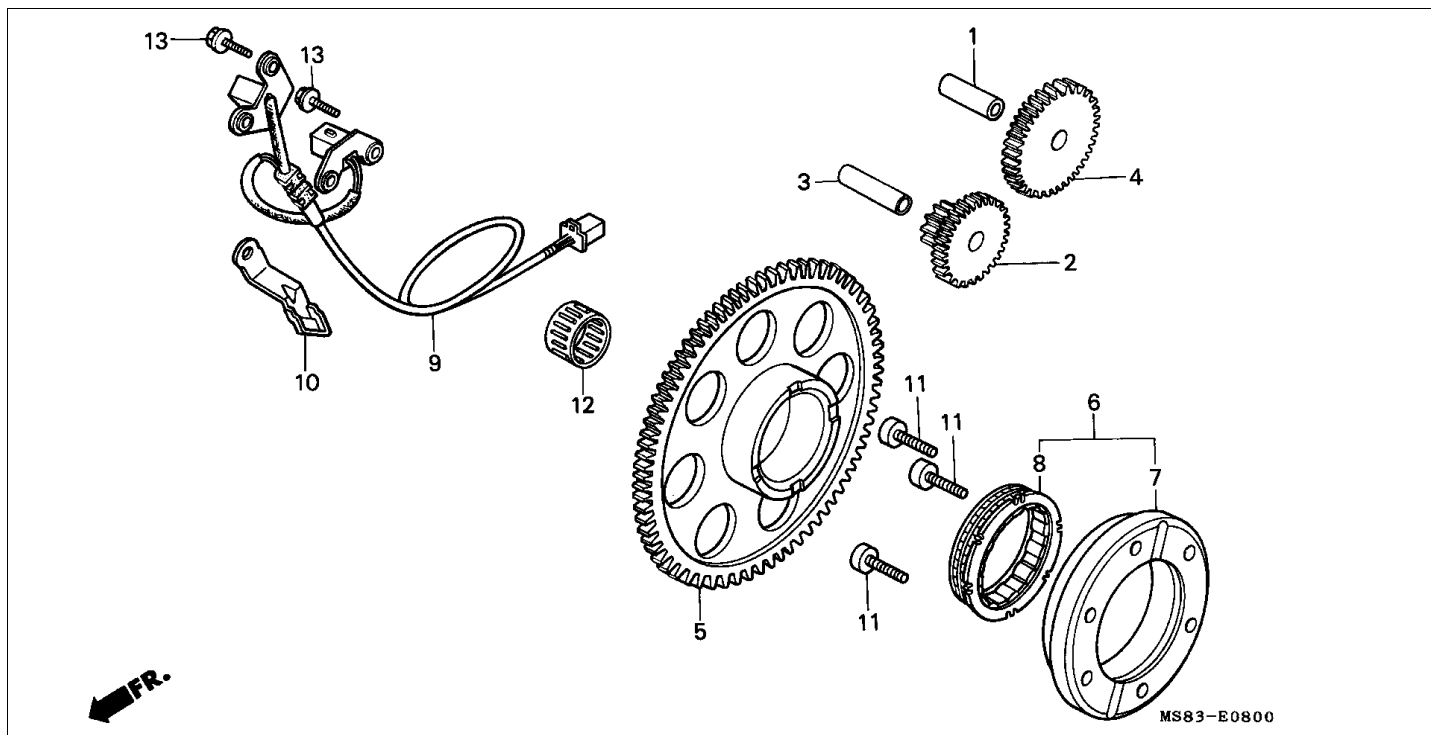


Block E-8 PULSE GENERATOR/ STARTING CLUTCH

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	13111-122-000	PIN, PISTON, 10X33	001	0
2	28101-MS8-000	GEAR, STARTER REDUCTION (38/12T)	001	0
3	28102-ME9-000	PIN, 10X44	001	0
4	28106-ME9-010	GEAR, STARTER (51T)	001	0
5	28110-MM9-000	GEAR COMP., STARTER DRIVEN (75T)	001	0
6	28120-MM9-003	OUTER ASSY., STARTING CLUTCH (BORG WARNER)	001	0
7	28121-MM9-000	OUTER, STARTING CLUTCH	001	0
8	28125-MK5-023	CLUTCH, ONE WAY	001	0
9	30300-MS8-000	GENERATOR ASSY., PULSE	001	0
10	32963-MM9-000	CLAMPER, PULSE	001	0
11	90010-KE5-000	BOLT, SOCKET, 8MM	006	0
12	91021-MF5-841	BEARING, NEEDLE, 30X37X20 (NTN)	001	0
13	95701-0602000	BOLT, FLANGE, 6X20	004	0

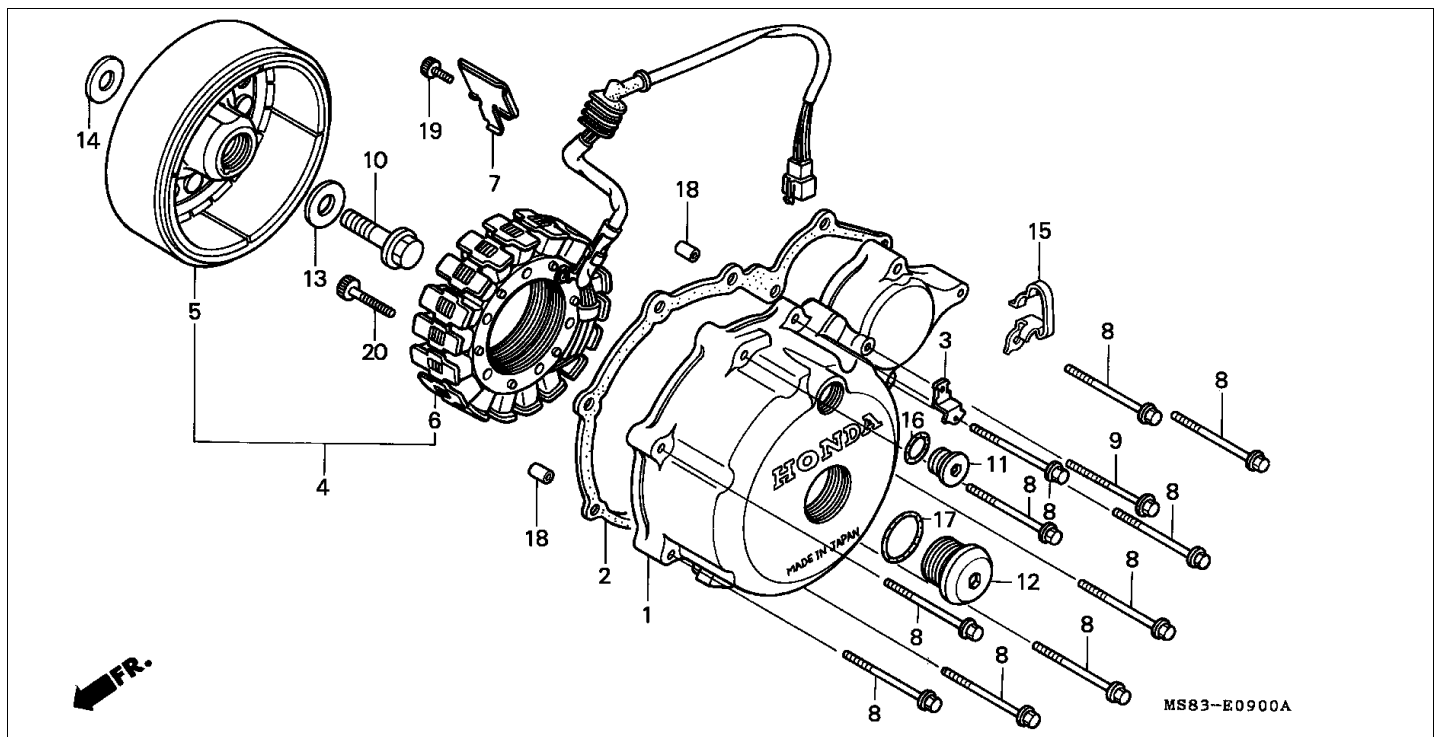


Block E-9 LEFT CRANKCASE COVER/ GENERATOR

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	11341-MS8-000	COVER, L. CRANKCASE	001	0
2	11395-MR1-000	GASKET, L. COVER	001	0
3	16712-MS8-000	STAY, FUEL STRAINER	001	0
4	31100-MS8-751	GENERATOR ASSY., FLYWHEEL TYPE A.C. (DENSO)	001	0
5	31110-MS8-751	FLYWHEEL COMP. (DENSO)	001	0
6	31120-MS8-751	STATOR COMP. (DENSO)	001	0
7	32961-MF5-000	CLAMPER, A.C. GENERATOR CORD	001	0
8	90003-MS8-000	BOLT, FLANGE, 6X35	010	0
9	90004-MS8-000	BOLT, FLANGE, 6X45	001	0
10	90025-MN8-000	BOLT, FLANGE, 12X48	001	0
11	90084-MM9-000	CAP, 14MM	001	0
12	90087-KT7-000	CAP, 30MM	001	0
13	90402-PC6-000	WASHER, 12.5X34X5	001	0
14	90453-MN8-750	WASHER, THRUST, 30X50X1	001	0
15	90601-MS8-000	CLIP, FUEL TUBE	001	0
16	91303-377-000	O-RING, 13.8X2.5	001	0
17	91356-425-003	O-RING, 30MM	001	0
18	94301-08140-	DOWEL PIN, 8X14	002	0
19	96700-0601200	BOLT, SOCKET, 6X12	001	0
20	90116-375-000	BOLT, SOCKET, 6X38	004	0

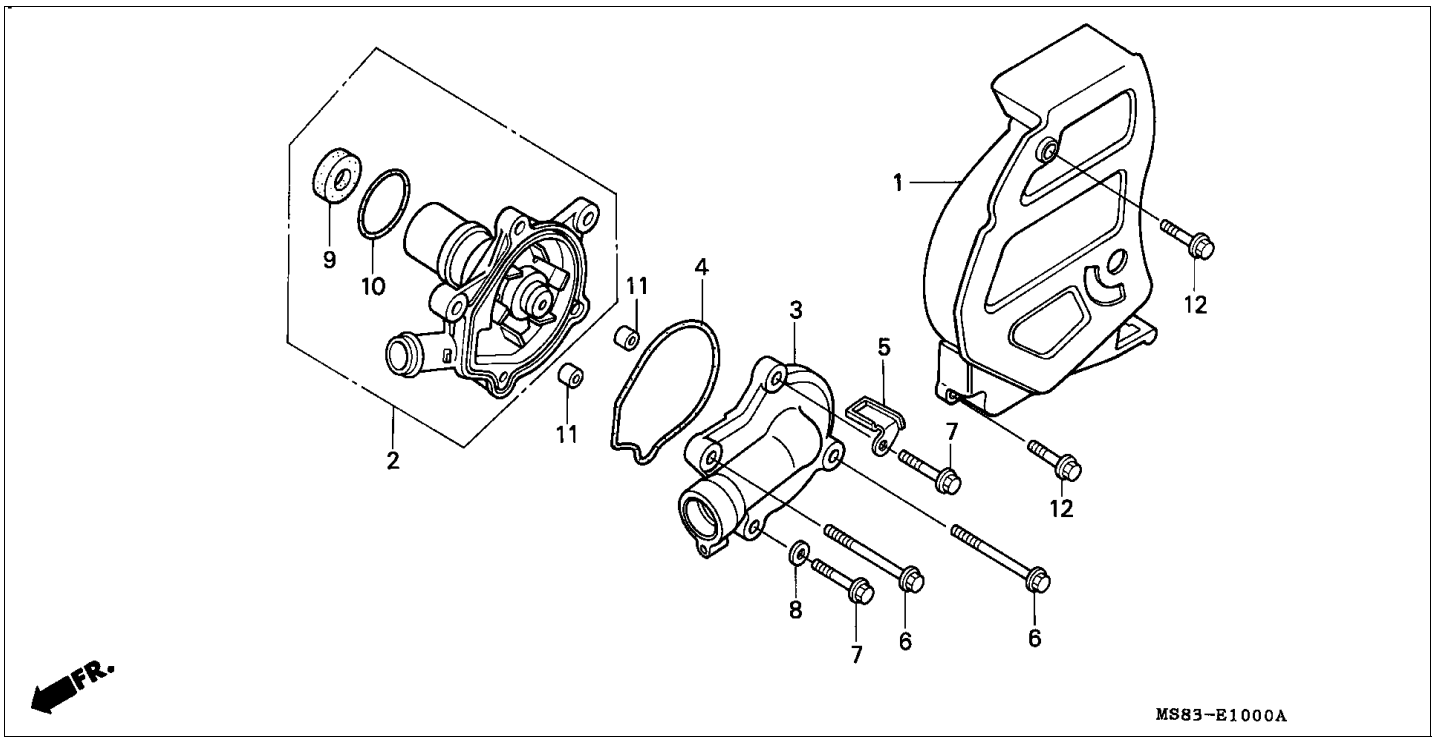

Block E-10 WATER PUMP


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	11351-MS8-621	COVER, L. RR. CRANKCASE	001	0
2	19200-MN8-000	PUMP COMP., WATER	001	0
3	19221-MN8-000	COVER, WATER PUMP	001	0
4	19226-MM9-000	GASKET, WATER PUMP COVER	001	0
5	32972-MS8-000	CLAMPER, OIL PRESSURE CORD	001	0
6	90022-MN8-000	BOLT, SPECIAL, 6X45	002	0
7	90023-MN8-000	BOLT, SPECIAL, 6X25	002	0
8	90425-300-000	WASHER, 11MM	001	0
9	91201-MF2-003	OIL SEAL, 12X28X7 (ARAI)	001	0
10	91302-MB0-013	O-RING, 32.95X2.62 (ARAI)	001	0
11	94301-08140-	DOWEL PIN, 8X14	002	0
12	96001-0602207	BOLT, FLANGE, 6X22	002	0

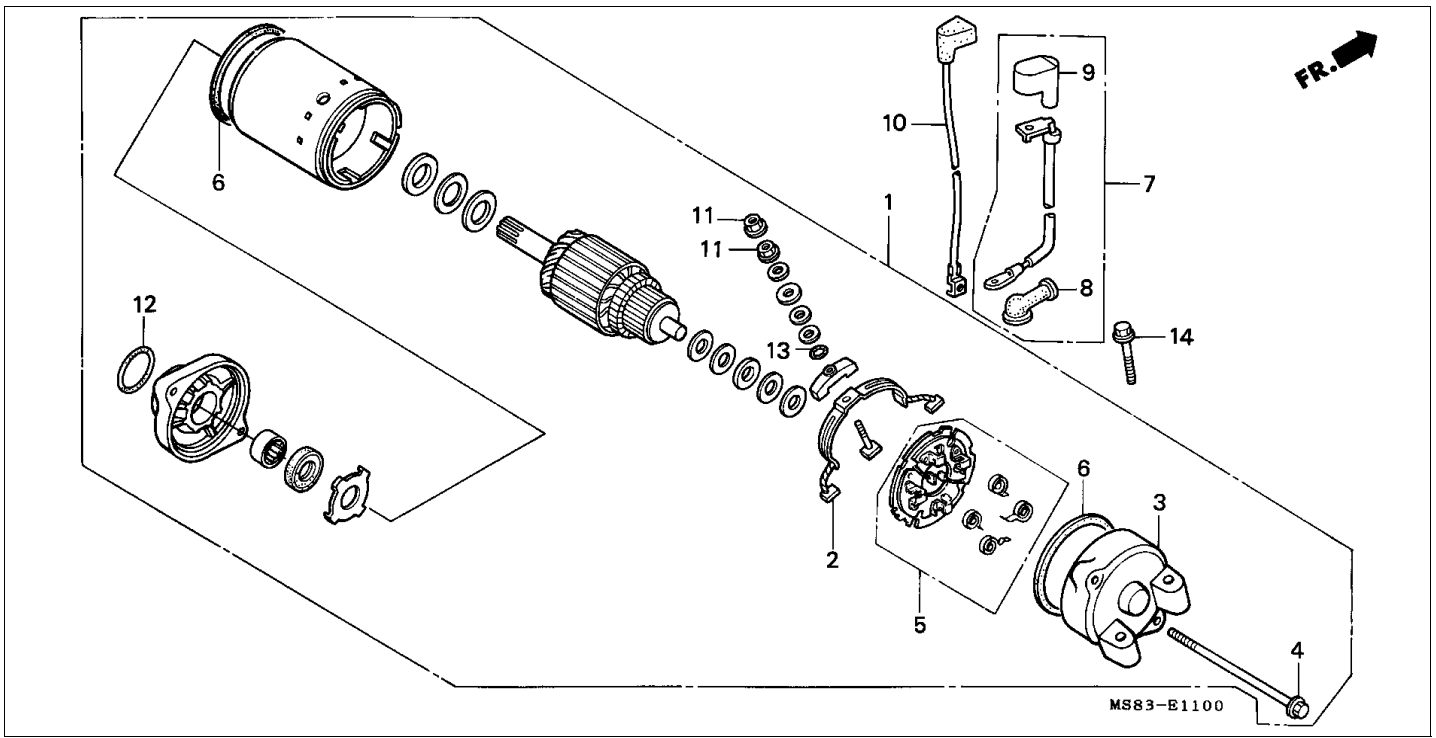

Block E-11 STARTING MOTOR

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	31200-MN8-008	MOTOR ASSY., STARTING	001	0
2	31201-MR6-008	TERMINAL SET, BRUSH	001	0
3	31203-MN8-008	BRACKET, RR.	001	0
4	31205-MR1-008	BOLT, SETTING	002	0
5	31206-MR6-008	HOLDER SET, BRUSH	001	0
6	31207-KS5-901	RING	002	0
7	32410-MM9-000	CABLE, STARTER MOTOR	001	0
8	32411-253-000	COVER, STARTER MOTOR TERMINAL	001	0
9	32414-MJ6-720	COVER A, MAGNETIC SWITCH	001	0
10	32601-MS8-000	CABLE, BATTERY EARTH	001	0
11	90071-MB0-000	NUT-WASHER, 6MM	002	0
12	91309-425-003	O-RING, 24.4X3.1 (ARAI)	001	0
13	91320-MB0-000	O-RING	001	0
14	96001-0603200	BOLT, FLANGE, 6X32	002	0


FR. 

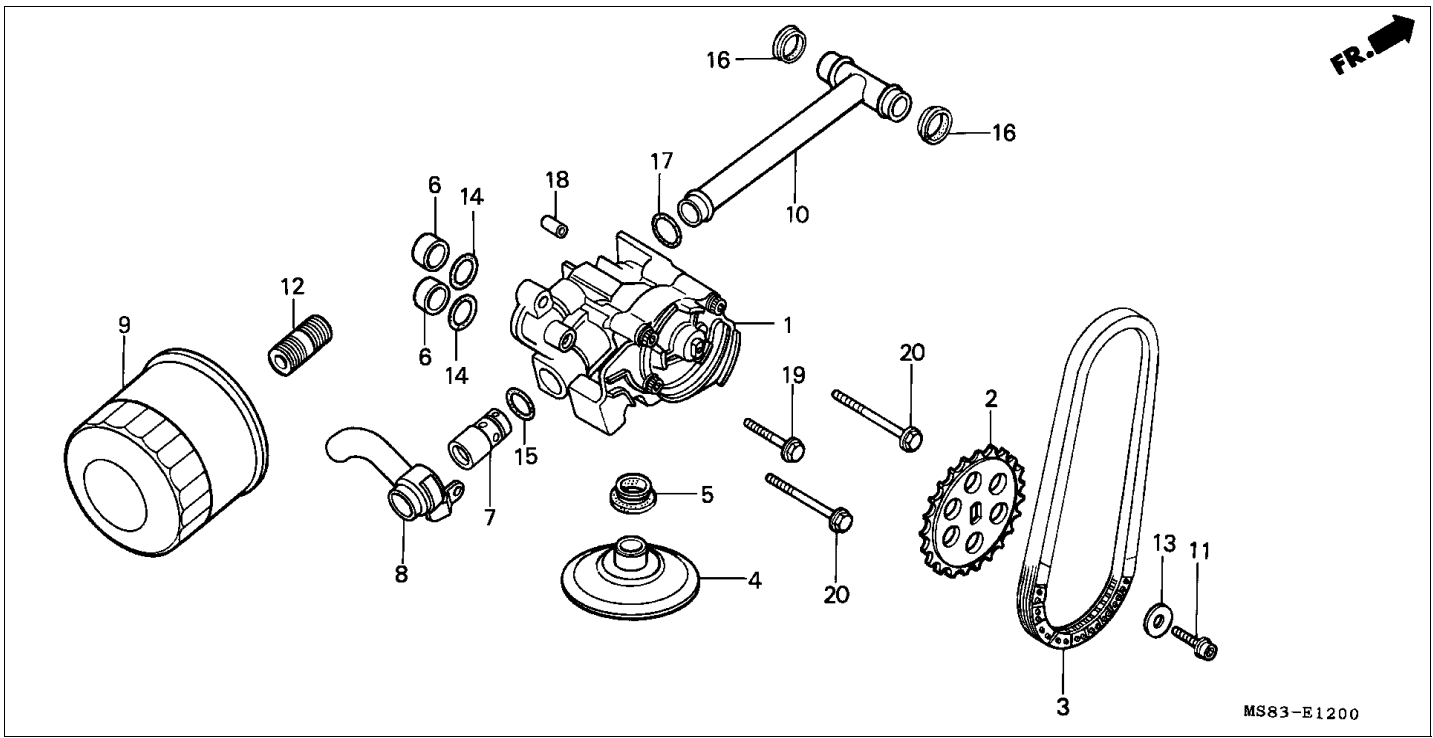

MS83-E1200


Block E-12 OIL PUMP/OIL FILTER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	15100-MR1-000	PUMP ASSY., OIL	001	0
2	15134-MR1-000	SPROCKET, OIL PUMP DRIVEN (27T)	001	0
3	15136-MR1-003	CHAIN, OIL PUMP DRIVE (70L) (BORG WARNER)	001	0
4	15153-MR1-000	STRAINER, OIL	001	0
5	15154-425-000	GASKET, OIL STRAINER	001	0
6	15155-300-000	COLLAR, O-RING	002	0
7	15220-MB0-010	VALVE ASSY., RELIEF	001	0
8	15240-MM9-000	PIPE, OIL RELIEF	001	0
9	15410-MM9-003	CARTRIDGE, OIL FILTER (TOYO ROKI)	001	0
10	15511-MF5-000	PIPE, OIL	001	0
11	90009-ME5-000	BOLT, FLANGE SOCKET, 6X14	001	0
12	90019-MB0-000	BOSS, OIL FILTER	001	0
13	90487-MB0-000	WASHER, SHIFT DRUM STOPPER	001	0
14	91303-KF0-003	O-RING, 14.8X2.4 (ARAI)	002	0
15	91313-MB0-003	O-RING, 14.7X2.2 (ARAI)	001	0
16	91315-MF5-003	SEAL, OIL PIPE	002	0
17	91319-300-000	O-RING, 13X2.5	001	0
18	94301-08140-	DOWEL PIN, 8X14	001	0
19	95701-0602800	BOLT, FLANGE, 6X28	001	0
20	95701-0604500	BOLT, FLANGE, 6X45	002	0

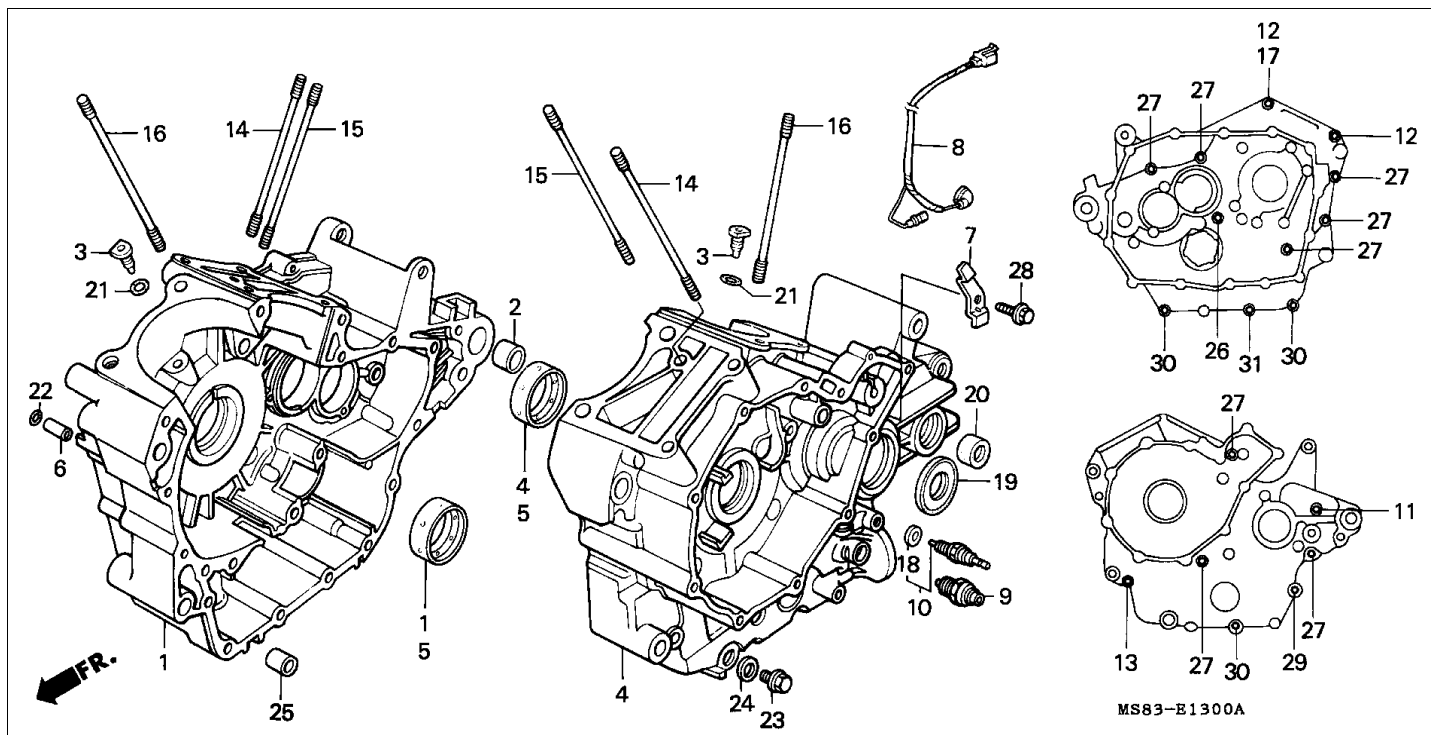


Block E-13 CRANKCASE

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	11100-MN8-010	CRANKCASE COMP., R.	001	0
1	11100-MN8-020	CRANKCASE COMP., R.	001	0
2	11105-MM9-000	COLLAR, 23X20	001	0
3	11146-MN8-000	JET, OIL	002	0
4	11200-MN8-000	CRANKCASE COMP., L.	001	0
5	13325-MM9-305	BEARING A, MAIN (BLUE)	002	0
5	13326-MM9-305	BEARING B, MAIN (BLACK)	002	0
5	13327-MM9-305	BEARING C, MAIN (BROWN)	002	0
6	15515-MM9-000	ORIFICE, 1.6	001	0
7	23531-MN8-000	PLATE, OIL SEAL SETTING	001	0
8	32101-MS8-000	SUB HARNESS	001	0
9	35500-MJ4-014	SWITCH ASSY., OIL PRESSURE (DENSO)	001	0
10	35600-425-023	SWITCH ASSY., NEUTRAL	001	0
11	90001-MM9-000	BOLT, SOCKET, 8X125	001	0
12	90002-MM9-000	BOLT, FLANGE, 8X140	002	0
13	90008-KE9-000	BOLT, FLANGE, 8X70	001	0
14	90011-MM9-000	BOLT, STUD, 8X197	002	0
15	90012-MR1-000	BOLT, STUD, 10X193.5	002	0
16	90013-MR1-000	BOLT, STUD, 10X197	006	0
17	90441-ME9-000	WASHER, SEALING, 8MM	001	0
18	90443-KR0-000	WASHER, NEUTRAL SWITCH	001	0
19	91201-MM9-003	OIL SEAL, 25X45X7	001	0
20	91204-425-003	OIL SEAL, 12.5X25X8 (ARAI)	001	0
21	91305-MG7-003	O-RING, 5X1.7 (ARAI)	002	0
22	91313-393-003	O-RING, 7.8X2.2 (ARAI)	001	0
22	91303-428-003	O-RING, 7.7X2.5	001	0
23	92800-14000-	BOLT, DRAIN PLUG, 14MM	001	0
24	94109-14000-	WASHER, DRAIN PLUG, 14MM	001	0
25	94301-14200-	DOWEL PIN, 14X20	001	0
26	95701-0806500	BOLT, FLANGE, 8X65	001	0
27	95701-0808000	BOLT, FLANGE, 8X80	008	0
28	96001-0601400	BOLT, FLANGE, 6X14	001	0
29	96001-0604000	BOLT, FLANGE, 6X40	001	0
30	96001-0605000	BOLT, FLANGE, 6X50	003	0
31	96001-0608000	BOLT, FLANGE, 6X80	001	0

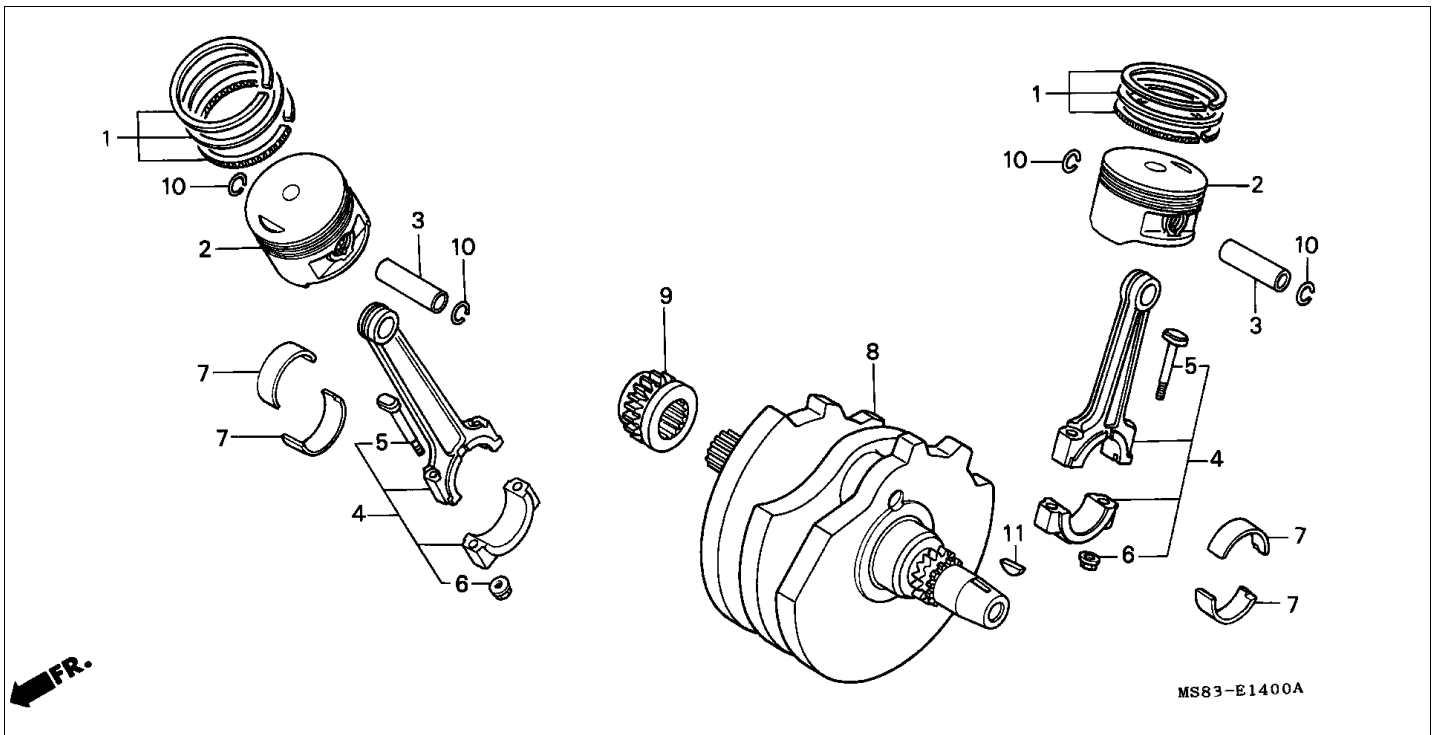


Block E-14 CRANKSHAFT/PISTON

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	13011-MN8-305	RING SET, PISTON (STD.)(RIKEN)	002	0
1	13012-MN8-305	RING SET, PISTON (0.25)(RIKEN)	(2)	0
1	13013-MN8-305	RING SET, PISTON (0.50)(RIKEN)	(2)	0
2	13101-MN8-000	PISTON (STD.)	002	0
2	13102-MN8-305	PISTON (0.25)	(2)	0
2	13103-MN8-305	PISTON (0.50)	(2)	0
3	13111-ME9-000	PIN, PISTON	002	0
4	13201-MN8-000	ROD ASSY. A, CONNECTING	002	0
4	13202-MN8-000	ROD ASSY. B, CONNECTING	002	0
4	13203-MN8-000	ROD ASSY. C, CONNECTING	002	0
4	13204-MN8-000	ROD ASSY. D, CONNECTING	002	0
5	13213-463-003	BOLT, CONNECTING ROD (NAGOYA RASHI)	004	0
5	13213-463-004	BOLT, CONNECTING ROD (TOKAI)	004	0
6	13215-ML7-000	NUT, CONNECTING ROD	004	0
7	13216-MF5-003	BEARING A, CONNECTING ROD (BLUE)	004	0
7	13217-MF5-003	BEARING B, CONNECTING ROD (BLACK)	004	0
7	13218-MF5-003	BEARING C, CONNECTING ROD (BROWN)	004	0
8	13300-MN8-000	CRANKSHAFT COMP.	001	0
9	14311-MR1-000	SPROCKET, CAM CHAIN DRIVE (20T)	001	0
10	90601-KA5-000	CLIP, PISTON PIN, 1.2X20	004	0
11	90741-413-000	KEY, WOODRUFF, 25X14	001	0

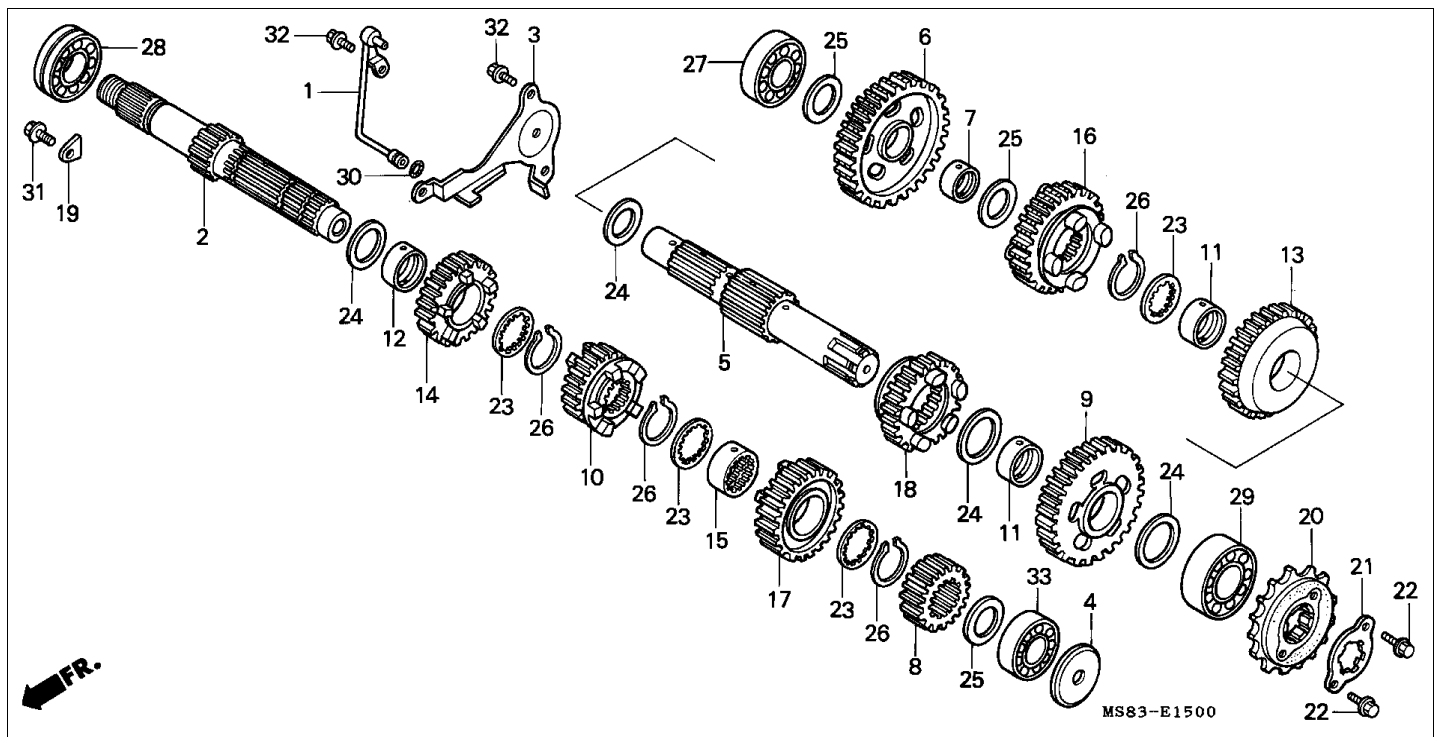


Block E-15 TRANSMISSION

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	15520-MM9-000	PIPE COMP., TRANSMISSION FEED OIL	001	0
1	15520-MS6-000	PIPE COMP., OIL FEED	001	0
2	23210-MS8-000	MAINSHAFT COMP. (13T)	001	0
3	23212-MM9-000	PLATE, BEARING SETTING	001	0
4	23219-MF5-000	PLATE, OIL GUIDE	001	0
5	23220-KW9-000	COUNTERSHAFT	001	0
6	23421-MS8-000	GEAR, COUNTERSHAFT LOW (36T)	001	0
7	23422-MB0-010	COLLAR, 20X11.8	001	0
8	23431-MN8-000	GEAR, MAINSHAFT SECOND (17T)	001	0
9	23441-MN8-000	GEAR, COUNTERSHAFT SECOND (32T)	001	0
10	23451-MS8-000	GEAR, MAINSHAFT THIRD (20T)	001	0
11	23455-HA7-670	BUSH, COUNTERSHAFT THIRD	002	0
12	23455-MM9-000	BUSH, 25X28X15	001	0
13	23461-MS8-010	GEAR, COUNTERSHAFT THIRD (29T)	001	0
14	23471-MS8-000	GEAR, MAINSHAFT FOURTH (23T)	001	0
15	23472-MR1-000	COLLAR, SPLINE, 25X28X15	001	0
16	23481-MS8-000	GEAR, COUNTERSHAFT FOURTH (27T)	001	0
17	23491-MS8-000	GEAR, MAINSHAFT FIFTH (29T)	001	0
18	23501-MS8-000	GEAR, COUNTERSHAFT FIFTH (28T)	001	0
19	23521-MM9-000	PLATE, BEARING SETTING	001	0
20	23801-MN8-000	SPROCKET, DRIVE (16T)	001	0
21	23811-MN8-000	PLATE, FIXING	001	0
22	90118-958-003	BOLT, FLANGE, 6X12	002	0
23	90451-KY2-000	WASHER, SPLINE, 25X31X1.5	004	0
24	90456-MA6-000	WASHER, THRUST, 25MM	004	0
25	90554-700-000	WASHER, THRUST, 20MM	003	0
26	90601-107-000	CIRCLIP, 25MM	004	0
27	91003-MG2-791	BEARING, RADIAL BALL, 6204U (TOYO)	001	0
27	91003-MG2-792	BEARING, RADIAL BALL, 6204U (KOYO)	001	0
28	91007-393-003	BEARING, RADIAL BALL, 6322	001	0
29	91014-969-003	BEARING, RADIAL BALL, 5205 (NTN)	001	0
30	91318-ME5-003	O-RING, 5.6X1.9 (ARAI)	001	0
31	95701-0601200	BOLT, FLANGE, 6X12	001	0
32	95701-0601600	BOLT, FLANGE, 6X16	002	0
33	96100-6204000	BEARING, RADIAL BALL, 6204	001	0

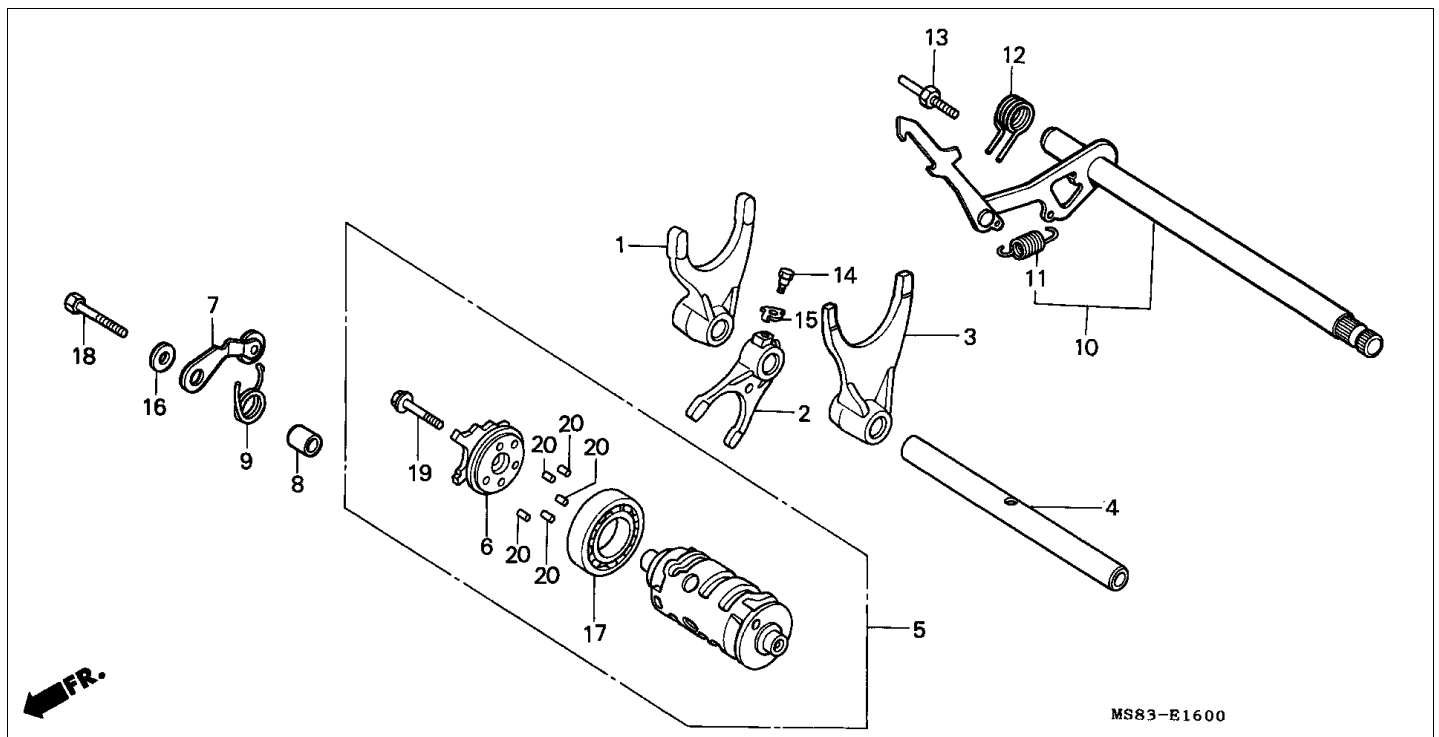


Block E-16 GEARSHIFT DRUM

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	24211-MS9-000	FORK, R. GEARSHIFT	001	0
2	24212-MR1-000	FORK, CENTER GEARSHIFT	001	0
2	24212-MS9-750	FORK, CENTER GEARSHIFT	001	0
3	24213-MN8-000	FORK, L. GEARSHIFT	001	0
4	24241-MM9-000	SHAFT, SHIFT FORK GUIDE	001	0
5	24300-MS8-000	DRUM COMP., GEARSHIFT	001	0
6	24301-MS8-000	PLATE COMP., CAM	001	0
7	24430-MS8-000	STOPPER COMP., DRUM	001	0
8	24432-413-000	COLLAR, GEARSHIFT DRUM STOPPER	001	0
9	24435-MM9-000	SPRING, SHIFT DRUM STOPPER	001	0
10	24610-MM9-000	ARM COMP., GEARSHIFT	001	0
11	24641-216-000	SPRING, GEARSHIFT ARM	001	0
12	24651-MB0-000	SPRING, GEARSHIFT RETURN	001	0
13	24652-259-000	PIN, SHIFT RETURN SPRING	001	0
14	90041-MB0-000	BOLT, SPECIAL, 7X18	001	0
15	90407-MB0-000	WASHER, LOCK	001	0
16	90488-MB0-000	WASHER, 6X2.3	001	0
17	91008-374-003	BEARING, BALL, 16005 (NTN)	001	0
18	92000-06025-	BOLT, HEX., 6X25	001	0
19	95701-0601800	BOLT, FLANGE, 6X18	001	0
20	96220-40118-	ROLLER, 4X11.8	005	0

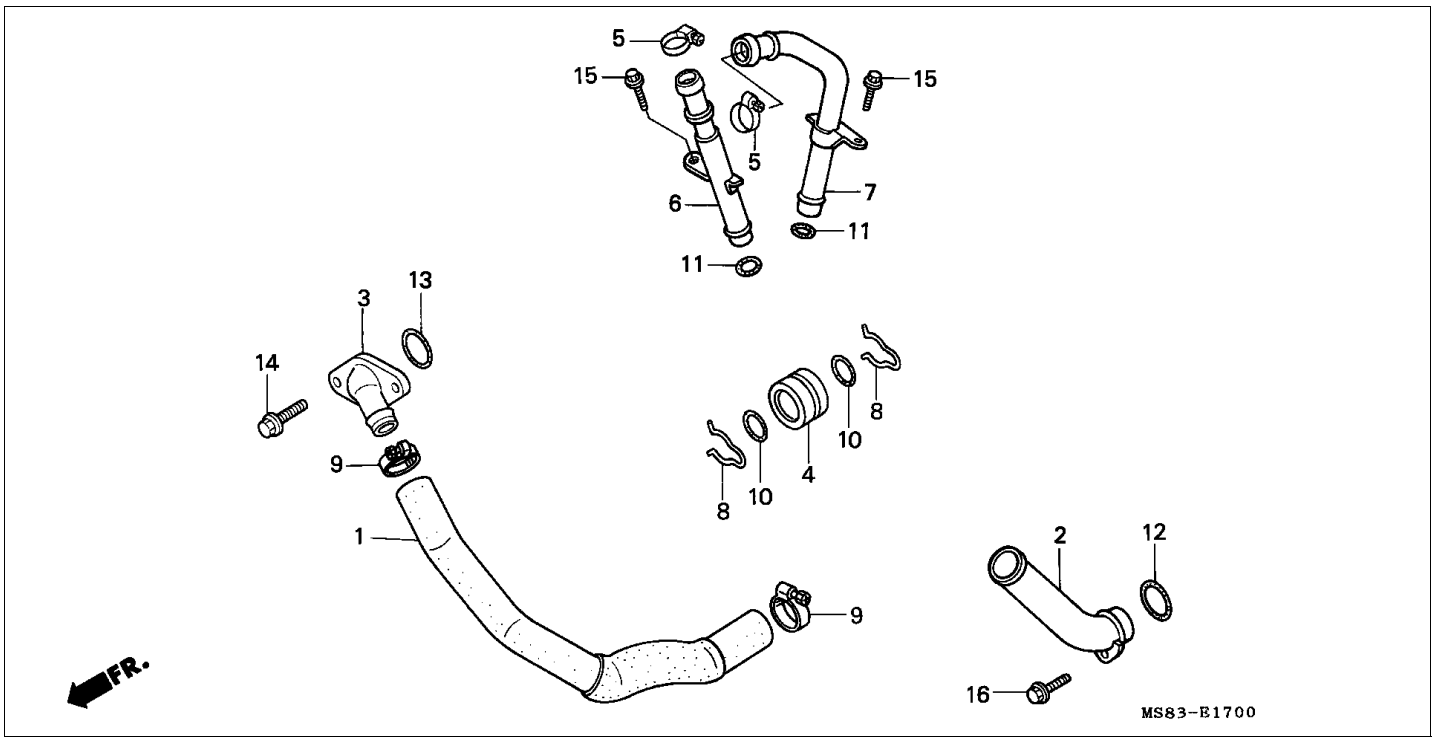


Block E-17 WATER PIPE

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	19501-MR1-000	HOSE, MAIN WATER	001	0
2	19502-MS8-000	PIPE, IN. WATER	001	0
3	19503-MR1-000	JOINT, WATER HOSE	001	0
4	19505-MR1-000	JOINT, WATER	001	0
5	19506-KS6-700	CLAMP B, WATER HOSE	002	0
6	19511-MS8-010	PIPE, FR. OUTLET WATER	001	0
7	19512-MS8-000	PIPE, RR. OUTLET WATER	001	0
8	90601-MR1-000	CLIP, RING, 18MM	002	0
9	90702-MF5-003	CLAMP, WATER HOSE (27MM)	002	0
9	19505-ML3-770	CLAMPER, WATER HOSE	002	0
10	91306-KK4-003	O-RING, 18X2.6 (ARAI)	002	0
11	91315-MN8-000	SEAL, WATER PIPE, 16MM	002	0
12	91316-MN8-000	SEAL, WATER PIPE, 28MM	001	0
13	91356-169-003	O-RING	001	0
14	95701-0602000	BOLT, FLANGE, 6X20	002	0
15	96001-0601200	BOLT, FLANGE, 6X12	002	0
16	96001-0601600	BOLT, FLANGE, 6X16	001	0

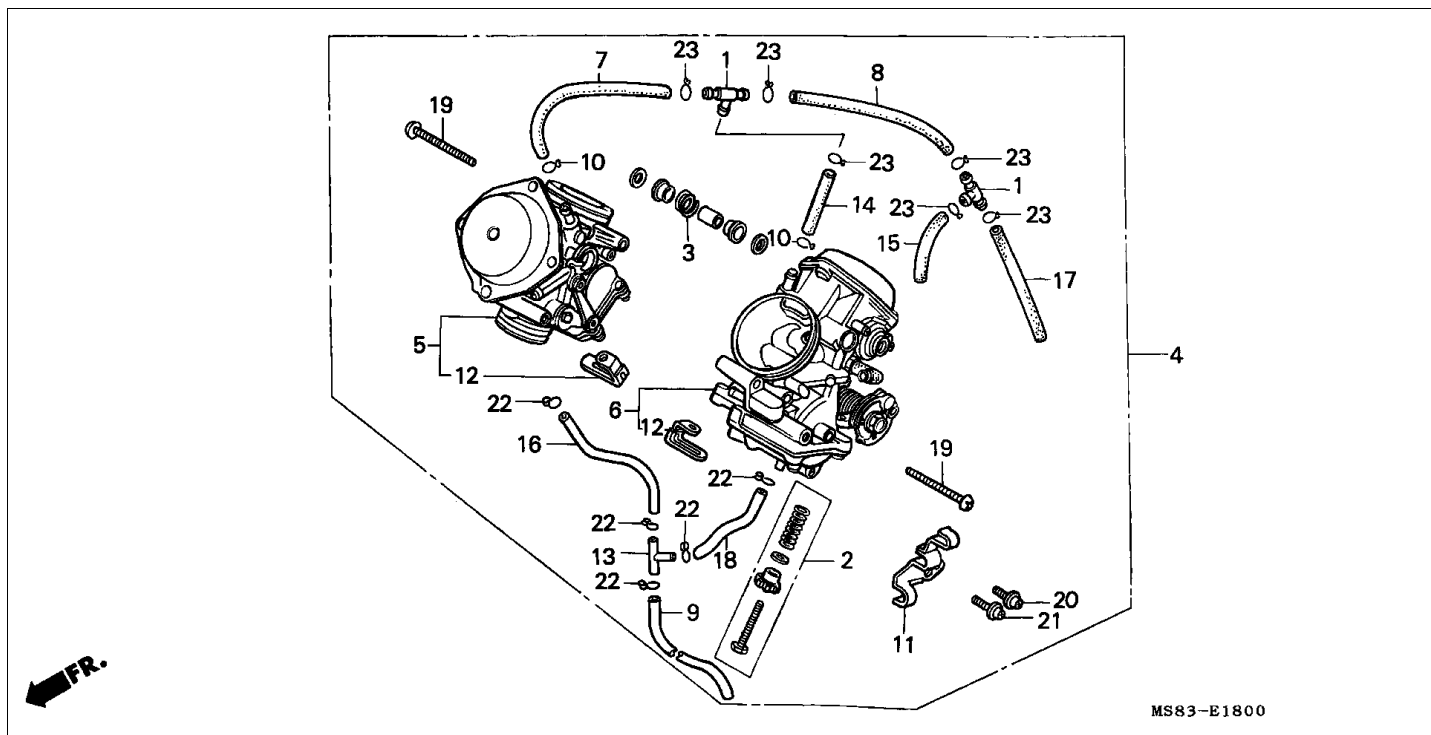


Block E-18 CARBURETOR (ASSY.)

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	16026-MF5-671	T-JOINT	002	0
2	16028-ME9-671	SCREW SET B	001	0
3	16053-ME9-672	SPRING	001	0
4	16100-MS8-622	CARBURETOR ASSY. (VDF4B B)	001	0
5	16101-MS8-622	CARBURETOR ASSY., R. FR.	001	0
6	16102-MS8-622	CARBURETOR ASSY., L. RR.	001	0
7	16143-MF5-671	PIPE, AIR VENT	001	0
8	16143-MM9-621	TUBE	001	0
9	16144-MS8-004	TUBE	001	0
10	16163-KM4-004	CLIP, TUBE	002	0
11	16169-MM9-621	STAY COMP., WIRE	001	0
12	16179-MM9-621	CLIP, PLATE	002	0
13	16180-195-731	T-JOINT	001	0
14	16198-MF5-671	PIPE, AIR VENT	001	0
15	16198-MM9-621	TUBE	001	0
16	16198-MS8-004	TUBE	001	0
17	16199-MM9-621	TUBE	001	0
18	16199-MS8-004	TUBE	001	0
19	93500-050400H	SCREW, PAN, 5X40	002	0
20	93892-0400800	SCREW-WASHER, 4X8	001	0
21	93892-0501200	SCREW-WASHER, 5X12	001	0
22	95002-02070-	CLIP, TUBE (B7)	005	0
23	95002-02100-	CLIP, TUBE (B10)	006	0

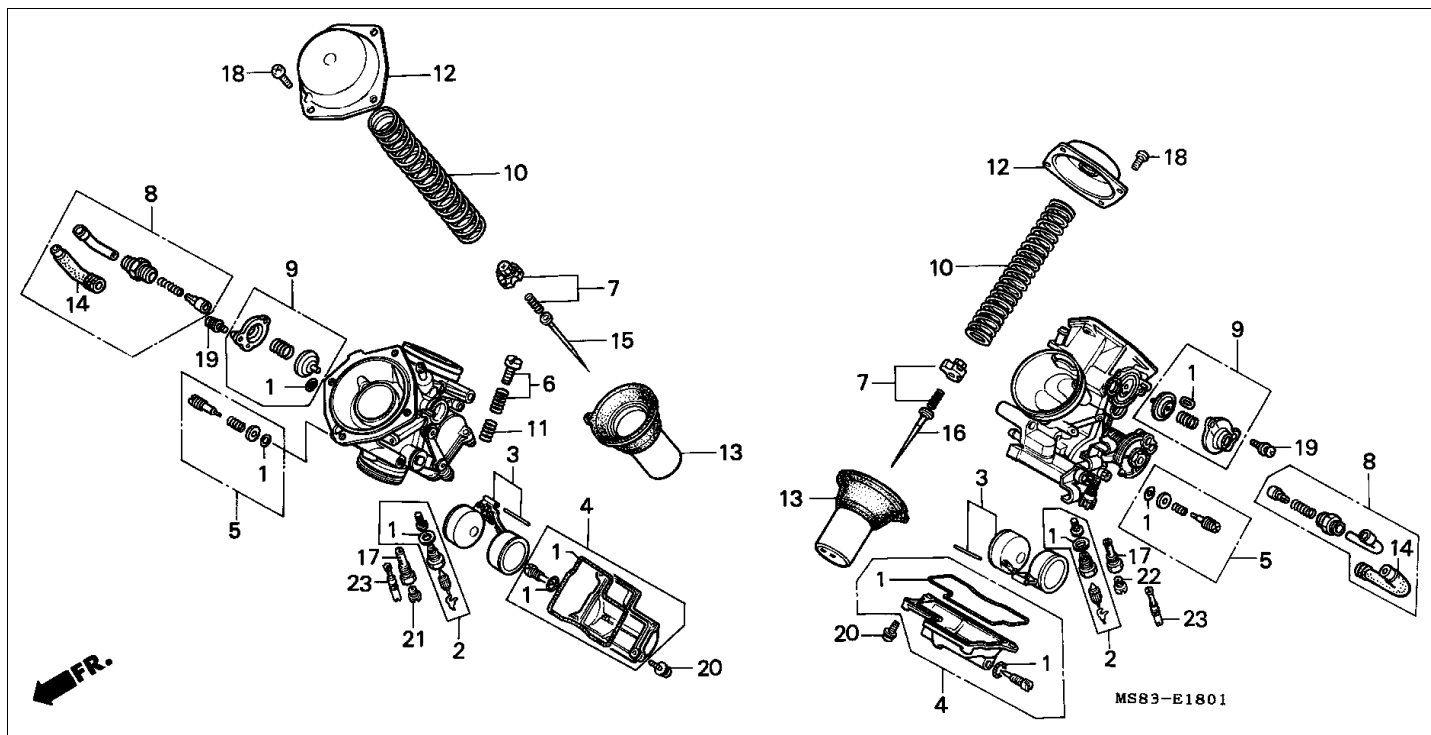

Block E-18-1 CARBURETOR (COMPONENT PARTS)


Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	16010-MR1-691	GASKET SET	002	0
2	16011-MS8-004	SEAT SET, VALVE	002	0
3	16013-ML7-004	FLOAT SET	002	0
4	16015-MS8-014	CHAMBER SET, FLOAT	002	0
5	16016-MN8-004	SCREW SET	002	0
6	16029-MN4-003	SCREW SET	001	0
7	16037-ME5-671	PLATE SET, VALVE	002	0
8	16046-MR1-004	VALVE SET, STARTER	002	0
9	16048-MS8-004	VALVE SET, AIR CUT	002	0
10	16050-MF5-671	SPRING, VACUUM PISTON	002	0
11	16052-ME9-672	SPRING	001	0
12	16107-MM9-621	TOP	002	0
13	16111-MS8-004	PISTON COMP., VACUUM	002	0
14	16118-ME9-671	CAP, CABLE SEALING	002	0
15	16131-MM9-621	NEEDLE COMP., JET (FR.)	001	0
16	16151-MM9-621	NEEDLE COMP., JET (RR.)	001	0
17	16165-MF5-671	HOLDER, NEEDLE JET	002	0
18	93500-040100A	SCREW, PAN, 4X10	008	0
19	93892-0401200	SCREW-WASHER, 4X12	004	0
20	93892-0401600	SCREW-WASHER, 4X16	008	0
21	99101-393-125	JET, MAIN, #125	001	0
22	99101-393-130	JET, MAIN, #130	001	0
23	99103-427-038	JET, SLOW, #38	002	0

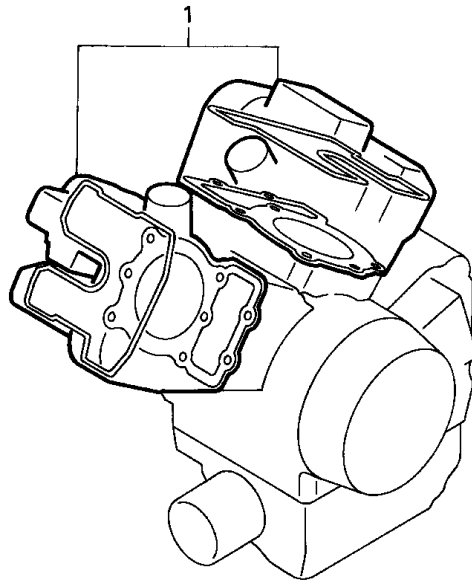

ENG1 - X0004

Block EOP-1 GASKET KIT A


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	061A1-MS8-000	GASKET KIT A (COMPONENT PARTS)	001	0
1	12191-MN8-003	GASKET, CYLINDER	002	0
1	12208-413-003	SEAL, VALVE STEM (ARAI)	004	0
1	12209-413-003	SEAL, VALVE STEM (ARAI)	002	0
1	12251-MN8-003	GASKET, CYLINDER HEAD	002	0
1	12391-MF5-750	GASKET, HEAD COVER	002	0
1	18291-236-000	GASKET, EX. PIPE	002	0
1	90441-MC0-000	WASHER, SEALING, 7MM	004	0
1	90475-703-000	WASHER C, 8MM	002	0
1	91303-MF5-003	O-RING, 44X3 (ARAI)	002	0
1	91304-MF5-003	O-RING, 62.4X2.5 (ARAI)	002	0
1	91306-KK4-003	O-RING, 18X2.6 (ARAI)	002	0
1	91315-MN8-000	SEAL, WATER PIPE, 16MM	002	0
1	91316-MN8-000	SEAL, WATER PIPE, 28MM	001	0
1	91356-169-003	O-RING	001	0

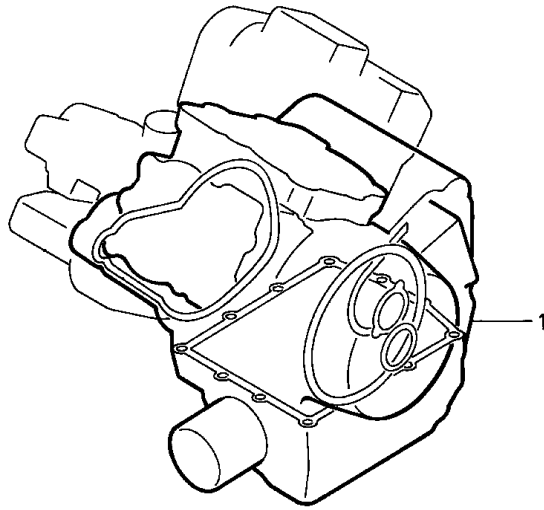

ENG2 - X0004


Block EOP-2 GASKET KIT B

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	061B1-MS8-000	GASKET KIT B	001	0
1	11394-MR1-000	GASKET, R. COVER	001	0
1	11395-MR1-000	GASKET, L. COVER	001	0
1	19226-MM9-000	GASKET, WATER PUMP COVER	001	0
1	90425-300-000	WASHER, 11MM	001	0
1	91301-250-000	O-RING, 21.5MM	001	0
1	91302-MB0-013	O-RING, 32.95X2.62 (ARAI)	001	0
1	91303-377-000	O-RING, 13.8X2.5	001	0
1	91303-KF0-003	O-RING, 14.8X2.4 (ARAI)	002	0
1	91305-MG7-003	O-RING, 5X1.7 (ARAI)	002	0
1	91309-425-003	O-RING, 24.4X3.1 (ARAI)	001	0
1	91313-393-003	O-RING, 7.8X2.2 (ARAI)	001	0
1	91313-MB0-003	O-RING, 14.7X2.2 (ARAI)	001	0
1	91315-MF5-003	SEAL, OIL PIPE	002	0
1	91318-ME5-003	O-RING, 5.6X1.9 (ARAI)	001	0
1	91319-300-000	O-RING, 13X2.5	001	0
1	91356-425-003	O-RING, 30MM	001	0
1	94109-14000-	WASHER, DRAIN PLUG, 14MM	001	0
1	061B1-MS8-010	GASKET KIT B (COMPONENT PARTS)	001	0
1	91303-428-003	O-RING, 7.7X2.5	001	0

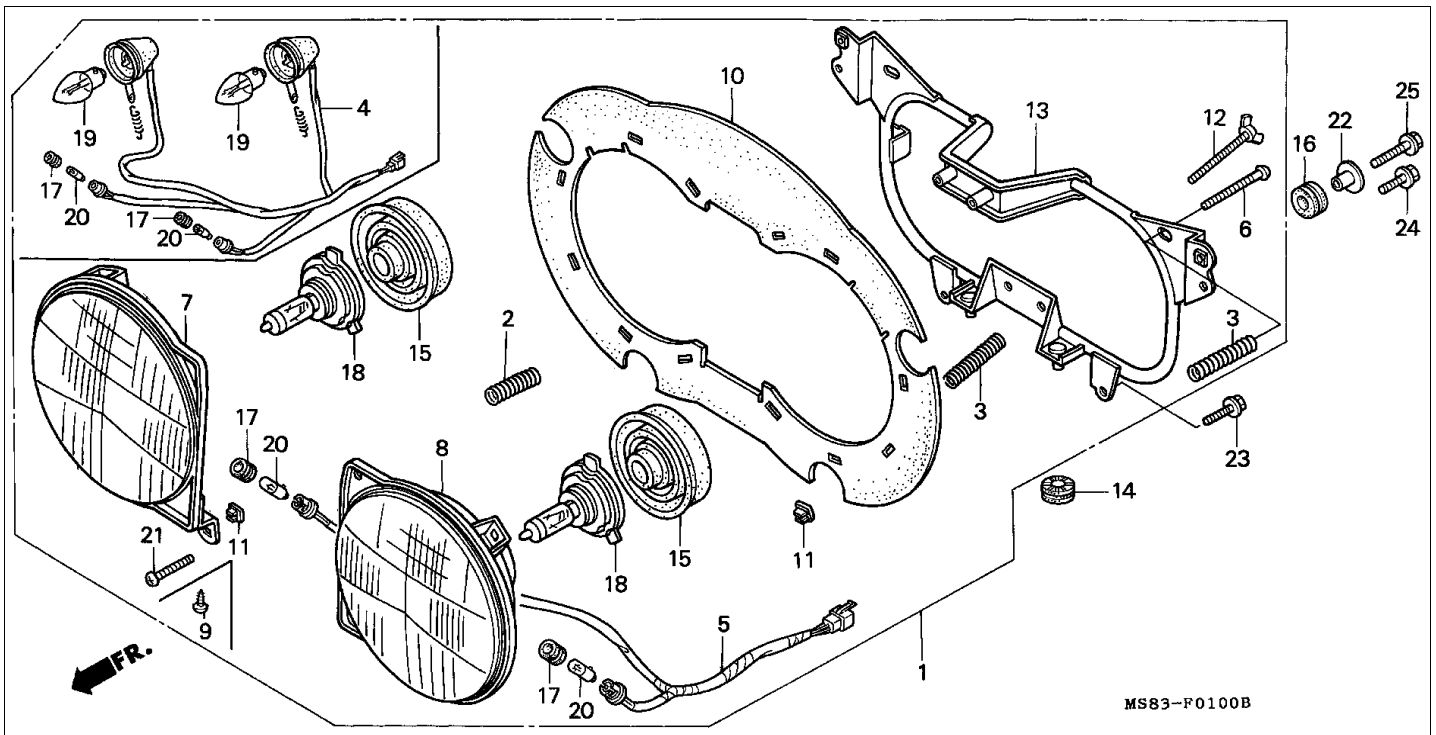


Block F-1 HEADLIGHT (1)

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	33100-MS8-871	HEADLIGHT ASSY., DUAL (12V 60/55W)	001	0
1	33100-MS8-872	HEADLIGHT ASSY., DUAL (12V 60/55W)	001	0
2	33107-KR0-003	SPRING, SETTING	002	0
3	33108-MJ0-000	SPRING, ADJUSTING	004	0
5	33110-MS8-871	SOCKET ASSY., POSITION LIGHT	001	0
6	33114-MS8-871	SCREW, BEAM ADJUSTING	002	0
7	33120-MS8-871	HEADLIGHT UNIT, R.	001	0
8	33121-MS8-871	HEADLIGHT UNIT, L.	001	0
10	33130-MS8-611	RUBBER, HEADLIGHT SEAL	001	0
11	33135-MS8-611	NUT, SPECIAL	004	0
12	33142-MM9-003	SCREW, SPECIAL	002	0
13	33155-MS8-871	BRACKET COMP.	001	0
14	33157-MJ0-000	RUBBER, HEADLIGHT BRACKET	002	0
15	33180-MJ0-000	COVER, RUBBER	002	0
15	33180-MJ0-010	COVER, RUBBER	002	0
16	33712-KT1-670	RUBBER, TAILLIGHT	002	0
17	33905-371-601	RUBBER, JOINT	001	0
18	34901-MC7-601	BULB, HEADLIGHT (STANLEY) (12V 60/55W)	002	0
20	34903-388-611	BULB, POSITION (12V 4W)	001	0
21	90110-MK5-611	SCREW, PAN	002	0
22	90501-MJ6-000	COLLAR, HEADLIGHT BRACKET	002	0
23	95700-0602207	BOLT, FLANGE, 6X22	002	0
24	95701-0601208	BOLT, FLANGE, 6X12	002	0
25	95701-0601807	BOLT, FLANGE, 6X18	002	0

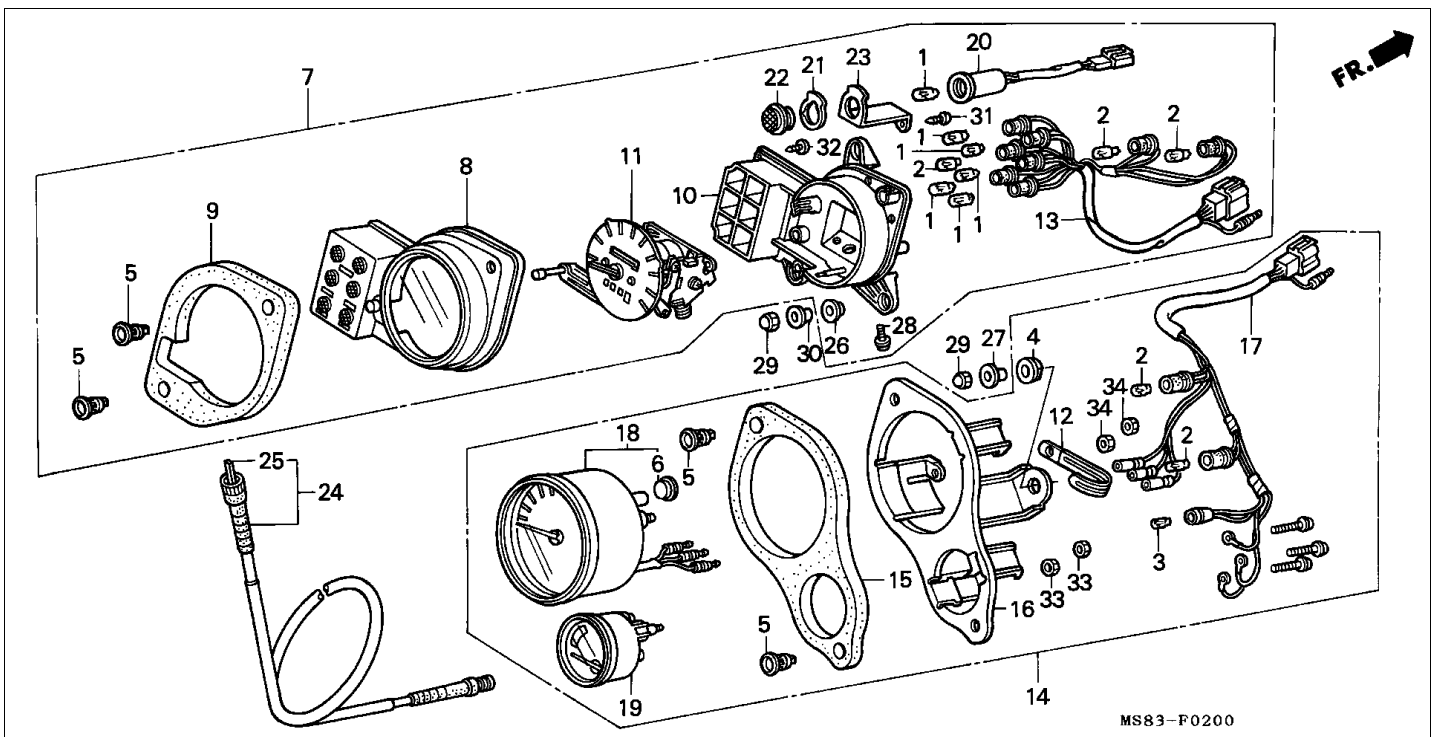


Block F-2 METER

Refrnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	34908-GA7-701	BULB, WEDGE BASE (T10) (12V 3.4W)	006	0
2	34908-MB9-871	BULB, WEDGE BASE (12V 1.7W)	005	0
3	34908-MG9-951	BULB, WEDGE BASE (12V 1.7W)	001	0
4	34931-MC7-000	RUBBER, RESISTOR MOUNTING	003	0
5	37112-MS8-003	CLIP, METER PANEL	004	0
6	37116-KG4-008	CAP A	002	0
7	37200-MS8-611	SPEEDOMETER ASSY.	001	0
8	37202-MS8-611	CASE COMP., UPPER	001	0
9	37205-MS8-008	PANEL	001	0
10	37208-MS8-611	CASE COMP., LOWER	001	0
11	37210-MS8-611	SPEEDOMETER COMP.	001	0
12	37212-MJ1-670	CLIP, 4X100	001	0
13	37222-MS8-611	SOCKET COMP.	001	0
14	37240-MS8-611	METER ASSY., TACHOMETER & TEMPERATURE	001	0
15	37241-MS8-008	PANEL	001	0
16	37242-MS8-008	BRACKET COMP.	001	0
17	37243-MS8-008	CORD ASSY.	001	0
18	37250-MS8-611	TACHOMETER ASSY.	001	0
19	37400-MS8-611	METER ASSY., TEMPERATURE	001	0
20	37550-MS8-008	SOCKET COMP.	001	0
21	37556-MS8-000	PANEL, SIDE STAND	001	0
22	37561-GB7-641	LENS COMP., WINKER PILOT	001	0
23	37590-MS8-008	STAY, SPEED WARNING LAMP	001	0
24	44830-MM9-000	CABLE ASSY., SPEEDOMETER	001	0
25	44831-MM9-000	CABLE, INNER	001	0
26	61313-KN6-910	RUBBER, HEADLIGHT MOUNTING	003	0
27	83505-MS8-010	COLLAR, METER MOUNTING	003	0
28	90101-GG2-008	SCREW-WASHER, 4X10	002	0
29	90215-GM0-000	NUT, CAP, 6MM	006	0
30	90501-KB7-940	COLLAR, 22X6.2X13.5	003	0
31	93903-24380-	SCREW, TAPPING, 4X12	001	0
32	93903-24480-	SCREW, TAPPING, 4X16	005	0
33	94001-050700S	NUT, HEX., 5MM	002	0
34	94001-060700S	NUT, HEX., 6MM	002	0

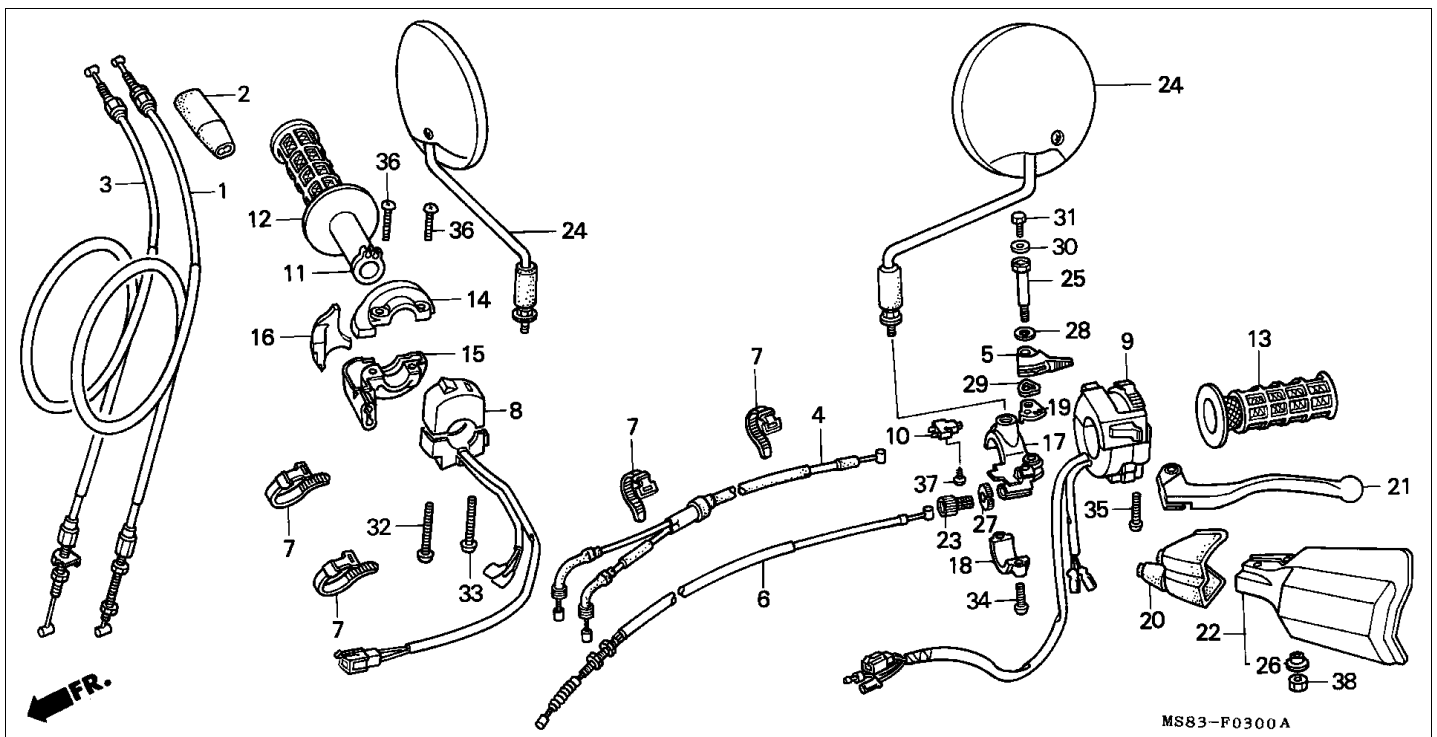


Block F-3 HANDLE LEVER/SWITCH/ CABLE

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	17910-MM9-000	CABLE COMP. A, THROTTLE	001	0
2	17913-KB7-000	COVER, THROTTLE CABLE	001	0
3	17920-MM9-000	CABLE COMP. B, THROTTLE	001	0
4	17950-MS8-000	CABLE COMP., CHOKE	001	0
5	17961-MG2-000	LEVER COMP., CHOKE	001	0
6	22870-MS8-000	CABLE COMP., CLUTCH	001	0
7	32161-404-000	BAND B1, WIRE	004	0
8	35130-MS8-000	SWITCH ASSY., STARTER KILL	001	0
9	35200-MM9-000	SWITCH ASSY., WINKER	001	0
10	35330-MK5-003	SWITCH ASSY., CLUTCH	001	0
11	53141-429-000	PIPE, THROTTLE GRIP	001	0
12	53165-MK5-010	GRIP, R. HANDLE	001	0
13	53166-MK5-010	GRIP, L. HANDLE	001	0
14	53167-KB7-000	HOUSING, UPPER THROTTLE	001	0
15	53168-MG7-000	HOUSING, UNDER THROTTLE	001	0
16	53169-KB7-000	SLIDER, THROTTLE CABLE	001	0
17	53172-MK5-000	BRACKET, L. HANDLE LEVER	001	0
18	53174-KE1-000	HOLDER, L. LEVER BRACKET	001	0
19	53176-MM9-000	PLATE, POINT	001	0
20	53177-MK5-000	COVER, L. HANDLE LEVER	001	0
21	53178-MG7-003	LEVER, L. STEERING HANDLE	001	0
22	53185-MN9-000	GUARD, L. KNUCKLE *NH138*	001	0
23	53192-KA4-710	BOLT, WIRE ADJUSTING	001	0
24	88110-MN9-003	MIRROR ASSY., R. BACK	002	0
25	90114-MK5-000	BOLT, LEVER PIVOT	001	0
26	90127-KF0-770	COLLAR, 6X4	001	0
27	90321-KA4-700	NUT, FIXING	001	0
28	90405-463-000	WASHER, 8MM	001	0
29	90406-KF0-003	WASHER, WAVE	001	0
30	90554-240-000	WASHER B	001	0
31	92201-050120A	BOLT, HEX., 5X12	001	0
32	93500-040320G	SCREW, PAN, 4X32	001	0
33	93500-040450G	SCREW, PAN, 4X45	001	0
34	93500-050160A	SCREW, PAN, 5X16	002	0
35	93500-050200G	SCREW, PAN, 5X20	002	0
36	93500-050200G	SCREW, PAN, 5X20	002	0
37	93901-32320-	SCREW, TAPPING, 3X12	001	0
38	94001-060000S	NUT, HEX., 6MM	001	0

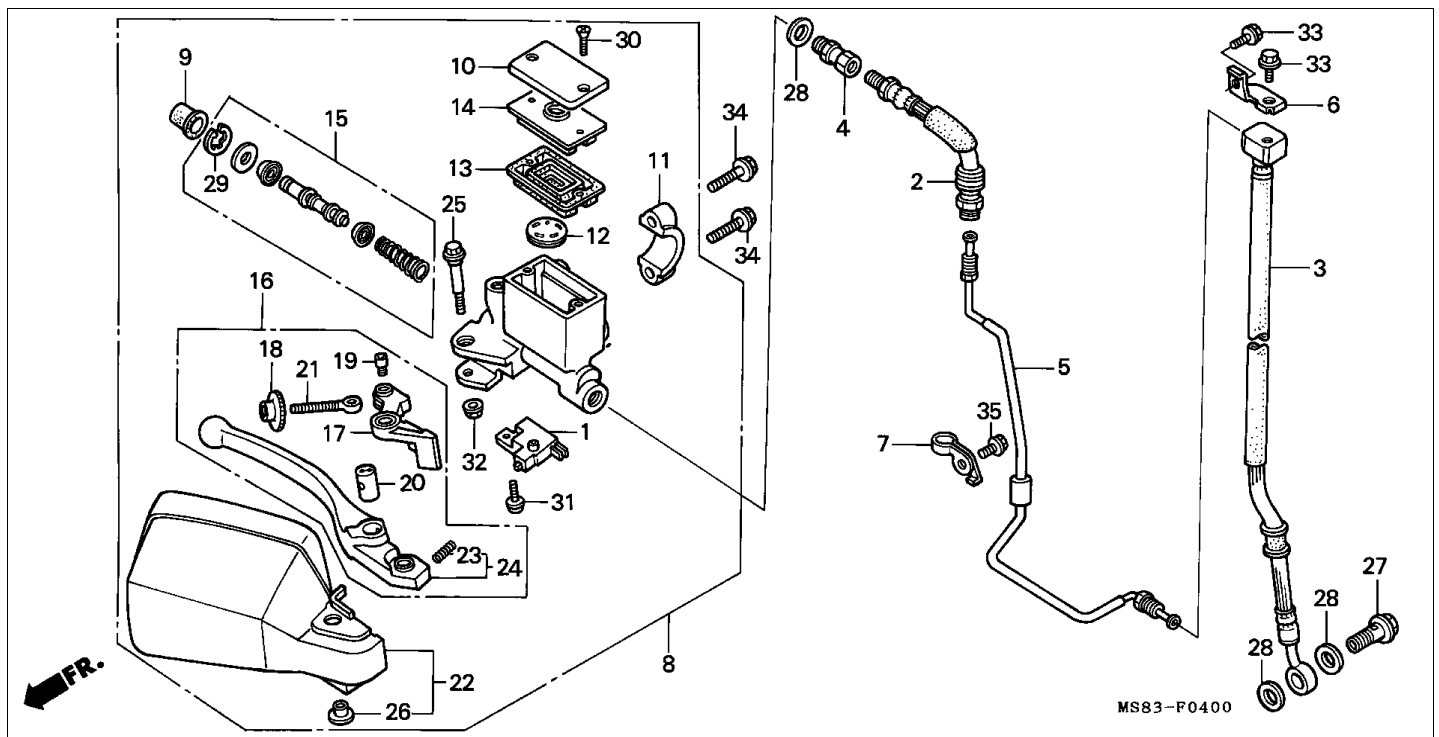


Block F-4 FR. BRAKE MASTER CYLINDER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	35340-MM5-600	SWITCH ASSY., FR. STOP	001	0
2	45125-MM9-003	HOSE, BRAKE UPPER	001	0
3	45126-MS8-000	HOSE, FR. BRAKE LOWER	001	0
4	45127-KA3-831	JOINT, BRAKE HOSE	001	0
5	45135-MS8-000	PIPE COMP., FR. BRAKE	001	0
6	45462-MG2-010	STAY, BRAKE HOSE	001	0
7	45463-MM9-000	CLAMPER, FR. BRAKE HOSE	001	0
8	45500-MS8-611	CYLINDER ASSY., FR. MASTER *NH105/NH138*	001	0
9	45504-410-003	BOOT COMP.	001	0
10	45513-KK1-771	CAP, MASTER CYLINDER	001	0
11	45517-166-006	HOLDER, MASTER CYLINDER	001	0
12	45518-MG3-016	SEPARATOR COMP.	001	0
13	45520-MG7-006	DIAPHRAGM	001	0
14	45521-HA2-006	PLATE, DIAPHRAGM	001	0
15	45530-MN9-305	CYLINDER SET, MASTER	001	0
16	53170-MN9-000	LEVER ASSY., R. HANDLE	001	0
17	53171-MJ4-006	KNOCKER, MASTER CYLINDER	001	0
18	53172-KV0-006	ADJUSTER, R. HANDLE LEVER	001	0
19	53177-KV0-006	BOLT, LEVER SOCKET, 5X5	001	0
20	53179-KV0-006	JOINT, LEVER	001	0
21	53180-KV0-006	BOLT, ADJUSTING	001	0
22	53180-MN9-000	GUARD, R. KNUCKLE *NH138*	001	0
23	53181-KV0-006	SPRING, HANDLE LEVER	001	0
24	53185-MN9-305	LEVER SET, R. HANDLE	001	0
25	90114-MN9-006	BOLT, HANDLE LEVER	001	0
26	90127-KF0-770	COLLAR, 6X4	001	0
27	90145-KM3-750	BOLT, OIL, 10X22	001	0
28	90545-300-000	WASHER, OIL BOLT	003	0
29	90651-MA5-671	CIRCLIP	001	0
30	93600-040121G	SCREW, FLAT, 4X12	002	0
31	93893-0401218	SCREW-WASHER, 4X12	001	0
32	94050-06000-	NUT, FLANGE, 6MM	001	0
33	96000-0601000	BOLT, FLANGE, 6X10	002	0
34	96001-0602507	BOLT, FLANGE, 6X25	002	0
34	96001-0602207	BOLT, FLANGE, 6X22	002	0
35	96500-0601007	BOLT, FLANGE, 6X10	001	0

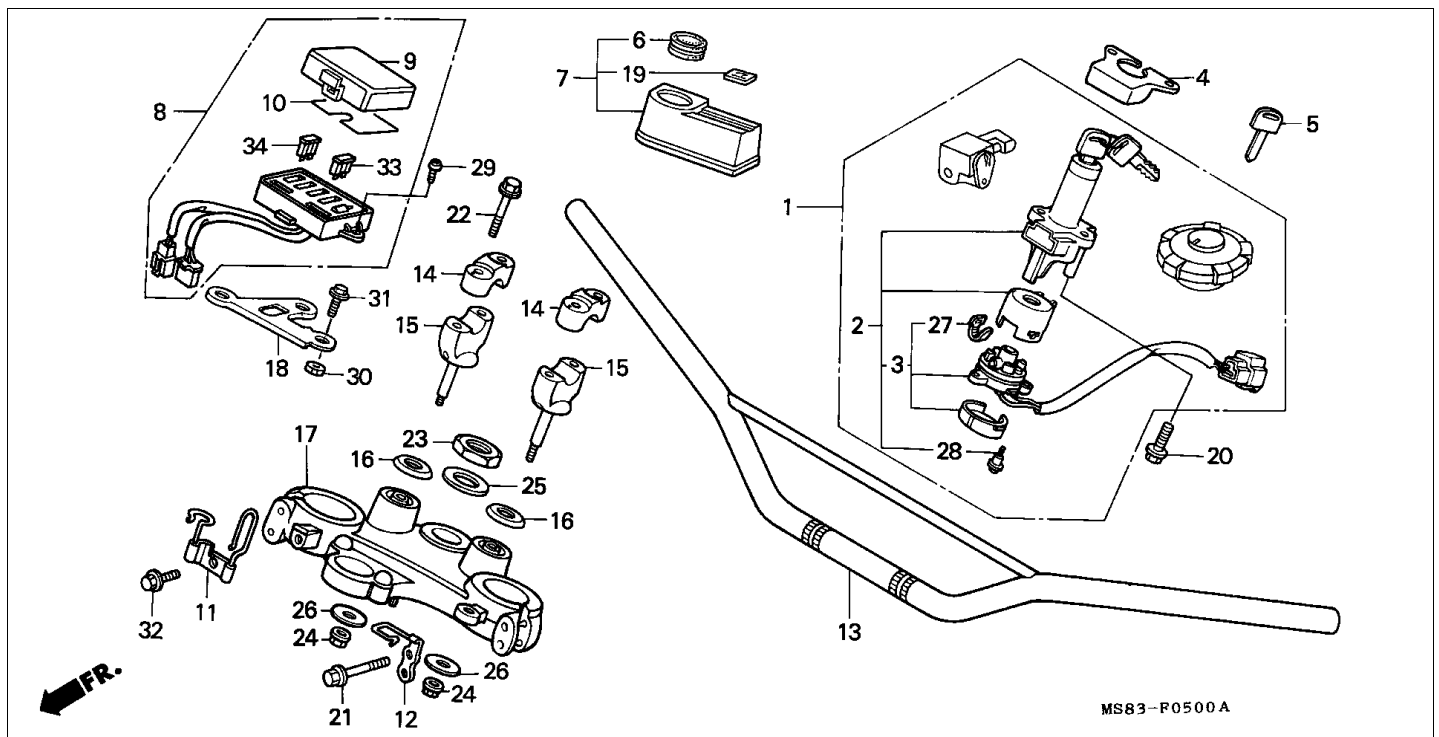


Block F-5 HANDLE PIPE/TOP BRIDGE

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	35010-MS8-870	KEY SET	001	0
1	35010-MS8-871	KEY SET	001	0
1	35010-MS8-872	KEY SET	001	0
2	35100-MS8-610	SWITCH ASSY., COMBINATION & LOCK	001	0
2	35100-MS8-611	SWITCH ASSY., COMBINATION & LOCK	001	0
3	35101-MM9-611	BASE COMP., CONTACT	001	0
4	35106-MB0-610	COVER, COMBINATION SWITCH	001	0
5	35121-MN9-611	KEY, BLANK	(1)	0
6	37312-KB7-008	GROMMET, COMBINATION SWITCH	001	0
7	37610-MS8-000	COVER COMP., IGNITION SWITCH	001	0
8	38200-MS8-871	BOX ASSY., FUSE	001	0
9	38210-KR0-005	COVER, FUSE BOX	001	0
10	38215-MM9-300	LABEL, FUSE	001	0
10	38215-MS8-871	LABEL, FUSE	001	0
11	45461-MS8-000	HOLDER, BRAKE HOSE UPPER	001	0
12	50296-MN9-000	GUIDE, CLUTCH CABLE	001	0
13	53100-MS8-000	BAR, STEERING HANDLE *YR112MU*	001	0
14	53131-MS8-000	HOLDER, UPPER	002	0
15	53132-MS8-000	HOLDER, HANDLE UNDER	002	0
16	53135-MS8-000	CAP, HANDLE PIPE	002	0
17	53220-MS8-000	BRIDGE COMP., FORK TOP	001	0
18	61312-MM9-000	STAY, FUSE CASE	001	0
19	87122-KY7-910	MARK, WING	001	0
20	90105-KE1-722	BOLT, COMBINATION SWITCH SETTING	002	0
21	90107-KF0-000	BOLT, FLANGE, 8X40	004	0
22	90111-362-000	BOLT, FLANGE, 8X36	004	0
23	90304-415-000	NUT, STEERING STEM	001	0
24	90309-KF0-003	NUT, FLANGE, 8MM	002	0
25	90503-283-000	WASHER, STEERING STEM	001	0
26	90535-KB9-000	WASHER, HANDLE CUSHION	002	0
27	91058-MG9-681	BAND, SELF LOCK	001	0
28	91059-MK4-601	SCREW, TAPPING, 3X16	003	0
28	91059-KY2-711	SCREW, TAPPING, 3X16	003	0
29	93500-040120G	SCREW, PAN, 4X12	002	0
30	94001-080700S	NUT, HEX., 8MM	001	0
31	95700-0802507	BOLT, FLANGE, 8X25	001	0
32	96400-0601000	BOLT, FLANGE, 6X10	001	0
33	98200-31000-	FUSE, BLADE (10A)	003	0

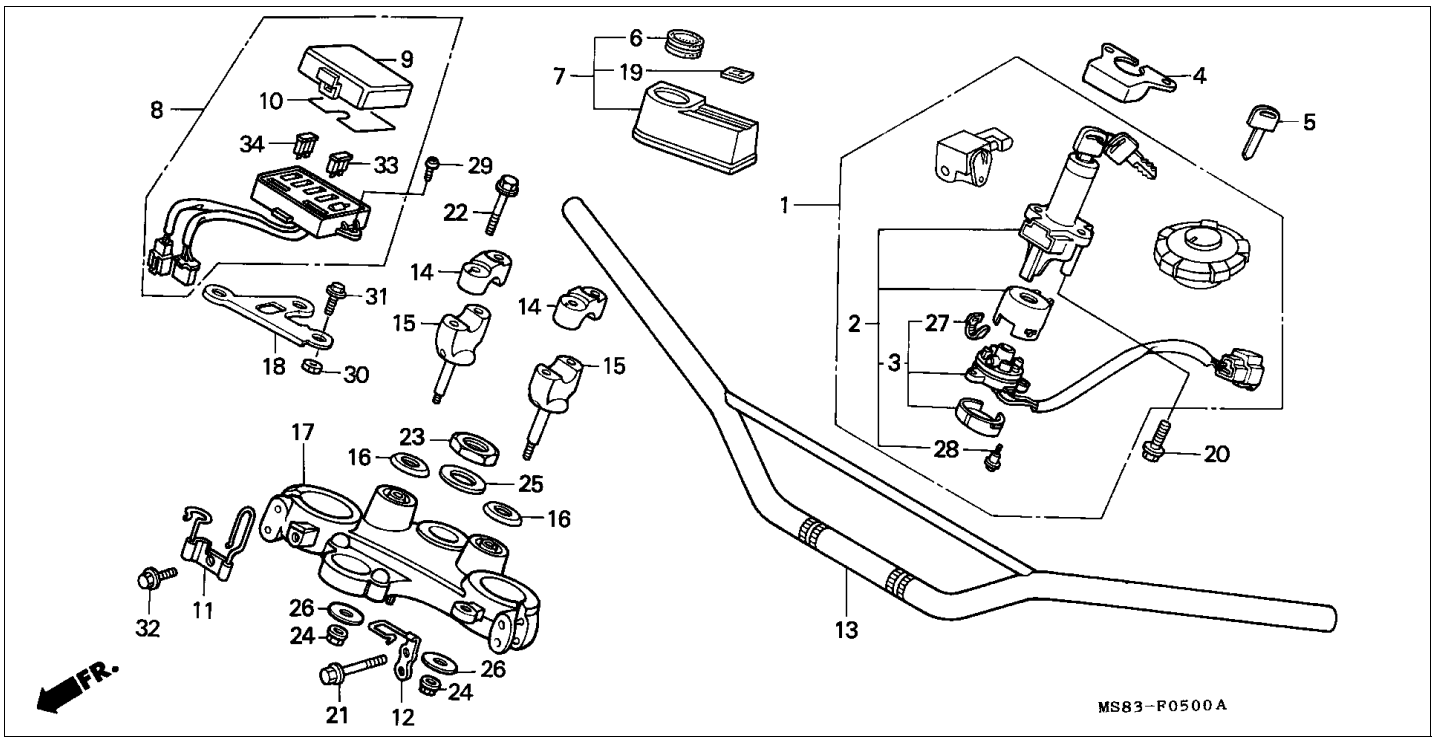


Block F-5 HANDLE PIPE/TOP BRIDGE

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
34	98200-32000-	FUSE, BLADE (20A)	003	0

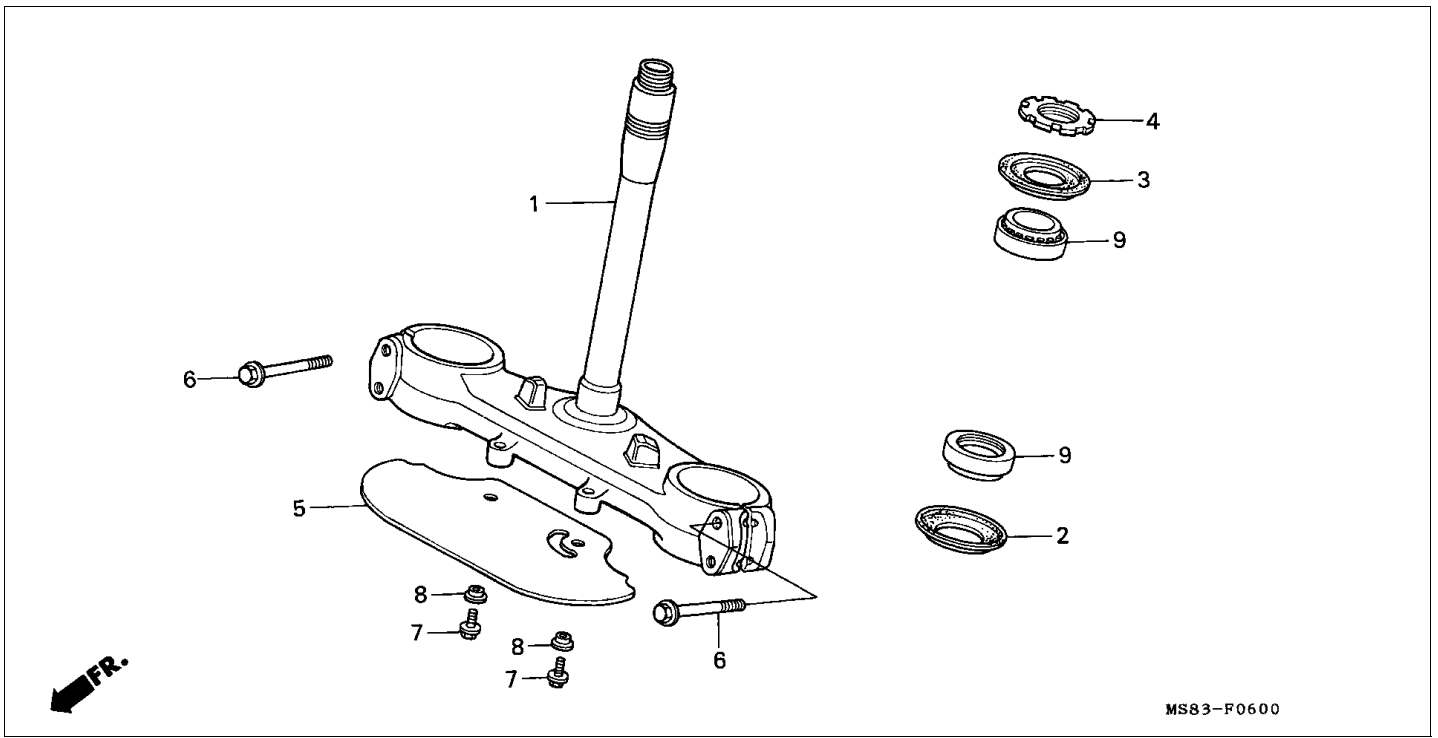


Block F-6 STEERING STEM

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	53200-MS8-000	STEM COMP., STEERING	001	0
2	53214-KA4-701	DUST SEAL, STEERING HEAD (ARAI)	001	0
3	53214-MM9-003	DUST SEAL, STEERING HEAD (ARAI)	001	0
3	53214-MM9-005	DUST SEAL, STEERING HEAD (NOK)	001	0
4	53229-KN5-650	THREAD, STEERING HEAD TOP	001	0
5	61120-MM9-000	PLATE, AIR GUIDE	001	0
6	90107-KF0-000	BOLT, FLANGE, 8X40	004	0
7	90111-ML0-730	BOLT, FLANGE, 6MM	002	0
8	90556-MB4-000	WASHER	002	0
9	91015-425-832	BEARING, HEAD PIPE UPPER (NACHI)	002	0

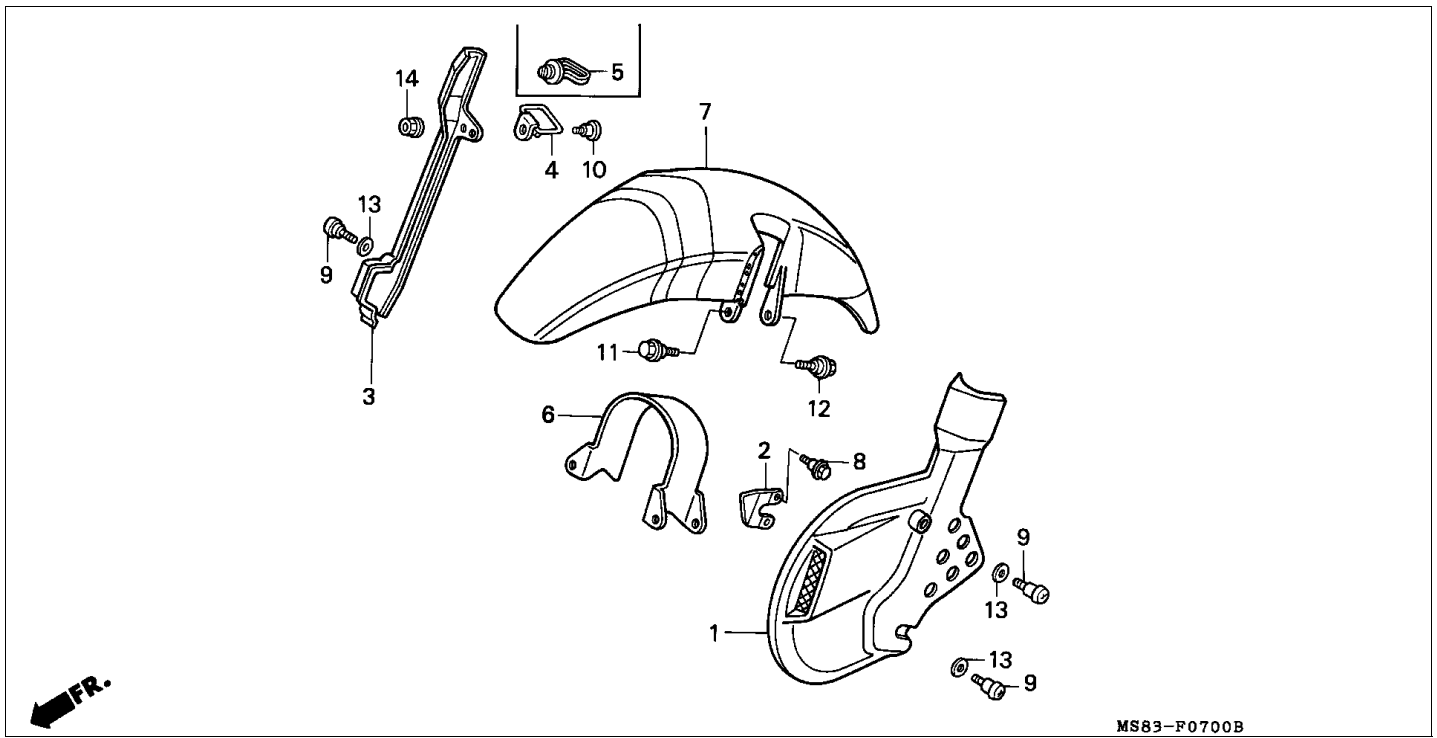


Block F-7 FRONT FENDER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	45320-MS8-010	COVER COMP., FR. DISK *NH138*	001	0
2	45335-MS8-000	STOPPER, FR. DISK COVER	001	0
3	45340-MS8-000	COVER, BOTTOM CASE *NH138*	001	0
4	45451-MS8-000	GUIDE, SPEEDOMETER CABLE	001	0
6	53240-MS8-000	BRACE, FR. FORK	001	0
7	61200-MS8-000	FENDER SET, FR. (WL) *NH138*	001	0
8	90028-MA6-000	BOLT, SPECIAL FLANGE, 6X14	002	0
9	90103-MN9-000	BOLT, FR. DISK	004	0
10	90105-GC4-600	BOLT, DISK, 6X17	001	0
10	90105-KS6-700	BOLT, DISK, 6X17	001	0
11	90106-MM9-000	BOLT, FR. FENDER FIXING	002	0
12	90106-MN9-000	BOLT, FR. FENDER FIXING	002	0
13	90505-MM5-770	WASHER, 8MM	004	0
14	94071-06080-	NUT-WASHER, 6MM	001	0

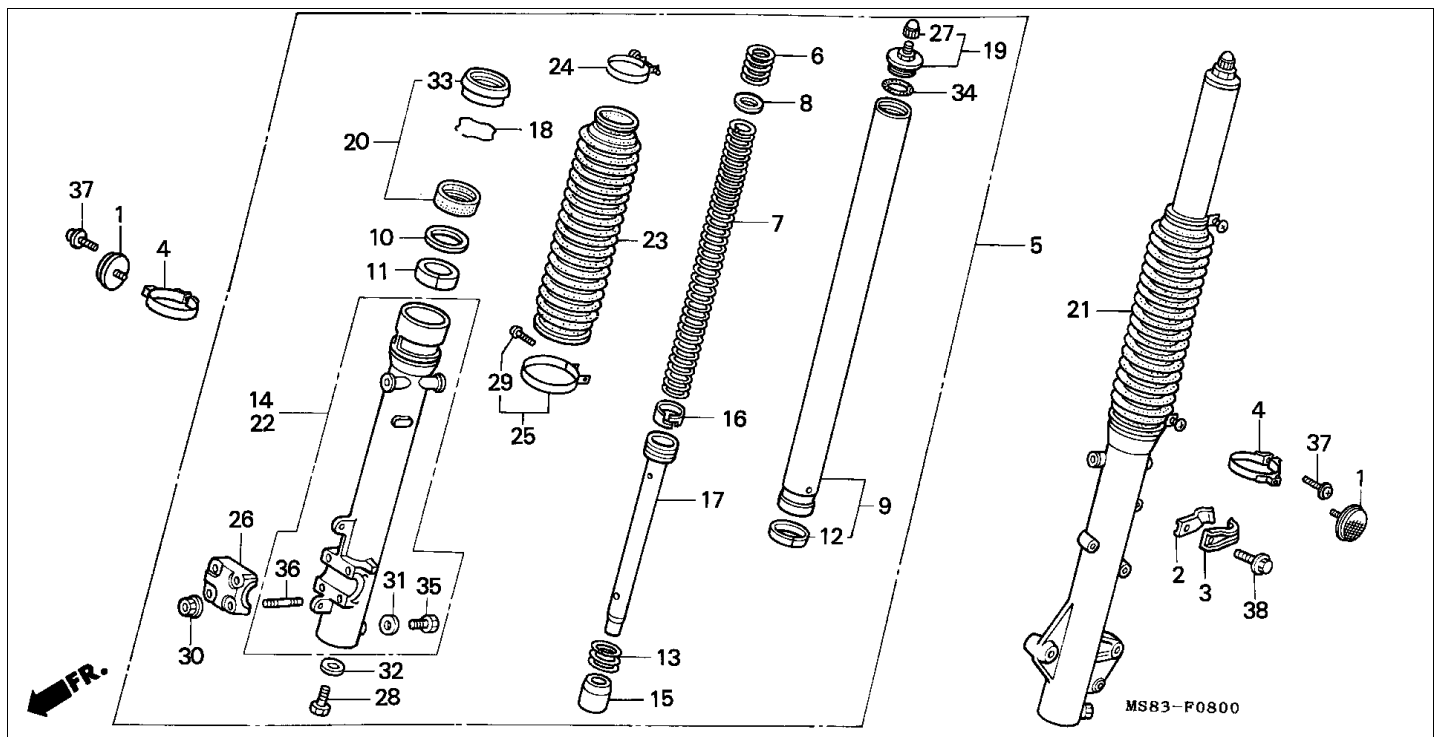


Block F-8 FRONT FORK

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
2	45464-MM9-000	CLAMPER A, BRAKE HOSE	001	0
3	45465-MM9-000	CLAMPER B, BRAKE HOSE	001	0
5	51400-MS8-611	FORK ASSY., R. FR. *NH35M/PB181*	001	0
6	51401-MS8-003	SPRING A, FR. CUSHION	002	0
7	51402-MS8-003	SPRING B, FR. CUSHION	002	0
8	51405-KA4-711	SEAT, SPRING	002	0
9	51410-MS8-003	PIPE COMP., FR. FORK (SHOWA)	002	0
10	51412-KA4-711	RING, BACK UP	002	0
11	51414-MN1-671	BUSH, GUIDE	002	0
12	51415-MN1-671	BUSH, SLIDER	001	0
13	51416-KA4-831	SPRING, FR. REBOUND (SHOWA) (34.3N/MM, 3.5KGF/MM)	002	0
14	51420-MS8-003	CASE COMP., R. BOTTOM *NH35M*	001	0
15	51432-MG7-003	PIECE, OIL LOCK	002	0
16	51437-KA4-711	RING, PISTON (SHOWA)	002	0
17	51440-MS8-003	PIPE, SEAT	002	0
18	51447-KA4-711	RING, OIL SEAL STOPPER	002	0
19	51450-MS8-003	BOLT ASSY., FR. FORK	002	0
20	51490-KA4-831	SEAL SET, FR. FORK (SHOWA)	002	0
21	51500-MS8-611	FORK ASSY., L. FR. *NH35M/PB181*	001	0
22	51520-MS8-003	CASE COMP., L. BOTTOM *NH35M*	001	0
23	51611-MS8-003	BOOT, FR. FORK *PB181*	002	0
24	51612-KA4-831	BAND, BOOT UPPER (SHOWA)	002	0
25	51613-MK2-003	BAND, BOOT LOWER	002	0
26	51634-MK5-003	HOLDER, AXLE *NH35M*	001	0
27	52425-381-771	CAP, AIR VALVE	002	0
28	90116-383-721	BOLT, SOCKET, 8X27	002	0
29	90202-MK2-003	SCREW, PAN, 3.5X25	002	0
30	90301-473-003	NUT, U, 6MM	004	0
31	90543-273-000	PACKING, FR. FORK DRAIN COCK	002	0
32	90544-283-000	WASHER, SPECIAL, 8MM	002	0
33	91254-KA4-831	DUST SEAL, FR. FORK	002	0
34	91356-KA4-711	O-RING, 35.2X2.4	002	0
35	92101-060080A	BOLT, HEX., 6X8	002	0
36	92900-060250E	BOLT, STUD, 6X25	004	0
38	96001-0601200	BOLT, FLANGE, 6X12	001	0

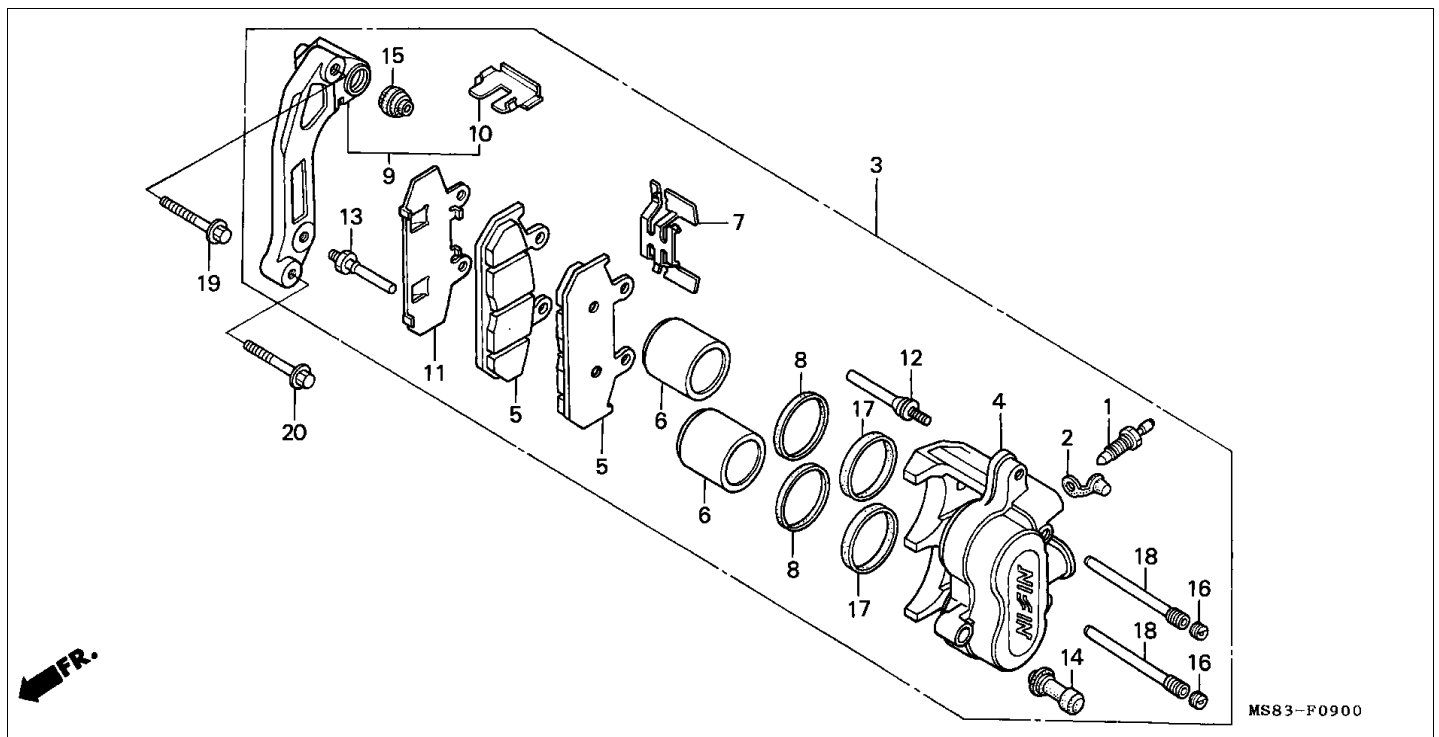


Block F-9 FRONT BRAKE CALIPER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	43352-568-003	SCREW, BLEEDER	001	0
2	43353-461-771	CAP, BLEEDER	001	0
3	45100-MS8-006	CALIPER ASSY., L. FR. (NISSIN)	001	0
3	45100-MS8-016	CALIPER ASSY., L. FR. (NISSIN)	001	0
4	45101-MN9-016	BODY, FR. CALIPER	001	0
5	45105-MS8-008	PAD COMP., FR. (NISSIN) (TT)	002	0
6	45107-ML7-691	PISTON COMP.	002	0
7	45108-KV0-701	SPRING, PAD (NISSIN)	001	0
8	45109-166-006	DUST SEAL	002	0
9	45110-MS8-006	BRACKET COMP., FR.	001	0
10	45112-KM1-006	RETAINER	001	0
12	45131-HA5-671	BOLT A, PIN	001	0
12	45131-HA5-672	BOLT A, PIN	001	0
13	45131-166-016	BOLT, PIN	001	0
14	45132-166-016	BOOT, PIN BUSH (NISSIN)	001	0
15	45133-MA3-006	BOOT B	001	0
16	45203-MG3-006	PLUG, PIN	002	0
16	45203-MG3-016	PLUG, PIN	002	0
17	45209-166-006	SEAL, PISTON	002	0
18	45215-KA3-731	PIN, HANGER	002	0
18	45215-KA3-732	PIN, HANGER	002	0
19	90131-MG3-000	BOLT, FLANGE, 8X40	001	0
20	90132-MG3-000	BOLT, FLANGE, 8X50	001	0

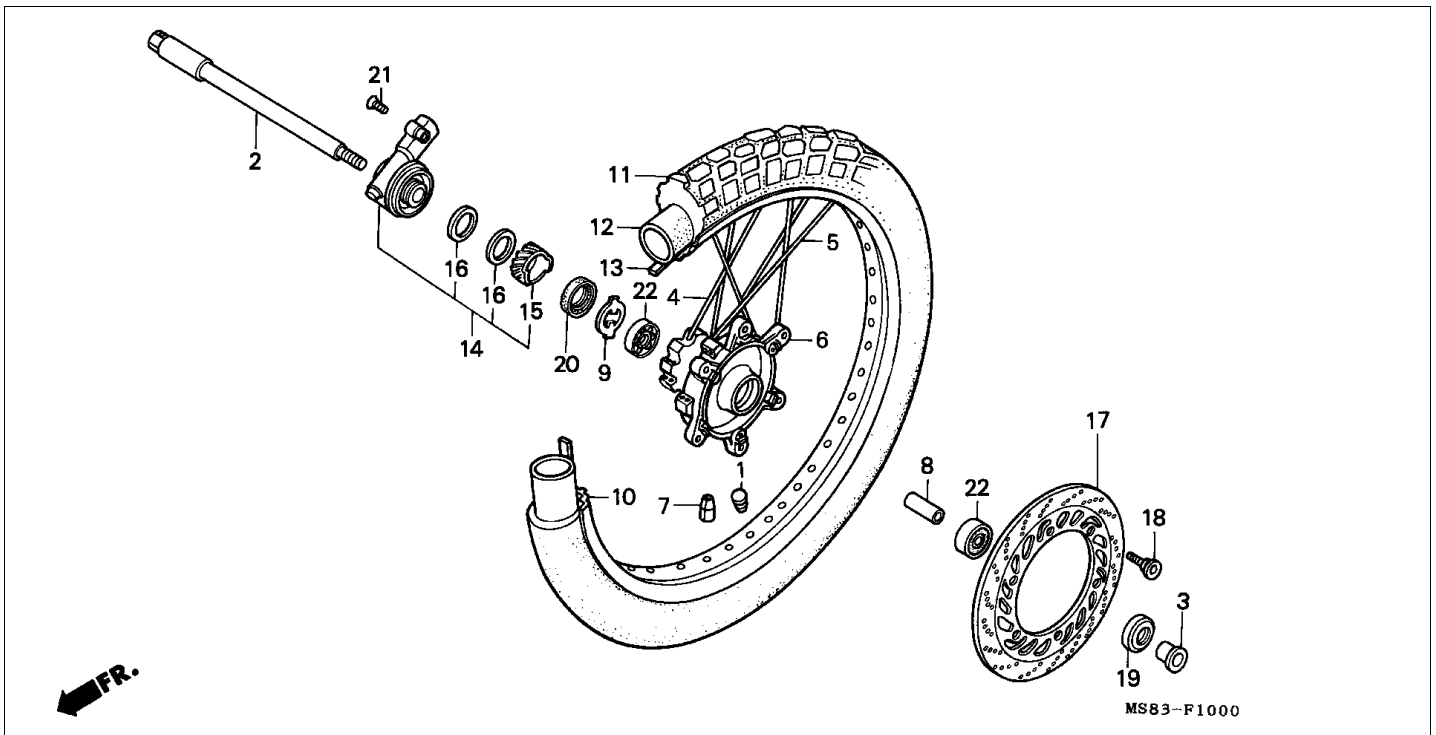

Block F-10 FRONT WHEEL


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	42717-329-000	CAP, RIM HOLE	001	0
2	44301-KF0-000	AXLE, FR. WHEEL	001	0
3	44311-MG3-000	COLLAR, FR. WHEEL	001	0
4	446A0-MM9-000	SPOKE SET A, FR. (B9X250.5)	018	0
5	446B0-MM9-000	SPOKE SET B, FR. (B9X247.0)	018	0
6	44601-MM9-000	HUB, FR. WHEEL	001	0
7	44606-283-000	BALANCER (20G)	N	0
8	44620-MG3-000	COLLAR, FR. WHEEL DISTANCE	001	0
9	44680-MA0-000	RETAINER, GEAR BOX	001	0
10	44701-MM9-003	RIM, FR. WHEEL (1.85X21)	001	0
11	44711-MN9-013	TIRE, FR. (BS) (90/90-21 54S TW41)	001	0
11	44711-MN9-015	TIRE, FR. (DUNLOP) (90/90-21 54S K560)	001	0
12	44712-400-004	TUBE, TIRE (DUNLOP) (2.75/3.00-21)	001	0
12	44712-MG7-003	TUBE, TIRE (BRIDGESTONE)	001	0
13	44713-400-004	FLAP, TIRE (DUNLOP) (1.40/1.60-21)	001	0
13	44713-MG7-003	FLAP, TIRE (BRIDGESTONE) (1.85X21)	001	0
14	44800-MK5-013	BOX ASSY., SPEEDOMETER GEAR	001	0
15	44806-KF0-000	GEAR, SPEEDOMETER	001	0
16	44809-402-000	WASHER, SPEEDOMETER GEAR	002	0
17	45351-MS8-010	DISK, FR. BRAKE	001	0
18	90105-MK5-010	BOLT, DISK, 8X22	006	0
19	90755-229-003	OIL SEAL, 21X37X7 (ARAI)	001	0
19	90755-229-005	OIL SEAL, 21X37X7 (NOK)	001	0
20	91258-410-006	DUST SEAL, 40X50X5 (NOK)	001	0
20	91258-410-013	DUST SEAL, 40X50X5 (ARAI)	001	0
21	93700-050200G	SCREW, OVAL, 5X20	001	0
22	96140-6202010	BEARING, RADIAL BALL, 6202U	002	0
22	96150-6202010	BEARING, RADIAL BALL, 6202UU	002	0

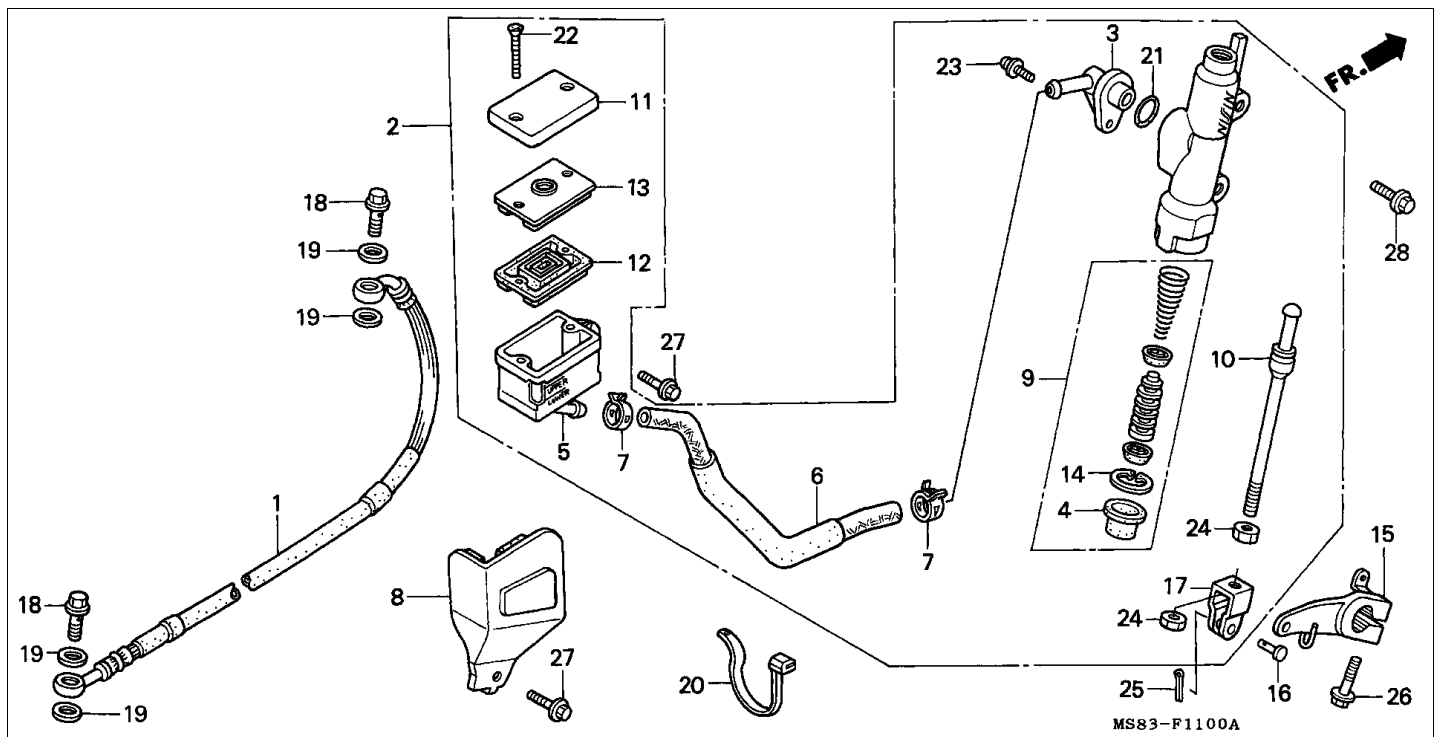

MS83-F1100A


Block F-11 REAR BRAKE MASTER CYLINDER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	43310-MS8-003	HOSE, RR. BRAKE	001	0
2	43500-MS8-611	CYLINDER ASSY., RR. MASTER	001	0
3	43503-MS8-006	CONNECTOR	001	0
4	43504-MB2-006	BOOT COMP.	001	0
5	43511-KT8-006	CUP COMP., OIL	001	0
6	43512-MS8-006	HOSE, MASTER CYLINDER	001	0
7	43514-445-771	CLAMP, MASTER CYLINDER OIL HOSE	002	0
8	43519-MS8-000	PROTECTOR, OIL CUP HEAT	001	0
9	43520-MB2-305	PISTON SET, MASTER CYLINDER (NISSIN)	001	0
10	43530-MS8-006	ROD COMP., PUSH	001	0
11	45513-KK1-771	CAP, MASTER CYLINDER	001	0
12	45520-MG7-006	DIAPHRAGM	001	0
13	45521-HA2-006	PLATE, DIAPHRAGM	001	0
14	46182-500-013	CIRCLIP	001	0
15	46502-MS8-000	ARM, RR. BRAKE MIDDLE	001	0
16	46503-KW3-000	PIN COMP., BRAKE ROD	001	0
17	46504-MB2-006	JOINT, BRAKE ROD	001	0
18	90145-KM3-750	BOLT, OIL, 10X22	002	0
19	90545-300-000	WASHER, OIL BOLT	004	0
20	90651-MA6-720	BAND, WIRE HARNESS	001	0
21	91212-422-006	O-RING, 14.8X2.4	001	0
22	93600-040401G	SCREW, FLAT, 4X40	002	0
23	93893-0401218	SCREW-WASHER, 4X12	001	0
24	94002-080000S	NUT, HEX., 8MM	002	0
25	94201-20120-	PIN, SPLIT, 2.0X12	001	0
26	95701-0802508	BOLT, FLANGE, 8X25	001	0
27	96500-0601400	BOLT, FLANGE, 6X14	002	0
28	96500-0601600	BOLT, FLANGE, 6X16	002	0

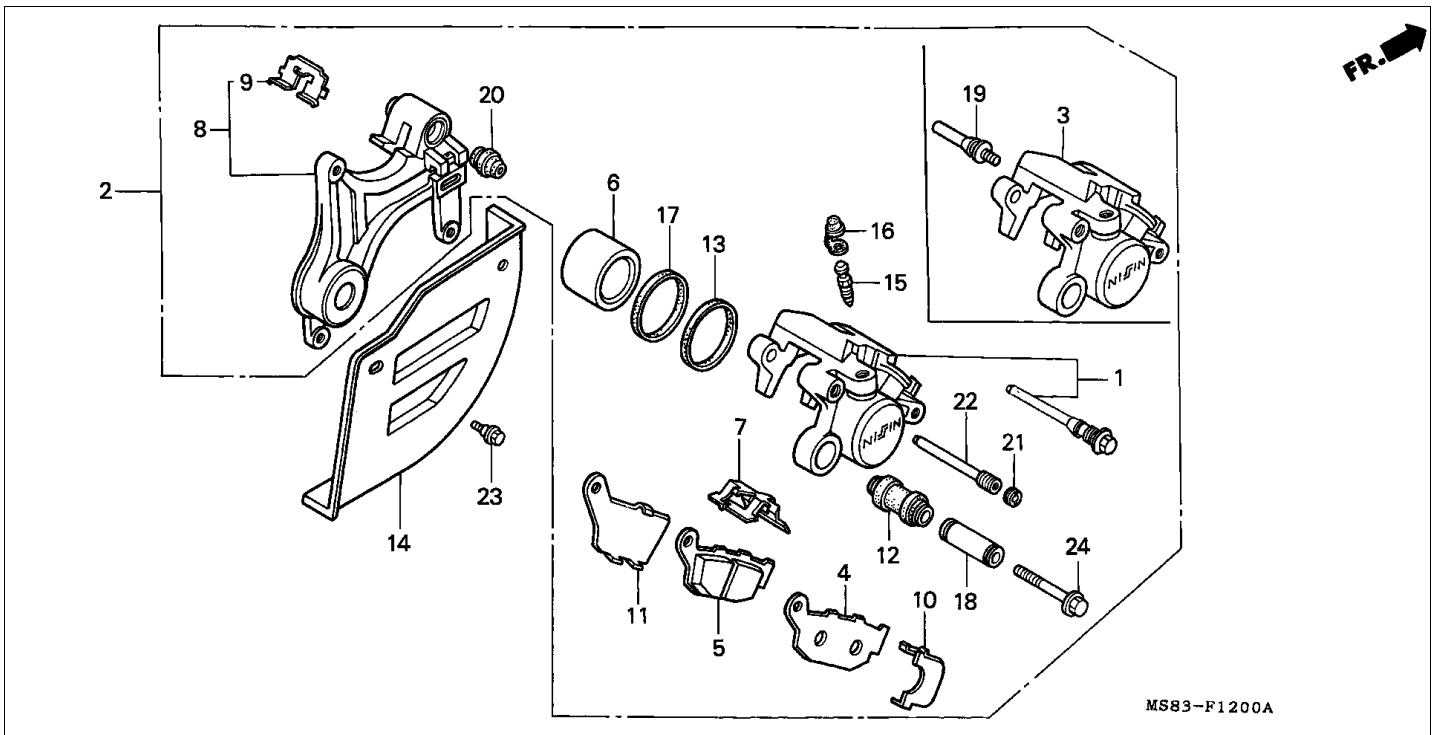

Block F-12 REAR BRAKE CALIPER


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	43050-MN9-305	BODY SET, RR. CALIPER	001	0
2	43100-MS8-006	CALIPER ASSY., RR. (NISSIN)	001	0
2	43100-MS8-016	CALIPER ASSY., RR. (NISSIN)	001	0
2	43100-MS8-026	CALIPER ASSY., RR. (NISSIN)	001	0
3	43101-MN9-016	BODY, RR. CALIPER (NISSIN)	001	0
4	43105-KT7-762	PAD COMP. A, RR.	001	0
5	43106-KT7-762	PAD COMP. B, RR.	001	0
6	43107-KT7-761	PISTON	001	0
7	43108-KT7-761	SPRING, PAD	001	0
8	43110-MS8-006	BRACKET COMP., RR.	001	0
9	43112-KT7-761	RETAINER	001	0
10	43114-KT7-761	SHIM A	001	0
11	43115-MN9-006	SHIM B	001	0
12	43132-KT7-761	BOOT, SLEEVE	001	0
13	43209-371-006	SEAL, PISTON (38MM)	001	0
14	43330-MN9-000	COVER, RR. DISK	001	0
15	43352-568-003	SCREW, BLEEDER	001	0
16	43353-461-771	CAP, BLEEDER	001	0
17	45109-443-870	DUST SEAL	001	0
18	45111-MA3-006	SLEEVE	001	0
19	45131-HA5-671	BOLT A, PIN	001	0
20	45133-MA3-006	BOOT B	001	0
21	45203-MG3-006	PLUG, PIN	001	0
21	45203-MG3-016	PLUG, PIN	001	0
22	45215-KA3-731	PIN, HANGER	001	0
22	45215-KA3-732	PIN, HANGER	001	0
23	90111-GJ5-000	BOLT, FLANGE, 6MM	002	0
24	90180-MA3-006	BOLT, FLANGE, 8X49	001	0

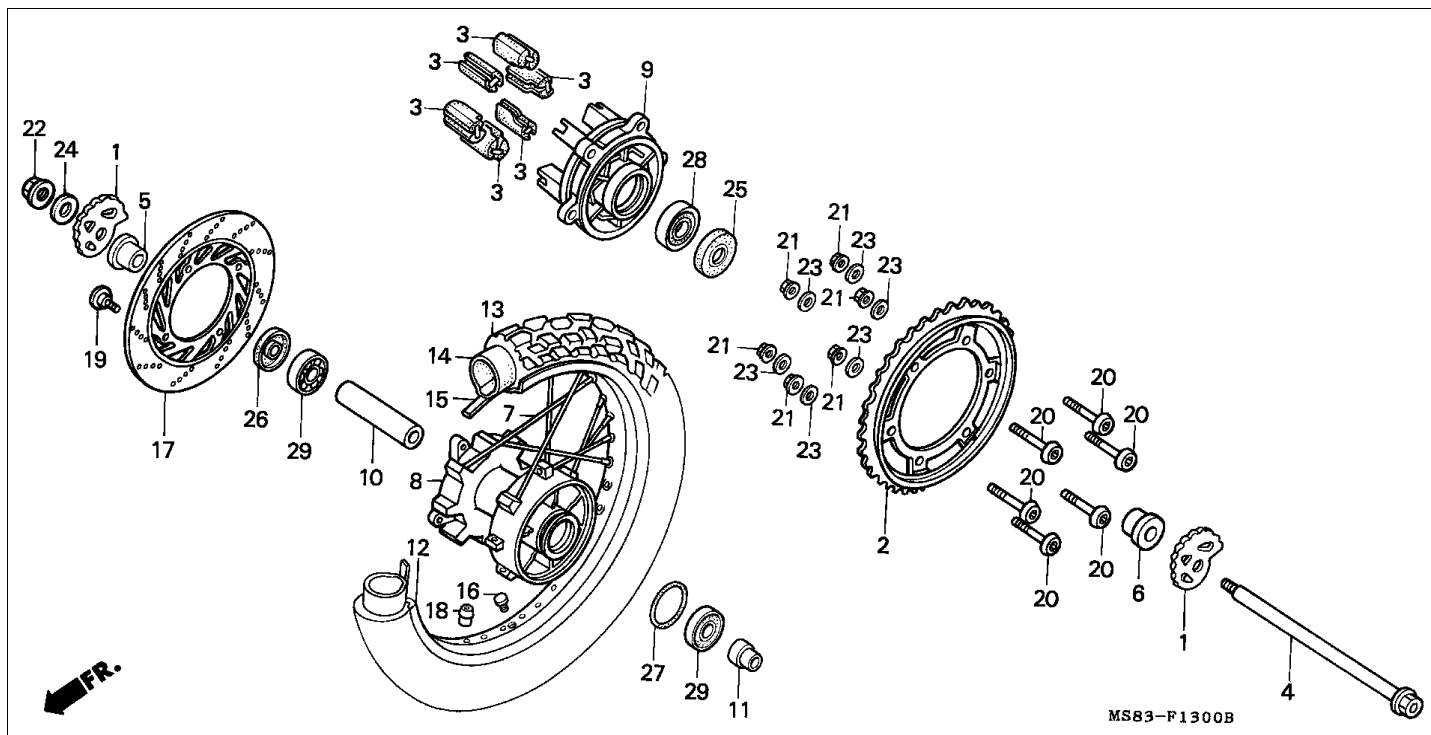

MS83-F1300B


Block F-13 REAR WHEEL

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	40544-MS8-000	ADJUSTER, CHAIN	002	0
2	41200-MS8-610	SPROCKET COMP., FINAL DRIVEN (49T)	001	0
3	41241-MC4-010	RUBBER, RR. WHEEL DAMPER	006	0
4	42301-MS8-003	AXLE, RR. WHEEL	001	0
5	42311-KS5-000	COLLAR, RR. WHEEL SIDE	001	0
6	42312-MC4-000	COLLAR, RR. WHEEL	001	0
7	426A0-MS8-003	SPOKE SET, RR.	032	0
8	42601-MS8-000	HUB, RR. WHEEL	001	0
8	42601-MS8-010	HUB, RR. WHEEL	001	0
9	42611-MS8-000	FLANGE, FINAL DRIVEN	001	0
10	42620-MS8-000	COLLAR A, RR. AXLE DISTANCE	001	0
11	42625-MC4-000	COLLAR B, RR. AXLE DISTANCE	001	0
12	42701-MS8-003	RIM, RR. WHEEL	001	0
13	42711-MS8-004	TIRE, RR. (DUNLOP) (130/90-17 68S K560)	001	0
13	42711-MS8-013	TIRE, RR. (BS) (130/90-17 68S TW42A)	001	0
14	42712-MS8-003	TUBE, TIRE (BS) (130/90-17)	001	0
14	42712-MS8-004	TUBE, TIRE (DUNLOP) (130/90-17)	001	0
15	42713-MS8-003	FLAP, TIRE (BS) (2.75-17)	001	0
15	42713-MS8-004	FLAP, TIRE (DUNLOP) (2.75/3.00-17)	001	0
16	42717-329-000	CAP, RIM HOLE	001	0
17	43351-MS8-000	DISK, RR. BRAKE	001	0
18	44606-283-000	BALANCER (20G)	N	0
19	90105-KS6-700	BOLT, DISK, 6X17	004	0
19	90105-MK5-010	BOLT, DISK, 8X22	004	0
20	90128-MM9-000	BOLT, SPROCKET FIXING	006	0
21	90304-GA6-003	NUT, AXLE, 10MM	006	0
22	90305-ME5-003	NUT, FLANGE, 16MM	001	0
23	90465-MM9-000	WASHER, 10MM	006	0
24	90530-MS8-000	WASHER, SPECIAL	001	0
25	91252-MC4-003	OIL SEAL, 28X47.2X7 (ARAI)	001	0
25	91252-MC4-005	OIL SEAL, 28X47.2X7 (NOK)	001	0
26	91252-428-000	OIL SEAL, 25X40X7	001	0
27	91302-317-700	O-RING, 54X2	001	0
28	96140-6204010	BEARING, RADIAL BALL, 6204U	001	0
29	96150-6203010	BEARING, RADIAL BALL, 6203UU	002	0

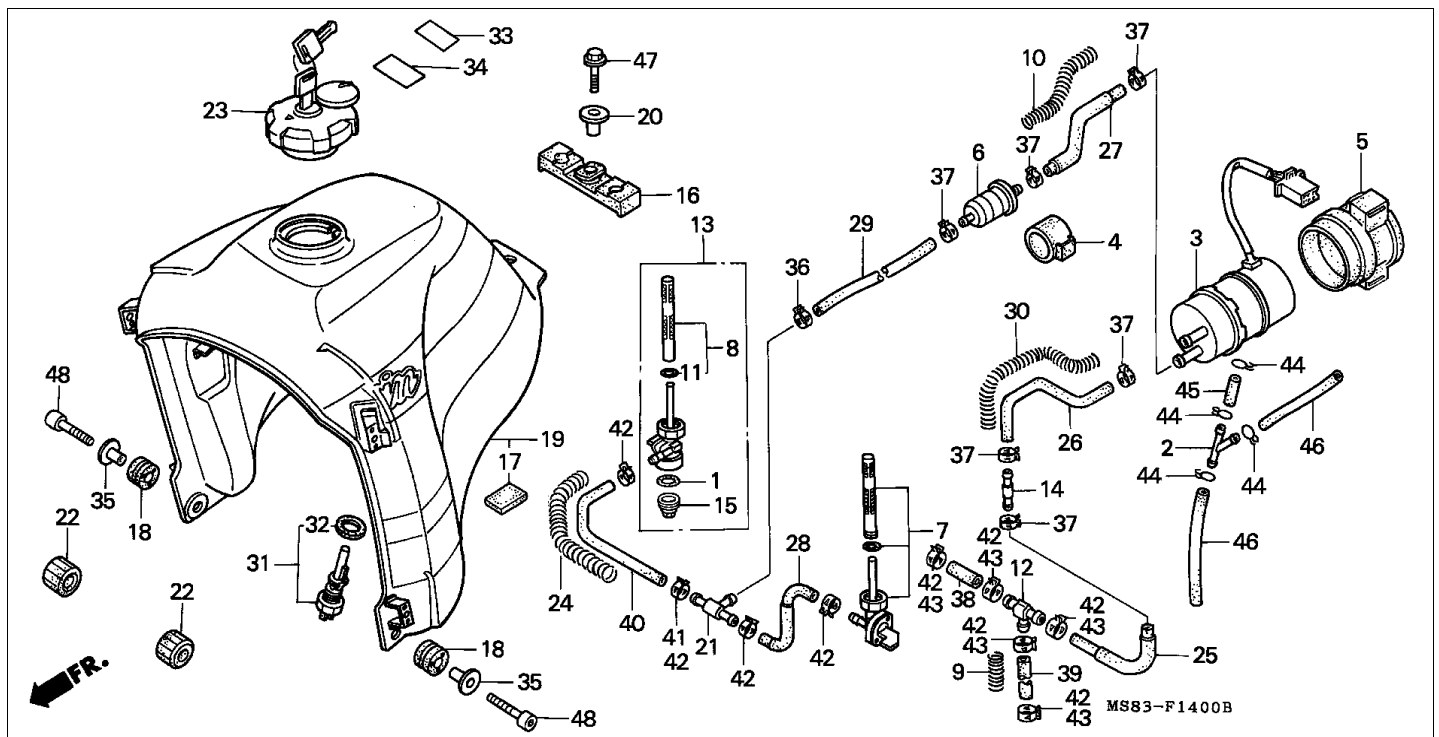


Block F-14 FUEL TANK/FUEL PUMP

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	16173-001-004	PACKING, FUEL STRAINER CUP	001	0
2	16235-MG2-880	JOINT, VENT TUBE	001	0
3	16710-MS8-005	PUMP ASSY., FUEL	001	0
4	16711-MF2-000	HOLDER, STRAINER	001	0
5	16711-MN8-000	RUBBER, FUEL PUMP MOUNTING	001	0
6	16900-MG8-003	STRAINER COMP., FUEL	001	0
7	16950-MS8-005	COCK ASSY., FUEL	001	0
7	16950-MS8-015	COCK ASSY., FUEL	001	0
8	16952-MS8-005	SCREEN, FUEL STRAINER	001	0
9	16953-MM9-000	WIRE A, GUARD	001	0
10	16955-MM5-000	WIRE, TUBE GUARD	001	0
11	16958-MA1-731	O-RING	001	0
12	16958-MB0-000	JOINT, FUEL TUBE	001	0
13	16960-MS8-005	COCK ASSY., FUEL	001	0
13	16960-MS8-015	COCK ASSY., FUEL	001	0
14	16966-MJ4-670	JOINT, FUEL TUBE	001	0
15	16967-GA6-671	CUP, FUEL STRAINER	001	0
16	17503-MM9-000	RUBBER, RR. TANK	001	0
17	17511-MS8-300	CUSHION	001	0
18	17513-HA5-000	RUBBER, FUEL TANK SETTING	002	0
19	17520-MS8-000	TANK SET, FUEL (WL) *NH138/PB200*	001	0
20	17525-KG7-830	COLLAR, FUEL TANK MOUNTING	001	0
21	17555-MS8-000	JOINT, FUEL TUBE THREE WAY	001	0
22	17611-MM9-000	CUSHION, FUEL TANK FR.	002	0
23	17620-MN9-003	CAP COMP., FUEL FILLER	001	0
23	17620-MN9-013	FUEL FILL CAP COMP.	001	0
24	17684-MS8-000	WIRE, GUARD	001	0
25	17685-MS8-000	TUBE E, FUEL	001	0
26	17686-MS8-000	TUBE A, FUEL	001	0
27	17687-MS8-000	TUBE B, FUEL	001	0
28	17688-MS8-000	TUBE C, FUEL	001	0
29	17689-MS8-000	TUBE D, FUEL	001	0
30	18627-MN0-680	WIRE, TUBE GUARD	001	0
31	37810-MS8-008	SENSOR, FUEL RESERVE	002	0
32	37811-MB1-008	PACKING, FUEL RESERVE SENSOR	002	0
33	87517-KM9-640	LABEL, FR. FORK CAUTION	001	0
34	87560-ME9-670	MARK, DRIVE CAUTION *TYPEG*	001	0
35	90505-HA5-000	WASHER, TANK SETTING	002	0

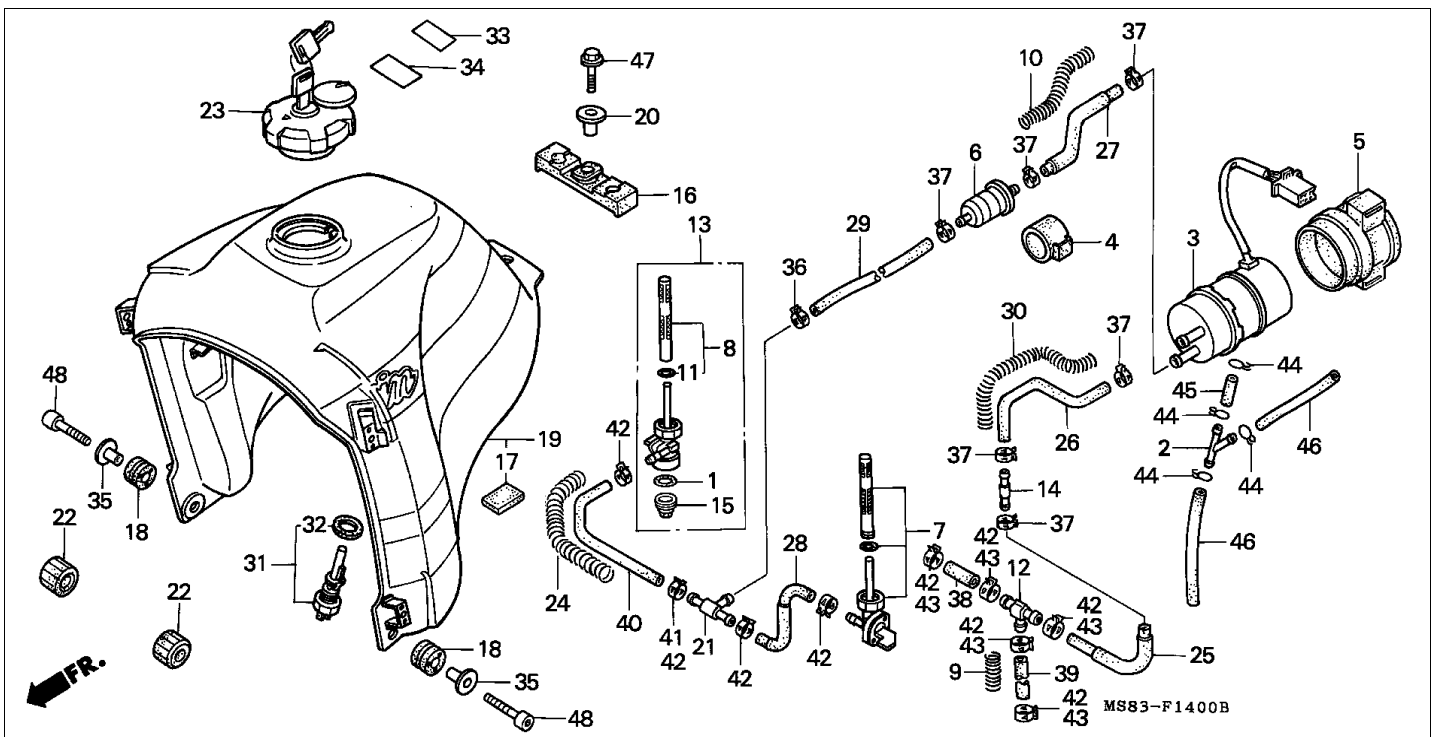


Block F-14 FUEL TANK/FUEL PUMP

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
36	91405-MS8-000	CLAMP, TUBE, (D17)	001	0
37	91406-MS8-000	CLAMP, TUBE, (D14.5)	006	0
38	95001-7504040	TUBE, FUEL, 7.3X40 (95001-75001-60M)	001	0
39	95001-7520040	TUBE, FUEL, 7.3X200 (95001-75001-60M)	001	0
40	95001-7535040	TUBE, FUEL, 7.3X350 (95001-75001-60M)	001	0
41	95002-02130-	CLIP, TUBE (B12.5)	001	0
42	95002-4120004	CLAMP, TUBE (D12)	009	0
42	95002-4120004	CLAMP, TUBE (D12)	008	0
44	95002-50000-	CLIP, TUBE (C9)	004	0
45	95005-5003030	TUBE, 5X30 (95005-50001-30M)	001	0
46	95005-5039030	TUBE, 5X390 (95005-50001-30M)	002	0
47	95800-0803500	BOLT, FLANGE, 8X35	001	0
48	96600-0803507	BOLT, SOCKET, 8X35	002	0

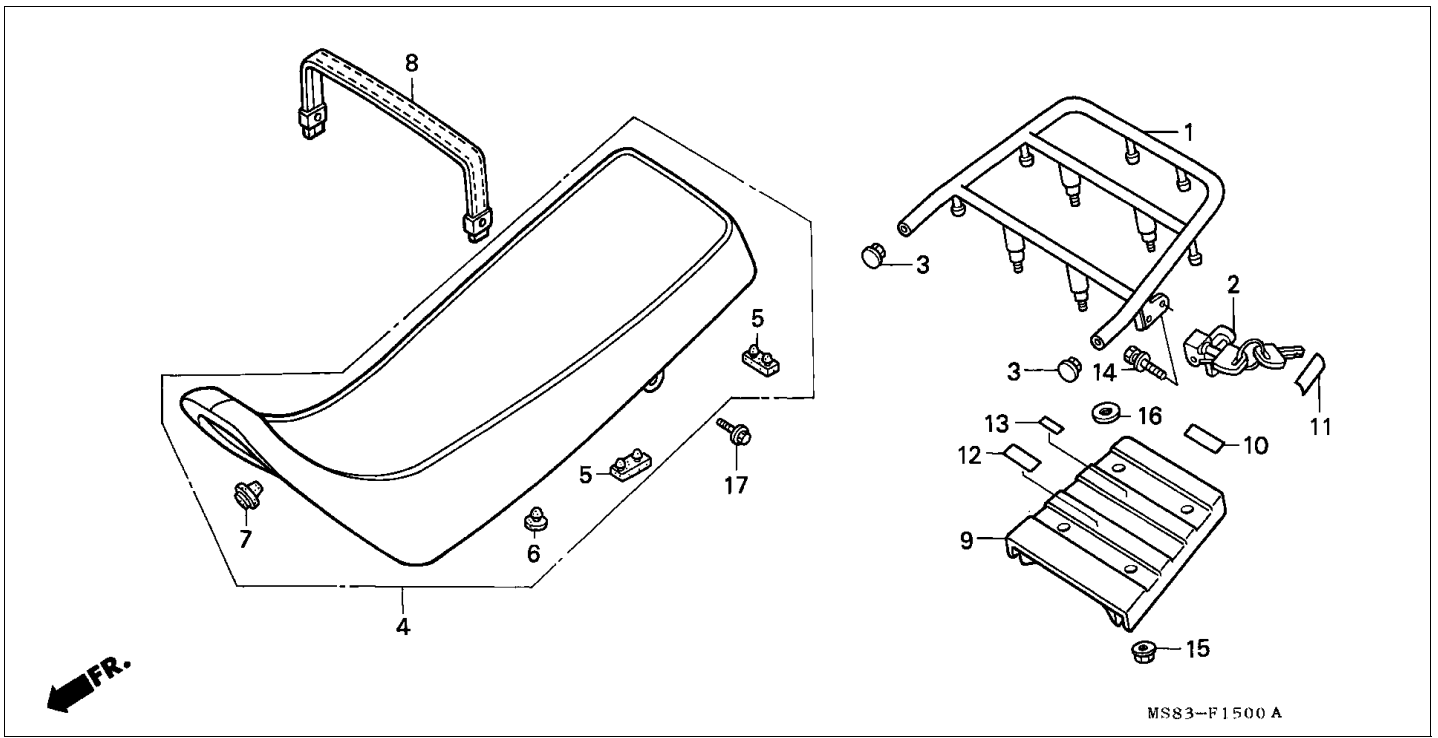


Block F-15 SEAT

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	50310-MS8-000	CARRIER COMP., RR. *NH146M*	001	0
2	50710-382-671	HOLDER ASSY., HELMET	001	0
3	65003-KN7-810	CAP, FR. BUMPER	002	0
4	77200-MS8-013	SEAT COMP., DOUBLE	001	0
5	77205-MG2-000	RUBBER A, SEAT SETTING	004	0
6	77206-GF0-000	RUBBER, SEAT CUSHION	002	0
7	77211-438-000	RUBBER, SEAT STOPPER	001	0
8	77216-MS8-000	SEATBELT COMP.	001	0
9	83710-MS8-000	PANEL, CARRIER (WOL) *PB186*	001	0
10	83711-MS8-300	MARK, CARRIER PANEL	001	0
11	87511-323-670	LABEL, HELMET HOLDER	001	0
12	87512-MS8-610	MARK, ACCESSORIES & LOADING CAUTION	001	0
13	87513-MS8-610	LABEL, LUGGAGE CARRIER CAUTION	001	0
14	90084-166-661	BOLT, DRIVE SPROCKET FIXING	002	0
15	90309-KF0-003	NUT, FLANGE, 8MM	004	0
16	90501-GK8-870	COLLAR, MUFFLER MOUNTING	004	0
17	95701-0601800	BOLT, FLANGE, 6X18	002	0

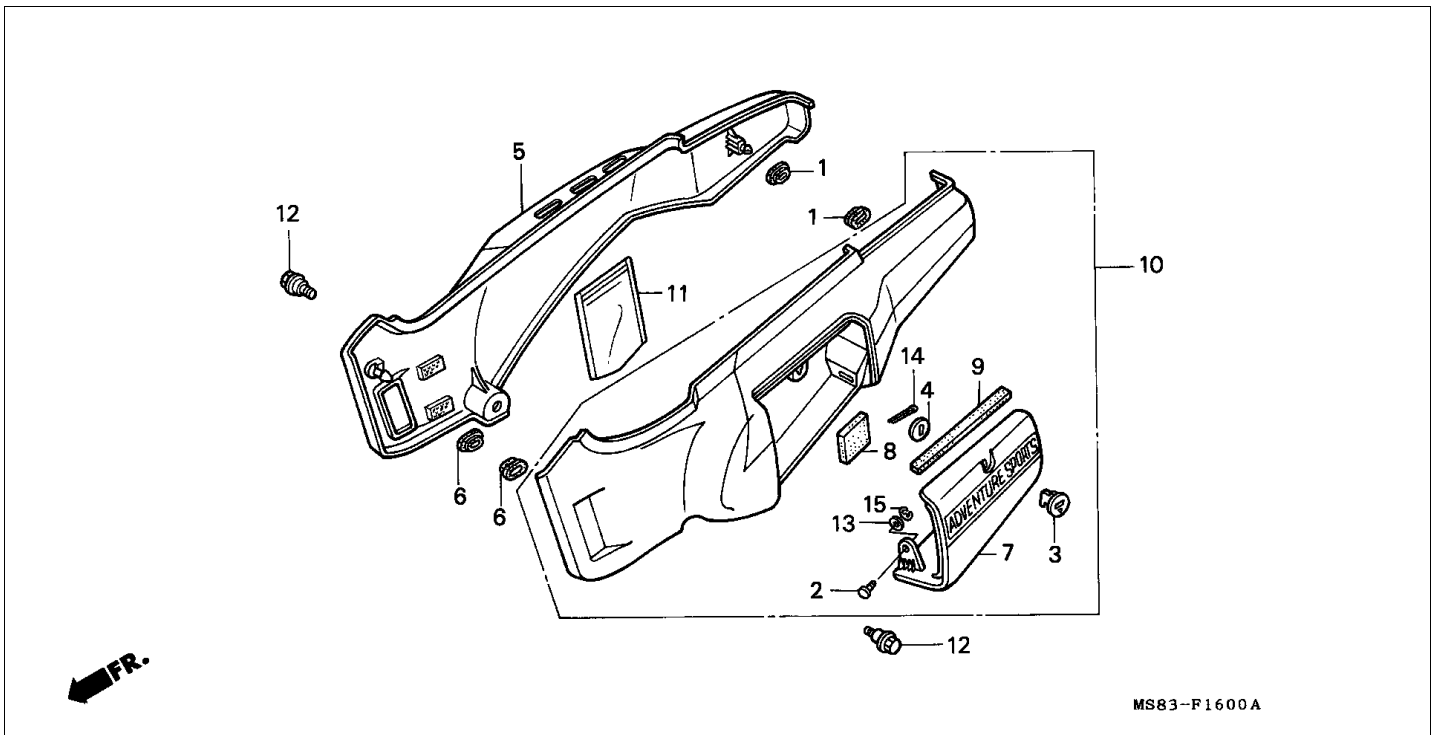

Block F-16 SIDE COVER


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	11346-MB4-770	GROMMET, RR. COVER (A)	002	0
2	64314-KS4-000	PIN, FUEL LID	002	0
3	83507-MJ1-000	BODY, KEY	001	0
4	83508-MJ1-000	WASHER, KEY BODY	001	0
5	83520-MS8-000	COVER SET, R. SIDE (WL) *NH138*	001	0
6	83551-300-000	GROMMET, AIR CLEANER CASE	002	0
7	836A0-MS8-000	LID SET, SIDE COVER (WL) *NH138*	001	0
9	83603-MS8-000	CUSHION, SIDE COVER LID (B)	001	0
10	83620-MS8-000	COVER SET, L. SIDE (WL) *NH138*	001	0
11	83642-GM2-000	BAG, OWNERS MANUAL	001	0
12	90102-MM9-010	BOLT, SPECIAL, 6X14	002	0
13	94101-04800-	WASHER, PLAIN, 4MM	002	0
14	94201-20100-	PIN, SPLIT, 2.0	001	0
15	94540-03028-	E-RING, 3MM	002	0

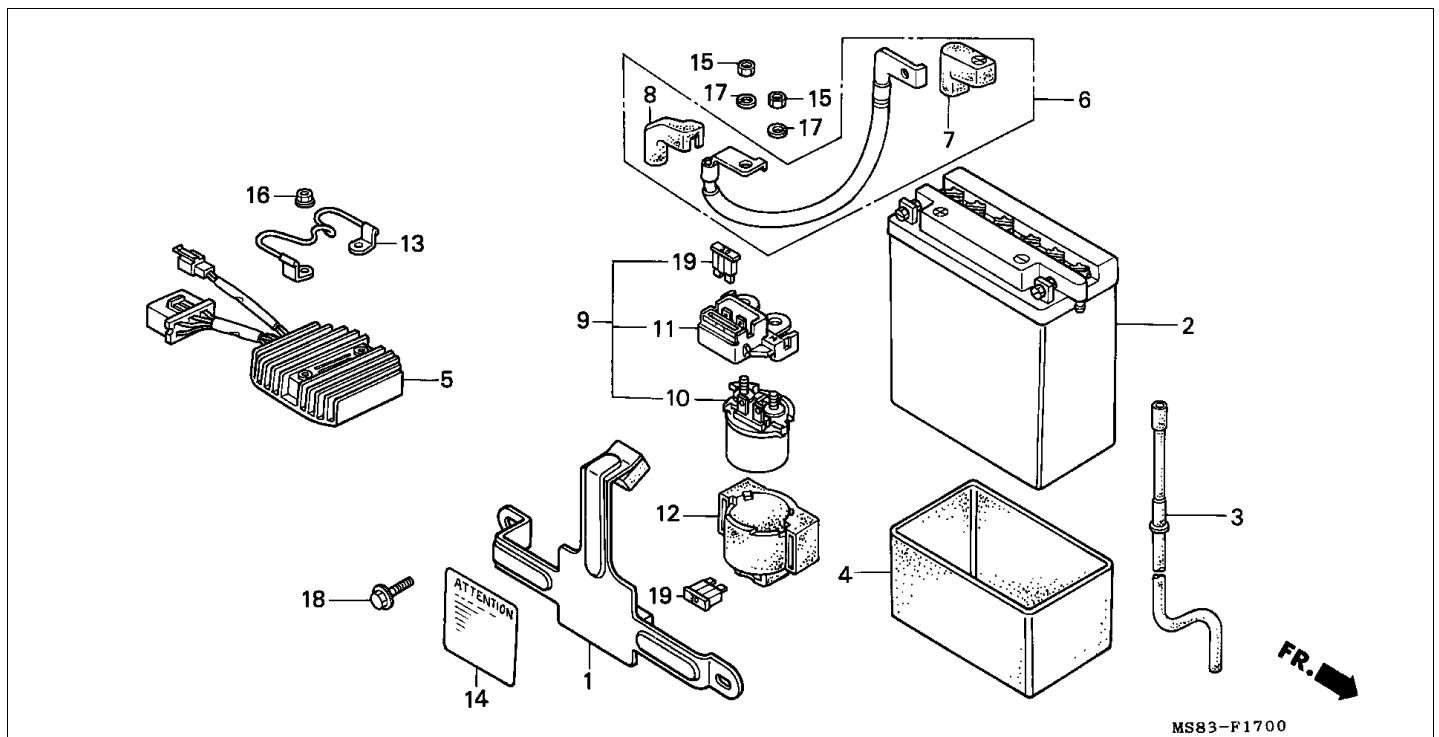

MS83-F1700


Block F-17 BATTERY

Refrnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	17250-MS8-000	BAND, BATTERY	001	0
2	31500-MK4-612	BATTERY (YB14-B2 YUASA)	001	0
3	31503-MM9-000	TUBE, BATTERY BREATHER	001	0
4	31511-MM9-000	CASE, BATTERY	001	0
5	31600-MS8-000	RECTIFIER ASSY., REGULATOR	001	0
6	32401-MM9-000	CABLE, STARTING MAGNETIC BATTERY	001	0
7	32414-MM9-000	COVER A, BATTERY TERMINAL	001	0
8	32416-MF5-000	COVER B, MAGNETIC SWITCH	001	0
9	35850-MK3-671	SWITCH ASSY., STARTER MAGNETIC	001	0
10	35851-MF5-751	SWITCH COMP., STARTER MAGNETIC	001	0
11	35855-MG7-751	HOLDER ASSY., FUSE	001	0
12	35856-MF5-751	RUBBER, SHOCK	001	0
13	80123-MS8-000	GUARD, REGULATOR	001	0
14	87506-MM9-600	MARK, BATTERY CAUTION	001	0
15	94002-060000S	NUT, HEX., 6MM	002	0
16	94050-06000-	NUT, FLANGE, 6MM	002	0
17	94111-06000-	WASHER, SPRING, 6MM	002	0
18	95701-0600807	BOLT, FLANGE, 6X8	002	0
19	98200-33000-	FUSE, BLADE (30A)	002	0

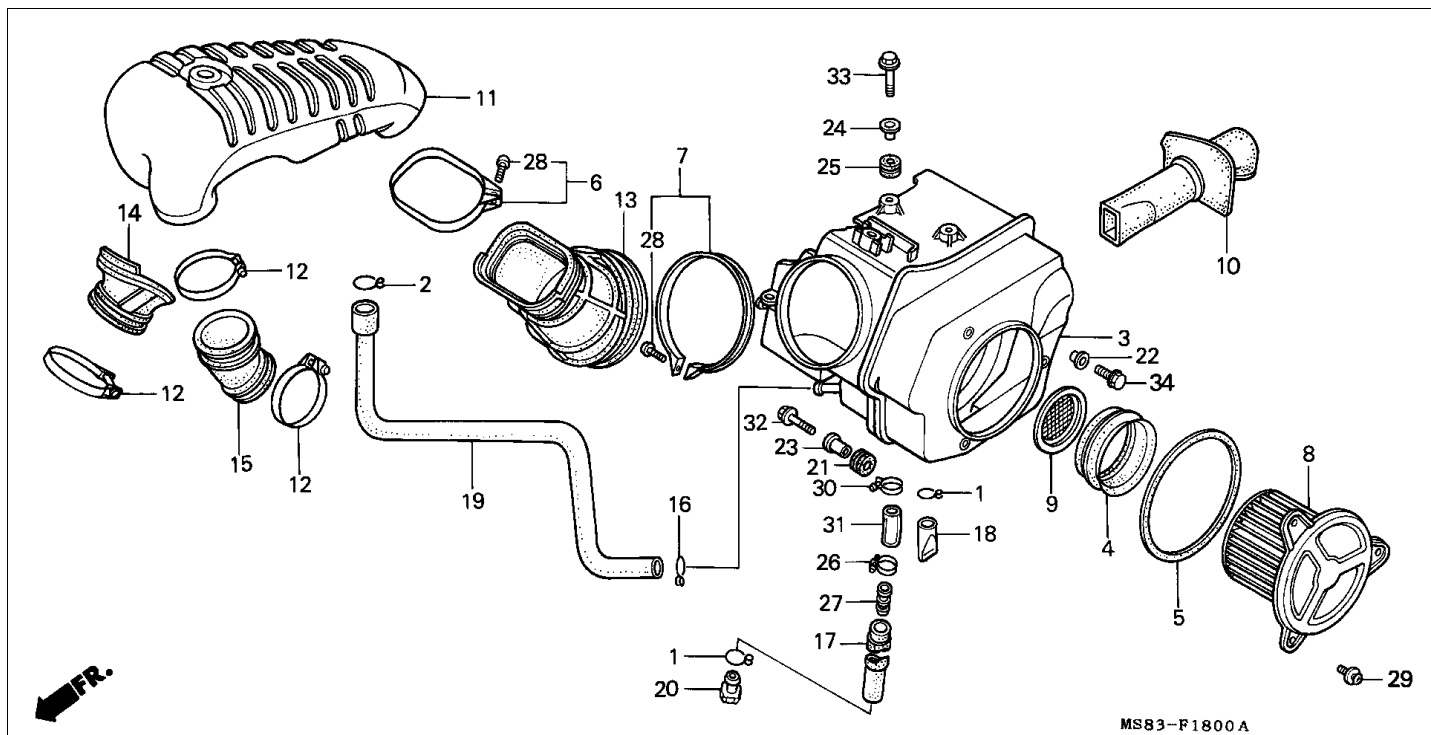

Block F-18 AIR CLEANER


Refrnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	15772-292-010	CLIP, BREATHER TUBE	002	0
2	15772-551-000	CLIP, BREATHER TUBE	001	0
3	17210-MS8-000	CASE COMP., AIR CLEANER	001	0
4	17213-MM9-300	SEAL, ELEMENT	001	0
5	17217-MF5-000	SEAL, AIR CLEANER CAP	001	0
6	17227-MM9-000	BAND, AIR CLEANER	001	0
7	17228-MM9-000	BAND, AIR CLEANER CONNECTING	001	0
8	17230-MM9-000	ELEMENT COMP., AIR CLEANER	001	0
9	17240-MM9-000	TRAP COMP., FRAME	001	0
10	17241-MM9-000	DUCT, AIR CLEANER INTAKE	001	0
11	17253-MM9-000	CHAMBER, AIR CLEANER	001	0
12	17256-358-000	BAND B, AIR CLEANER CONNECTING TUBE	003	0
13	17257-MM9-000	TUBE, MAIN CONNECTING	001	0
14	17258-MF5-000	TUBE, R. AIR CLEANER CHAMBER CONNECTING	001	0
15	17259-MF5-000	TUBE, L. AIR CLEANER CHAMBER CONNECTING	001	0
16	17316-611-000	CLIP, BREATHER TUBE	001	0
17	17357-MM9-000	TUBE B, DRAIN	001	0
18	17358-HA0-680	TUBE, DRAIN	001	0
19	17358-MM9-000	TUBE, OIL BREATHER	001	0
20	17370-382-870	PLUG, BREATHER TUBE	001	0
21	17611-MB1-000	CUSHION, FUEL TANK FR.	001	0
22	33118-MC7-000	COLLAR	001	0
23	61104-MA6-720	COLLAR	001	0
24	90501-MC4-000	COLLAR A, AIR CLEANER CASE	002	0
25	90505-MC4-000	GROMMET A, AIR CLEANER CASE	002	0
26	91462-393-780	CLIP, TUBE	001	0
27	91463-393-780	JOINT, TUBE	001	0
28	93500-050250A	SCREW, PAN, 5X25	002	0
29	93891-0601207	SCREW-WASHER, 6X12	003	0
30	95002-01160-	CLIP, TUBE (A16)	001	0
31	95003-3700631	TUBE, VINYL, 11X15X60 (95003-37001-60M)	001	0
32	95701-0602007	BOLT, FLANGE, 6X20	001	0
33	95701-0602008	BOLT, FLANGE, 6X20	002	0
34	95800-0601208	BOLT, FLANGE, 6X12	001	0

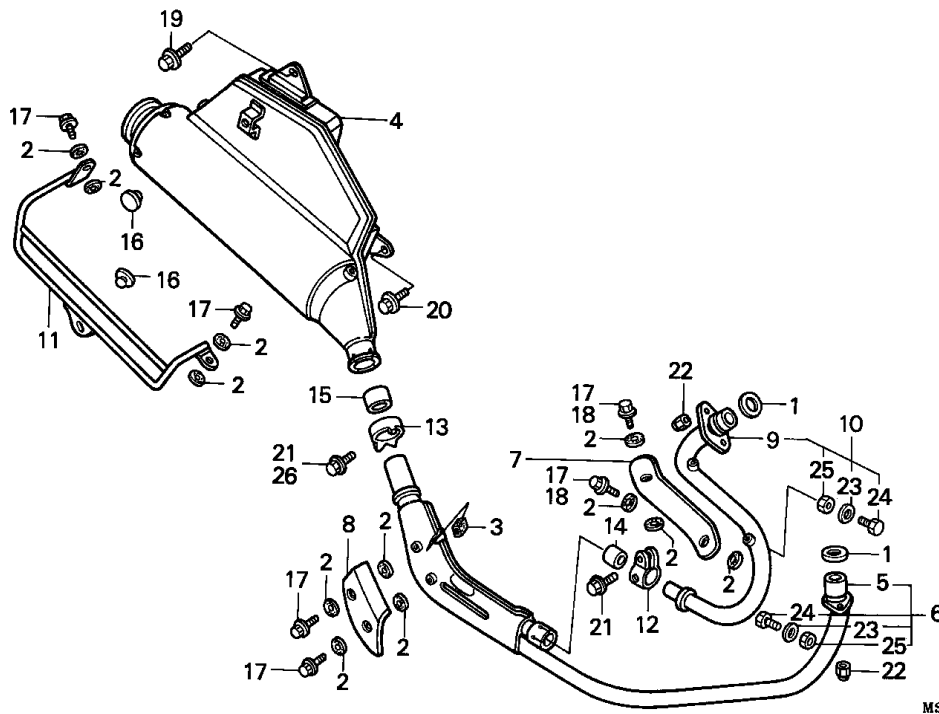

MS83-P1900A


Block F-19 EXHAUST MUFFLER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	18291-236-000	GASKET, EX. PIPE	002	0
1	18291-MN4-920	GASKET, EX. PIPE	002	0
2	18292-415-000	PACKING, PROTECTOR	012	0
3	18293-147-000	RUBBER, PROTECTOR PACKING	001	0
4	18310-MS8-621	MUFFLER COMP.	001	0
5	18320-MS8-003	PIPE COMP., FR. EX.	001	0
7	18326-MS8-010	PROTECTOR, RR. EX.	001	0
8	18327-MS8-010	PROTECTOR, LOWER EX.	001	0
9	18330-MS8-003	PIPE, RR. EX.	001	0
11	18340-MS8-000	PROTECTOR, MUFFLER	001	0
12	18373-ML0-000	BAND, R. EX. PIPE	001	0
13	18376-KK9-720	BAND, L. RR. MUFFLER	001	0
14	18391-310-000	PACKING, MUFFLER	001	0
15	18392-MJ4-670	PACKING, RR. MUFFLER	001	0
16	83512-KA4-700	RUBBER, SIDE COVER	002	0
17	90101-MM9-000	BOLT, FLANGE, 6X12	004	0
18	90101-MS8-000	BOLT, FLANGE, 6X10	002	0
19	90211-KF0-000	BOLT, FLANGE, 10X30	001	0
20	90212-MN1-670	BOLT, FLANGE, 8X28	001	0
21	90216-MM9-000	BOLT, FLANGE, 8X32	001	0
22	90304-ME1-670	NUT, CAP, 8MM	004	0
26	96300-0803807	BOLT, FLANGE, 8X38	001	0

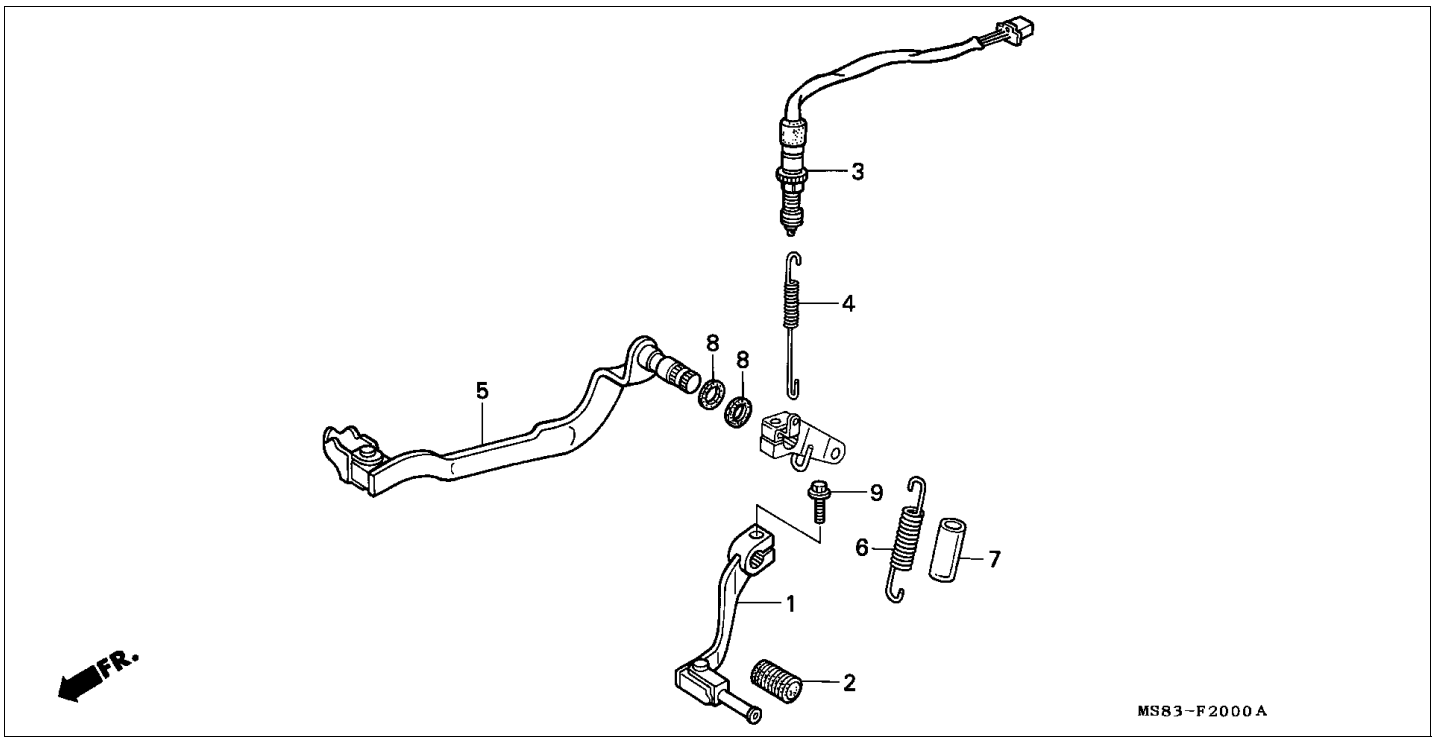

Block F-20 PEDAL


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	24700-MS8-000	PEDAL COMP., CHANGE	001	0
2	24781-KE1-000	RUBBER, CHANGE PEDAL	001	0
3	35350-MS8-000	SWITCH ASSY., RR. STOP	001	0
4	35357-MG2-000	SPRING, STOP SWITCH	001	0
5	46510-MS8-610	PEDAL COMP., BRAKE	001	0
6	46514-KN5-670	SPRING, BRAKE PEDAL	001	0
7	46515-KL4-000	TUBE, BRAKE PEDAL SPRING	001	0
8	46525-KK0-003	DUST SEAL, 17X20X2.5	002	0
9	95701-0602007	BOLT, FLANGE, 6X20	001	0

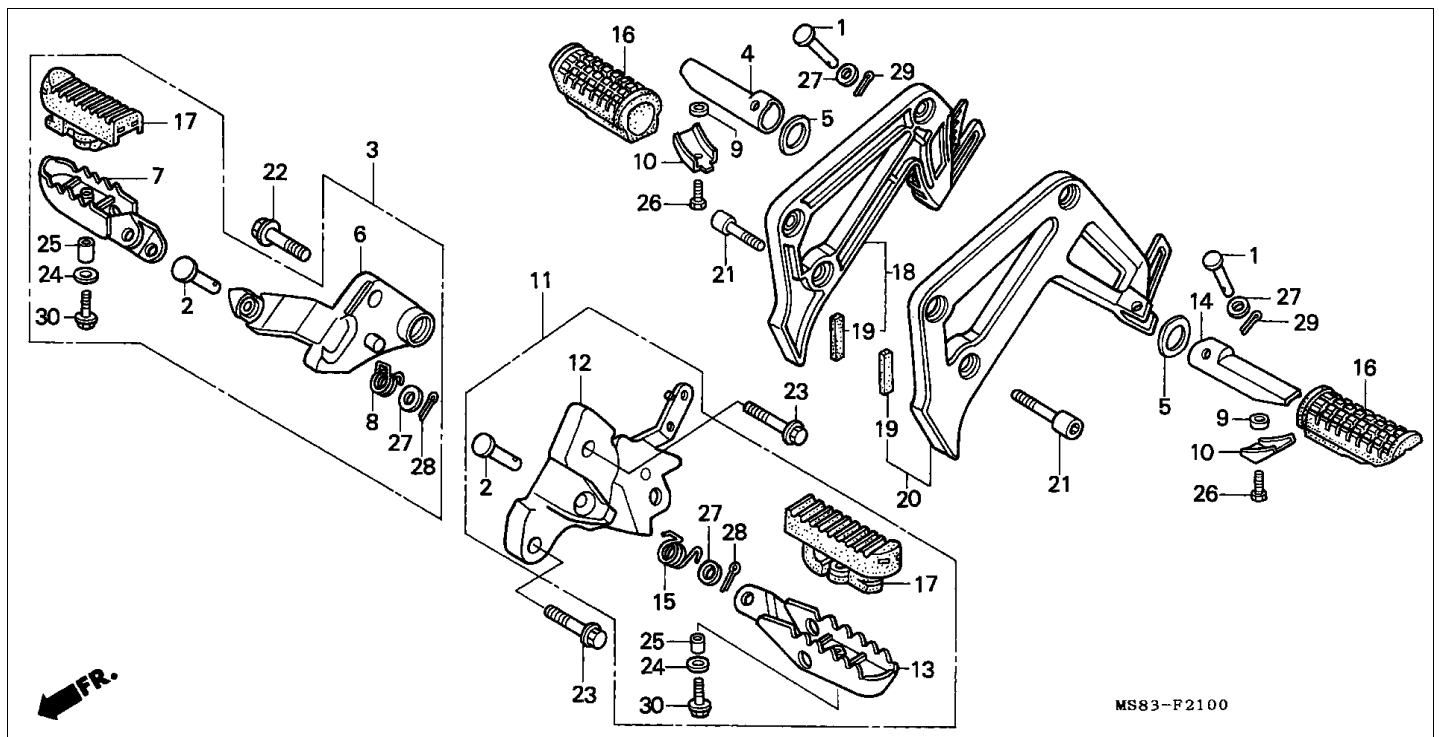

MS83-F2100


Block F-21 STEP

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	50603-MN1-670	PIN, STEP BAR JOINT	002	0
2	50603-033-000	PIN, STEP BAR JOINT	002	0
2	50603-033-010	PIN, STEP BAR JOINT	002	0
3	50610-MS8-000	ARM ASSY., R. STEP *NH146M*	001	0
4	50701-MS8-000	BAR, R. PILLION STEP	001	0
5	50614-KE8-000	PLATE, MAIN STEP SIDE	002	0
6	50615-MS8-000	ARM, R. STEP *NH146M*	001	0
7	50616-MM9-000	STEP COMP., R.	001	0
8	50617-MM9-000	SPRING, R. STEP RETURN	001	0
9	50618-KE8-000	COLLAR, 6.5X11X3	002	0
10	50619-KE8-000	PLATE, MAIN STEP LOWER	002	0
11	50620-MS8-000	ARM ASSY., L. STEP *NH146M*	001	0
12	50625-MS8-000	BASE COMP., L. STEP *NH146M*	001	0
13	50642-MM9-000	STEP COMP., L.	001	0
14	50801-MS8-000	BAR, L. PILLION STEP	001	0
15	50644-MM9-000	SPRING, L. STEP RETURN	001	0
16	50661-KE8-000	RUBBER, MAIN STEP	002	0
17	50661-MS8-000	RUBBER, STEP	002	0
18	50710-MS8-000	HOLDER, R. PILLION STEP	001	0
19	50714-MS8-000	RUBBER, PROTECTOR	002	0
20	50810-MS8-000	HOLDER, L. PILLION STEP	001	0
21	90109-MS8-000	BOLT, SOCKET, 8X10	006	0
22	90212-MM9-000	BOLT, FLANGE, 12X38	001	0
23	90213-MM9-000	BOLT, FLANGE, 10X38	002	0
24	90485-MB2-000	WASHER, 6MM	002	0
25	90503-MG7-000	SPACER, HANDLE END GUARD	002	0
26	92000-060121A	BOLT, HEX., 6X12	002	0
27	94101-08000-	WASHER, PLAIN, 8MM	004	0
28	94201-16150-	PIN, SPLIT, 1.6X15	002	0
28	94201-20150-	PIN, SPLIT, 2.0X15	002	0
29	94201-20150-	PIN, SPLIT, 2.0X15	002	0
30	95801-0602207	BOLT, FLANGE, 6X22	002	0

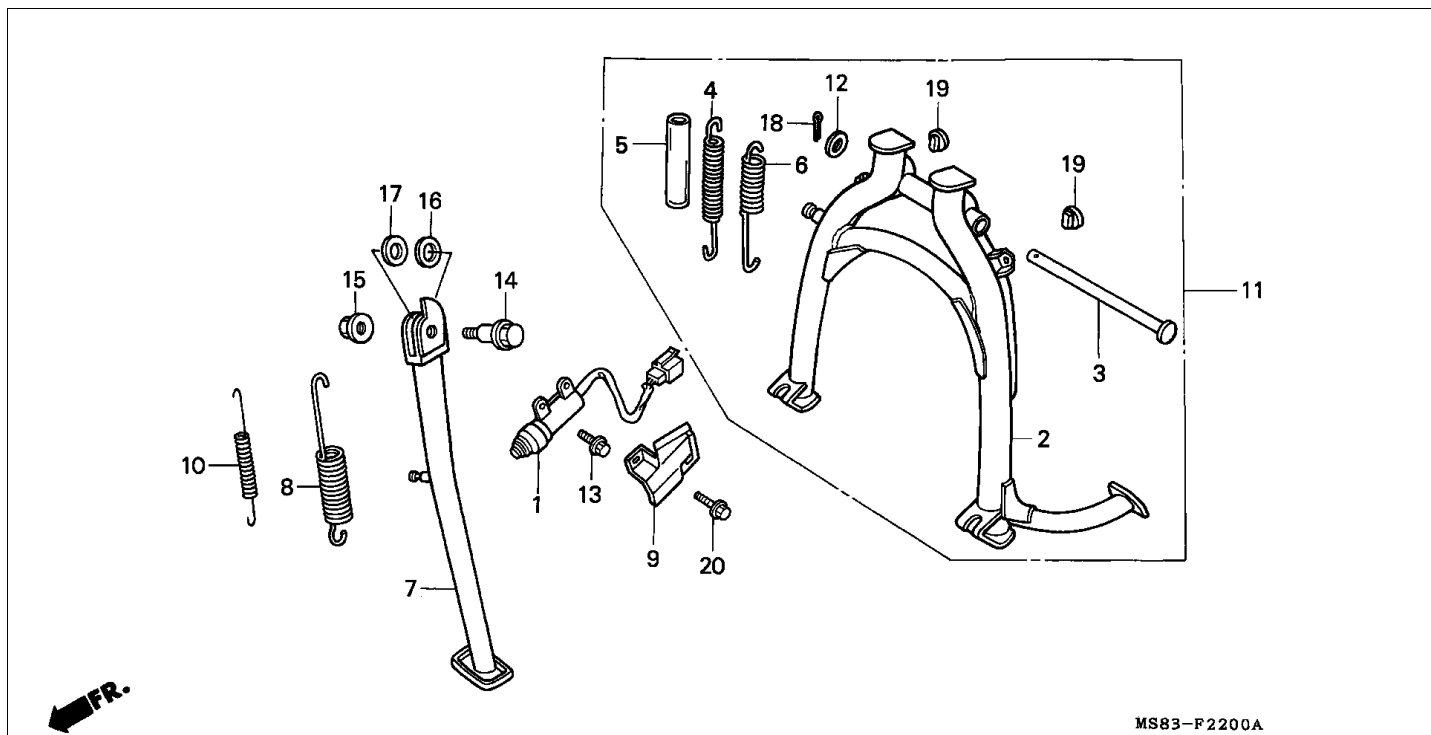


Block F-22 STAND

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	35710-MM9-830	SWITCH ASSY., SIDE STAND	001	0
2	50500-MS8-000	STAND COMP., MAIN	(1)	0
3	50501-MS8-010	SHAFT, MAIN STAND	(1)	0
4	50520-MF2-610	SUB SPRING, MAIN STAND	(1)	0
5	50521-MS8-700	TUBE	(1)	0
6	50522-KE8-000	SPRING, MAIN STAND	(1)	0
7	50530-MS8-000	BAR COMP., SIDE STAND	001	0
8	50535-MM9-610	SPRING, SIDE STAND	001	0
9	50535-MS8-000	COVER, SIDE STAND SWITCH	001	0
10	50542-MM9-830	SUB SPRING, SIDE STAND	001	0
11	50600-MS8-811	STAND SET, MAIN	(1)	0
12	50715-KE8-000	PLATE, PILLION STEP SIDE	(1)	0
13	90103-MM9-830	BOLT, FLANGE, 6X16	002	0
14	90108-MM9-000	SCREW, SIDE STAND PIVOT	001	0
14	90108-KV6-000	SCREW, SIDE STAND PIVOT	001	0
15	90203-MF9-710	NUT, SIDE STAND	001	0
16	90501-MF9-710	WASHER, THRUST, 24X13	001	0
17	90502-MF9-710	WASHER, THRUST, 24X10	001	0
18	94201-25350-	PIN, SPLIT, 2.5X35	(1)	0
19	95011-62000-	RUBBER B, STAND STOPPER	(2)	0
20	90103-MM9-830	BOLT, FLANGE, 6X16	001	0

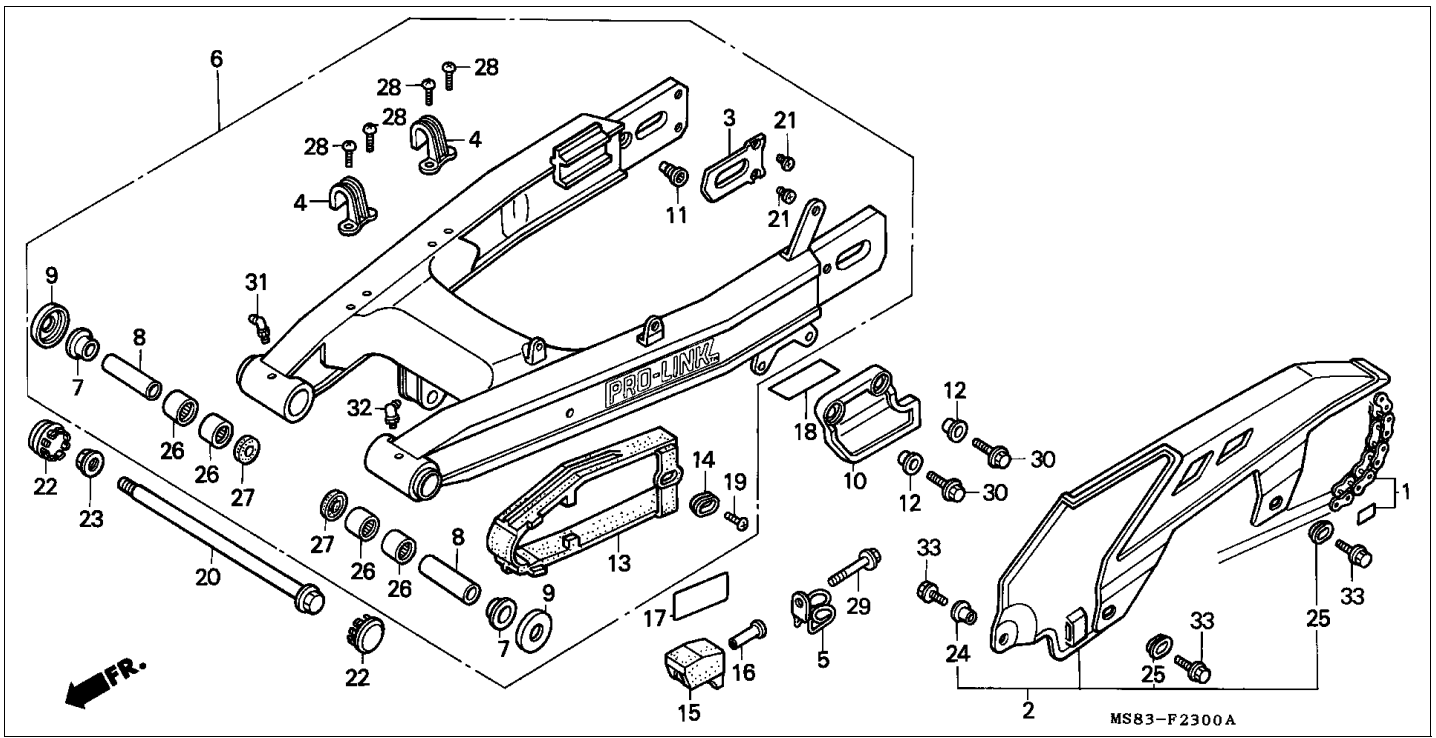


Block F-23 REAR FORK/CHAIN CASE

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	405A3-MS8-611	CHAIN SET, DRIVE (525V.7-124LE DAIDO)	001	0
1	405A3-MS8-612	CHAIN SET, DRIVE (525SMO.Z3-124LE TAKASAGO)	001	0
2	40510-MM9-000	CASE, DRIVE CHAIN	001	0
3	42307-MK5-000	WASHER, RR. FORK INNER	002	0
4	43468-KS6-700	GUIDE, RR. BRAKE HOSE	002	0
5	50178-MS8-000	CLAMP, BREATHER TUBE	001	0
6	52100-MS8-610	FORK ASSY., RR. (WL)	001	0
7	52109-MM9-300	BUSH, PIVOT THRUST	002	0
8	52141-MM9-000	COLLAR, RR. FORK	002	0
9	52144-KR8-003	CAP, DUST SEAL (ARAI)	002	0
9	52144-KR8-005	CAP, DUST SEAL (NIPPON)	002	0
10	52156-KB7-000	GUARD, CHAIN	001	0
11	52156-KV6-000	PIN, CHAIN ADJUSTER	002	0
12	52159-KB7-000	COLLAR, CHAIN GUARD	002	0
13	52170-MS8-005	SLIDER, CHAIN	001	0
14	52171-KR6-000	WASHER, CHAIN SLIDER	001	0
15	52181-MM9-000	SLIDER, CHAIN LOWER	001	0
16	53209-HA0-000	COLLAR, HANDLE COVER MOUNTING	001	0
17	87505-MS8-610	MARK, TIRE CAUTION	001	0
18	87509-MS8-610	MARK, DRIVE CHAIN CAUTION	001	0
19	90115-KV3-700	SCREW, PAN, 5X8	001	0
20	90121-MS8-000	BOLT, RR. FORK PIVOT	001	0
21	90124-KA3-830	SCREW, FLAT, 5X4.5	004	0
22	90302-MM9-000	CAP, PIVOT	002	0
23	90305-GE8-003	NUT, U, 14MM	001	0
24	90512-422-000	WASHER, CHAIN CASE SETTING	001	0
25	90513-405-000	WASHER, 6X9	002	0
26	91071-KS6-004	BEARING, SWINGARM PIVOT (NTN)	004	0
27	91254-KS6-003	DUST SEAL, 20X26X4.5 (ARAI)	002	0
27	91254-KS6-005	DUST SEAL, 20X26X5 (NOK)	002	0
28	93500-050080A	SCREW, PAN, 5X8	004	0
29	95700-0604000	BOLT, FLANGE, 6X40	001	0
30	96000-0602000	BOLT, FLANGE, 6X20	002	0
31	96201-60000-	NIPPLE, GREASE (B.T6)	001	0
32	96201-60000-	NIPPLE, GREASE (B.T6)	001	0
33	96300-0601207	BOLT, FLANGE, 6X12	003	0

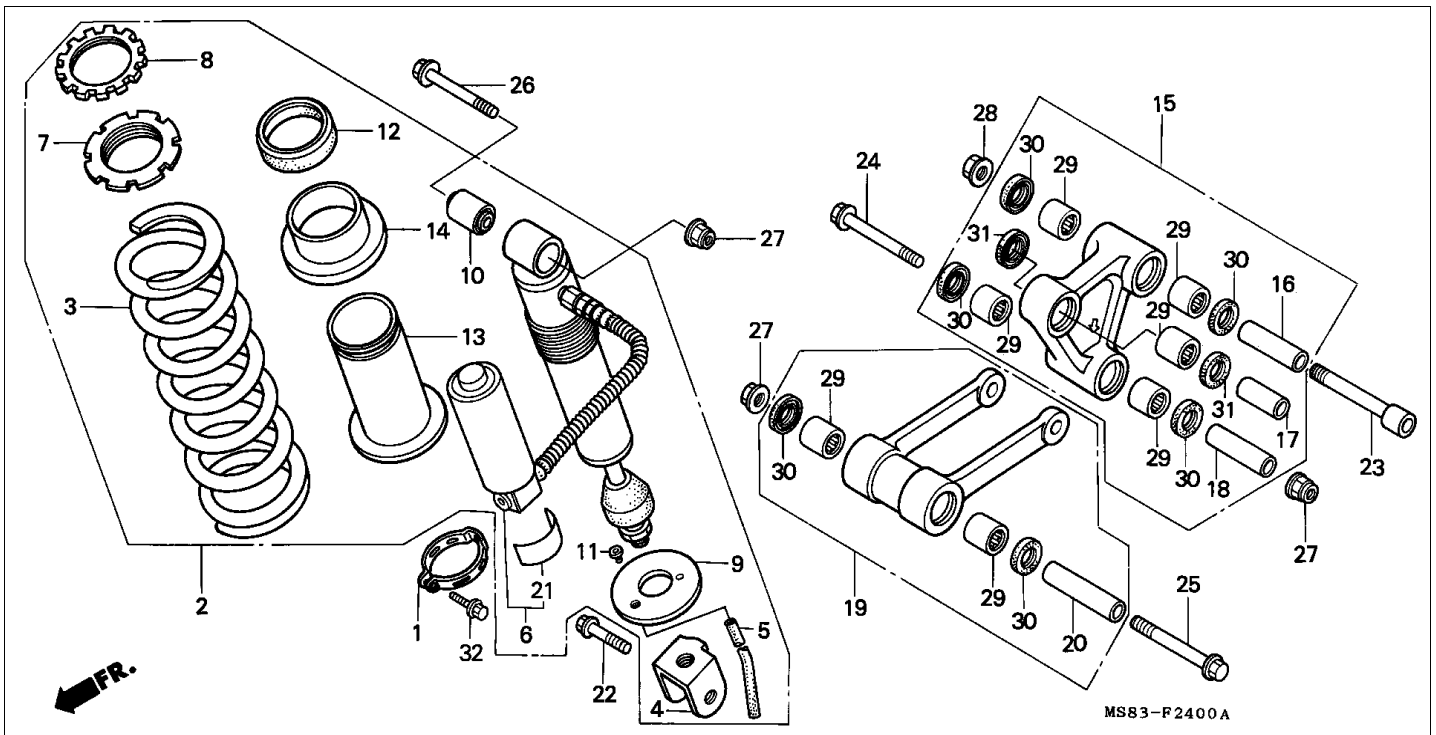


Block F-24 REAR CUSHION

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	50252-KR6-000	BAND, SUB TANK	001	0
2	52400-MS8-611	CUSHION ASSY., RR. (SHOWA) *NH1*	001	0
3	52401-MS8-003	SPRING, RR. CUSHION (SHOWA) *NH1*	001	0
4	52403-MM9-003	METAL, JOINT	001	0
5	52405-KB7-003	PIPE, DRAIN	001	0
6	52410-MS8-611	DAMPER COMP., RR.	001	0
7	52422-MA0-003	ADJUSTER, SPRING	001	0
8	52423-KA3-711	NUT, ADJUSTER	001	0
9	52424-KB7-003	STOPPER, SPRING SEAT	001	0
10	52451-MA0-000	BUSH, DAMPER LOWER	001	0
11	52456-KB7-003	JOINT, PIPE	001	0
12	52457-KB7-003	DUST SEAL	001	0
13	52458-KR6-003	GUIDE, SPRING	001	0
14	52459-KB7-003	SEAT C, SPRING (SHOWA)	001	0
15	52460-MS8-000	ARM ASSY., CUSHION	001	0
16	52463-MS8-000	COLLAR A, CUSHION ARM	001	0
17	52464-MN9-000	COLLAR, DAMPER LOWER	001	0
18	52464-MS8-000	COLLAR B, CUSHION ARM	001	0
19	52470-MS8-000	ROD ASSY., CUSHION CONNECTING	001	0
20	52473-MS8-000	COLLAR, CUSHION CONNECTING ROD	001	0
21	87516-HB5-671	LABEL, RR. DAMPER WARNING	001	0
22	90126-KT2-000	BOLT, FLANGE, 10X42	001	0
23	90128-KN5-000	BOLT, SOCKET, 12X100	001	0
24	90130-KA3-730	BOLT, FLANGE, 10X98	001	0
25	90151-MM9-000	BOLT, FLANGE, 10X118	001	0
26	90154-HA6-000	BOLT, FLANGE, 10X60	001	0
27	90304-GE8-003	NUT, U, 10MM	003	0
28	90306-KF0-003	NUT, FLANGE, 12MM	001	0
29	91079-KA3-831	BEARING, NEEDLE, 17.5X24.5X22	007	0
30	91205-KT2-005	OIL SEAL, 17.5X26X5	006	0
31	91261-MN9-005	SEAL, CUSHION ARM, 17.5X26X2.5	002	0
32	96500-0602500	BOLT, FLANGE, 6X25	001	0

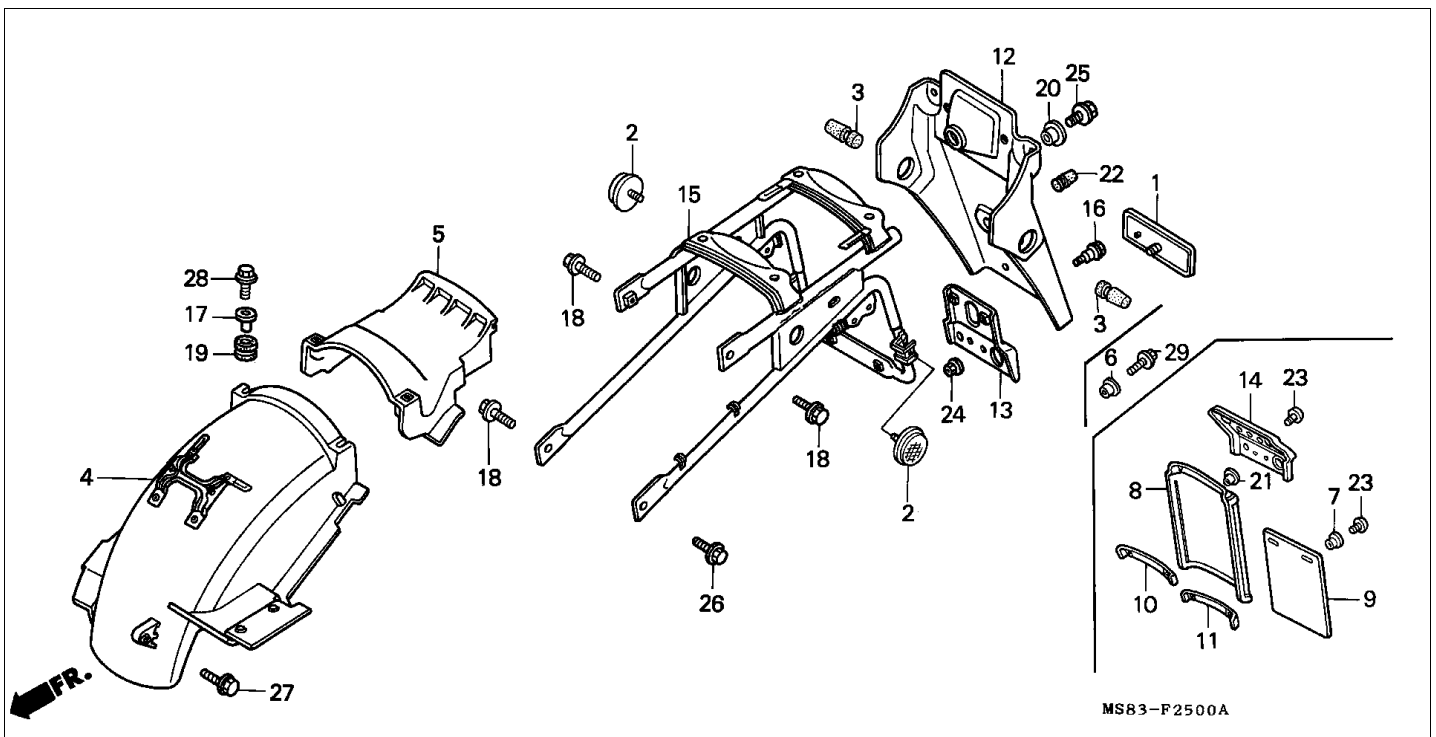


Block F-25 REAR FENDER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	33741-MC7-612	REFLECTOR, REFLEX	001	0
3	50352-434-000	RUBBER A, STOPPER	002	0
4	80102-MS8-000	FENDER COMP., RR. (B)	001	0
5	80103-MS8-000	FENDER C, RR.	001	0
8	80124-MK5-610	SUB MUDGUARD, RR.	001	0
10	80126-MG7-660	PLATE, RR. MUDGUARD	001	0
12	80211-MS8-610	MUDGUARD, RR.	001	0
14	80402-MK5-610	STAY, REFLECTOR	001	0
15	84710-MS8-000	STAY, TAILLIGHT BRACKET	001	0
17	90120-102-000	COLLAR, AIR CLEANER CASE	002	0
18	90157-HA7-670	BOLT, SPECIAL FLANGE, 8X18	003	0
19	90506-MC4-000	GROMMET B, AIR CLEANER CASE	002	0
20	90512-KB5-000	WASHER, 8X18	002	0
21	90520-134-000	WASHER, HEADLIGHT CASE SETTING	002	0
22	90899-422-610	PLUG, CONE TYPE	002	0
23	93500-050120G	SCREW, PAN, 5X12	002	0
24	94050-05000-	NUT, FLANGE, 5MM	001	0
25	95701-0801607	BOLT, FLANGE, 8X16	002	0
26	95701-0803500	BOLT, FLANGE, 8X35	001	0
27	95800-0601208	BOLT, FLANGE, 6X12	001	0
28	95800-0602008	BOLT, FLANGE, 6X20	002	0

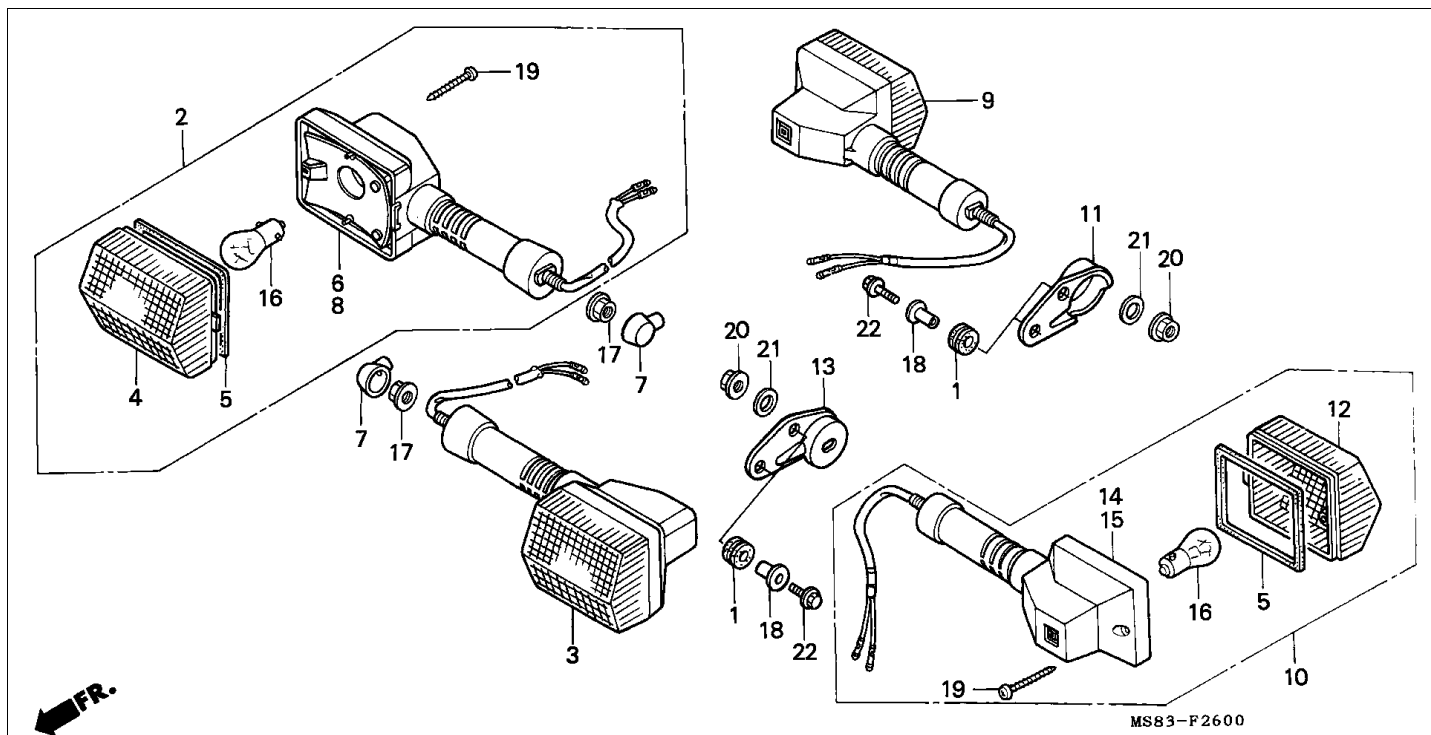


Block F-26 WINKER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	17622-GB7-900	RUBBER, CUSHION	004	0
2	33300-MS8-621	WINKER SET, R. FR. (12V 21W)	001	0
3	33350-MS8-621	WINKER SET, L. FR. (12V 21W)	001	0
4	33402-MG2-003	LENS, WINKER	002	0
5	33407-MG2-003	GASKET, LENS	004	0
6	33420-MS8-621	BASE COMP., R. FR. WINKER	001	0
8	33470-MS8-621	BASE COMP., L. FR. WINKER	001	0
9	33500-MS8-621	WINKER ASSY., R. RR. (12V 21W)	001	0
10	33550-MS8-621	WINKER ASSY., L. RR. (12V 21W)	001	0
11	33601-MS8-000	STAY, R. RR. WINKER	001	0
12	33602-MG2-601	LENS, WINKER	002	0
13	33602-MS8-000	STAY, L. RR. WINKER	001	0
14	33620-MS8-621	BASE COMP., R. RR. WINKER	001	0
15	33670-MS8-621	BASE COMP., L. RR. WINKER	001	0
16	34908-634-611	BULB (12V 21W) (ECE) (STANLEY)	004	0
17	90303-428-900	NUT, FLANGE, 10MM	002	0
18	90501-KC2-750	WASHER, REGULATOR SETTING	004	0
19	91901-MG2-003	SCREW, TAPPING, 3X25	004	0
20	94050-10000-	NUT, FLANGE, 10MM	002	0
21	94102-10000-	WASHER, PLAIN, 10MM	002	0
22	96400-0601607	BOLT, FLANGE, 6X16	004	0

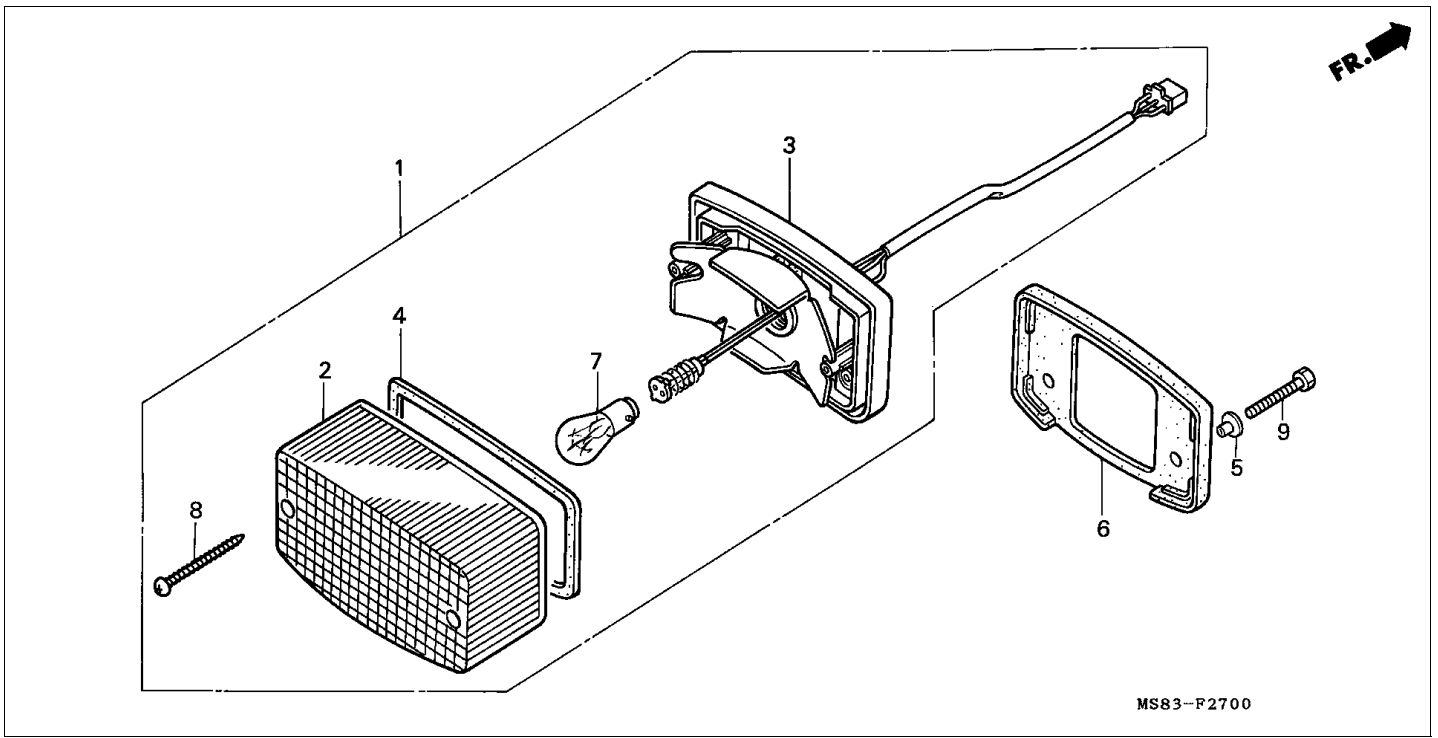


Block F-27 TAILLIGHT

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	33701-MS8-621	TAILLIGHT UNIT (12V 21/5W)	001	0
2	33702-KB7-013	LENS, TAILLIGHT (STANLEY)	001	0
3	33703-MS8-621	SOCKET COMP., TAILLIGHT	001	0
4	33709-KB7-003	PACKING, TAILLIGHT LENS	001	0
5	33715-KE1-000	COLLAR, TAILLIGHT SETTING	002	0
6	33718-KL3-670	PACKING, TAILLIGHT	001	0
7	34906-447-711	BULB, TAILLIGHT (STANLEY) (12V 21/5W)	001	0
8	90105-KB7-910	SCREW, TAPPING, 4X40	002	0
9	92101-050180H	BOLT, HEX., 5X18	002	0

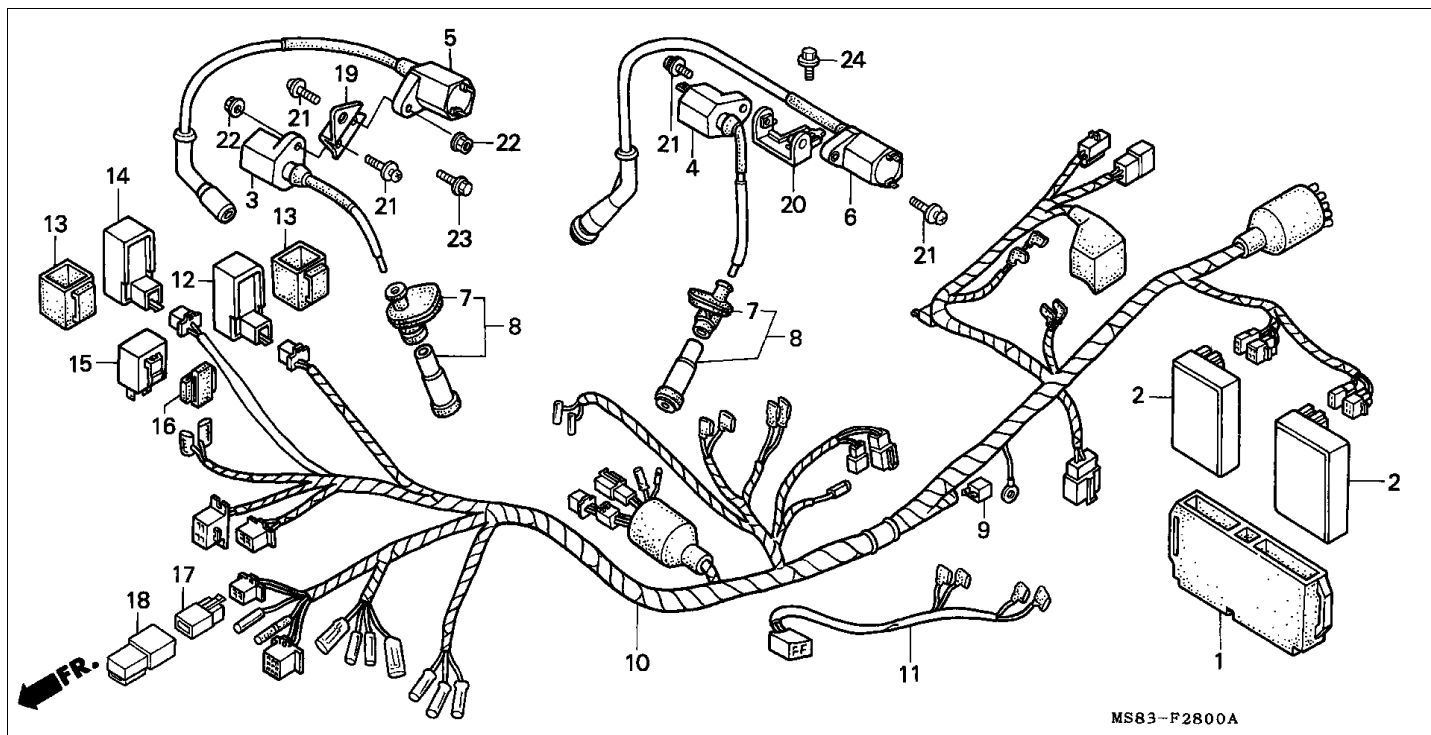


Block F-28 WIRE HARNESS/ IGNITION COIL

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	30401-MM9-000	CUSHION, C.D.I. UNIT	001	0
2	30410-MS8-610	C.D.I. UNIT	002	0
3	30510-MM9-000	COIL COMP., IGNITION (1)	001	0
4	30520-MM9-000	COIL COMP., IGNITION (2)	001	0
5	30540-MS8-000	COIL COMP., IGNITION (4)	001	0
6	30550-MM9-000	COIL COMP., IGNITION (5)	001	0
7	30605-MF5-000	SEAL, PLUG CAP	002	0
8	30701-MF5-000	CAP ASSY., NOISE SUPPRESSOR	002	0
9	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	001	0
10	32100-MS8-870	HARNESS, WIRE	001	0
11	32102-MS8-000	SUB HARNESS	001	0
12	36100-MG7-008	RELAY, FUEL CUT	001	0
13	36101-MB1-000	SUSPENSION, FUEL CUT RELAY	002	0
14	37640-MB1-701	CHECK UNIT, PILOT LAMP	001	0
15	38301-MF8-771	RELAY COMP., WINKER (TATEISHI)	001	0
15	38301-MF8-773	RELAY COMP., WINKER (MITSUBA)	001	0
16	38306-KJ6-740	SUSPENSION, WINKER RELAY	001	0
17	38501-GN2-014	RELAY COMP., STARTER (MITSUBA)	001	0
18	38506-GC7-611	SUSPENSION, STARTER RELAY (MITSUBA)	001	0
19	50155-MM9-000	STAY, FR. IGNITION COIL	001	0
20	50189-MS8-000	STAY, RR. IGNITION COIL	001	0
21	93893-0502207	SCREW-WASHER, 5X22	004	0
22	94050-05000-	NUT, FLANGE, 5MM	002	0
23	95700-0601208	BOLT, FLANGE, 6X12	001	0
24	95701-0601000	BOLT, FLANGE, 6X10	001	0

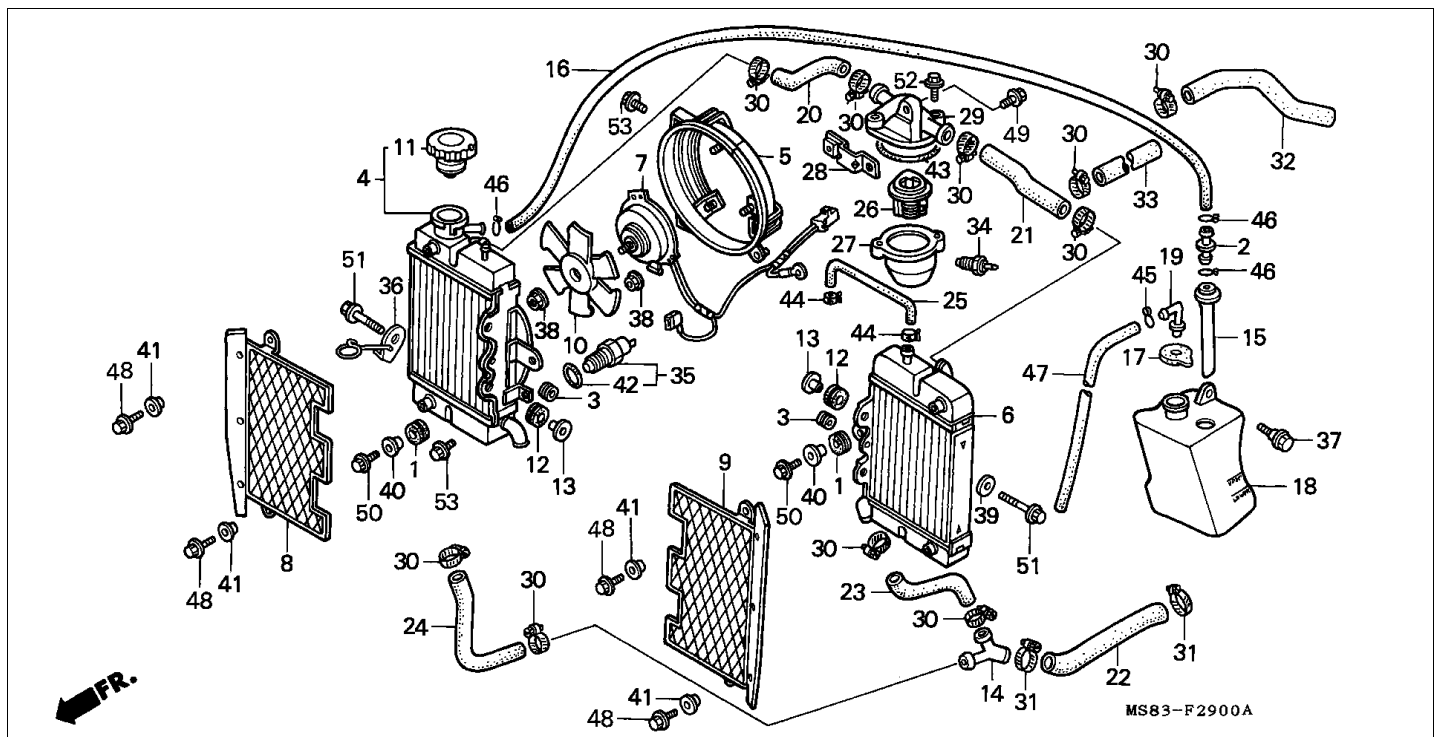


Block F-29 RADIATOR

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	17245-107-010	RUBBER, AIR CLEANER CASE MOUNTING	002	0
2	17359-419-670	JOINT, BREATHER TUBE	001	0
3	18624-634-670	GROMMET, AIR BYPASS	002	0
4	19011-MS8-003	RADIATOR COMP., R.	001	0
5	19013-MS8-003	SHROUD COMP. (TOYO)	001	0
6	19020-MS8-003	RADIATOR COMP., L.	001	0
7	19030-MS8-000	MOTOR ASSY., FAN	001	0
8	19031-MS8-000	GRILLE, R. RADIATOR	001	0
9	19032-MS8-000	GRILLE, L. RADIATOR	001	0
10	19040-MF5-751	FAN, COOLING (TOYO)	001	0
11	19045-ML0-901	CAP COMP. (TOYO)	001	0
12	19051-MS8-000	RUBBER, RADIATOR MOUNTING	004	0
13	19052-MS8-000	COLLAR, RADIATOR MOUNTING	004	0
14	19069-MS8-000	JOINT, WATER HOSE	001	0
15	19102-463-000	TUBE, LEVEL	001	0
16	19107-MS8-000	TUBE, OVERFLOW	001	0
17	19108-KK4-000	CAP, RESERVE TANK	001	0
18	19110-MS8-000	TANK, RESERVE	001	0
19	19113-KR1-760	ADAPTER, RESERVE CAP	001	0
20	19222-MS8-000	HOSE, WATER (NO.5)	001	0
21	19223-MS8-000	HOSE, WATER (NO.6)	001	0
22	19231-MS8-000	HOSE, WATER	001	0
23	19232-MS8-000	HOSE, L. WATER	001	0
24	19234-MS8-000	HOSE, R. WATER	001	0
25	19235-MS8-000	TUBE, RADIATOR JOINT	001	0
26	19300-KE8-000	THERMOSTAT ASSY.	001	0
27	19311-MS8-000	CASE, THERMOSTAT	001	0
28	19312-MS8-010	BRACKET, THERMOSTAT	001	0
29	19315-MM9-000	COVER, THERMOSTAT	001	0
30	19506-KS6-700	CLAMP B, WATER HOSE	010	0
31	19516-MB6-000	CLAMP, WATER HOSE	002	0
32	19521-MS8-000	HOSE, FR. OUTER WATER	001	0
33	19522-MS8-000	HOSE, RR. OUTER WATER	001	0
34	37750-PC1-004	THERMO UNIT (DENSO)	001	0
35	37760-MR1-003	THERMOSWITCH ASSY.	001	0
36	50716-MS8-000	GUIDE, CLUTCH CABLE	001	0
37	90111-162-000	BOLT, FLANGE, 6MM	001	0
38	90315-MK3-003	NUT, SERRATE, 5MM	004	0

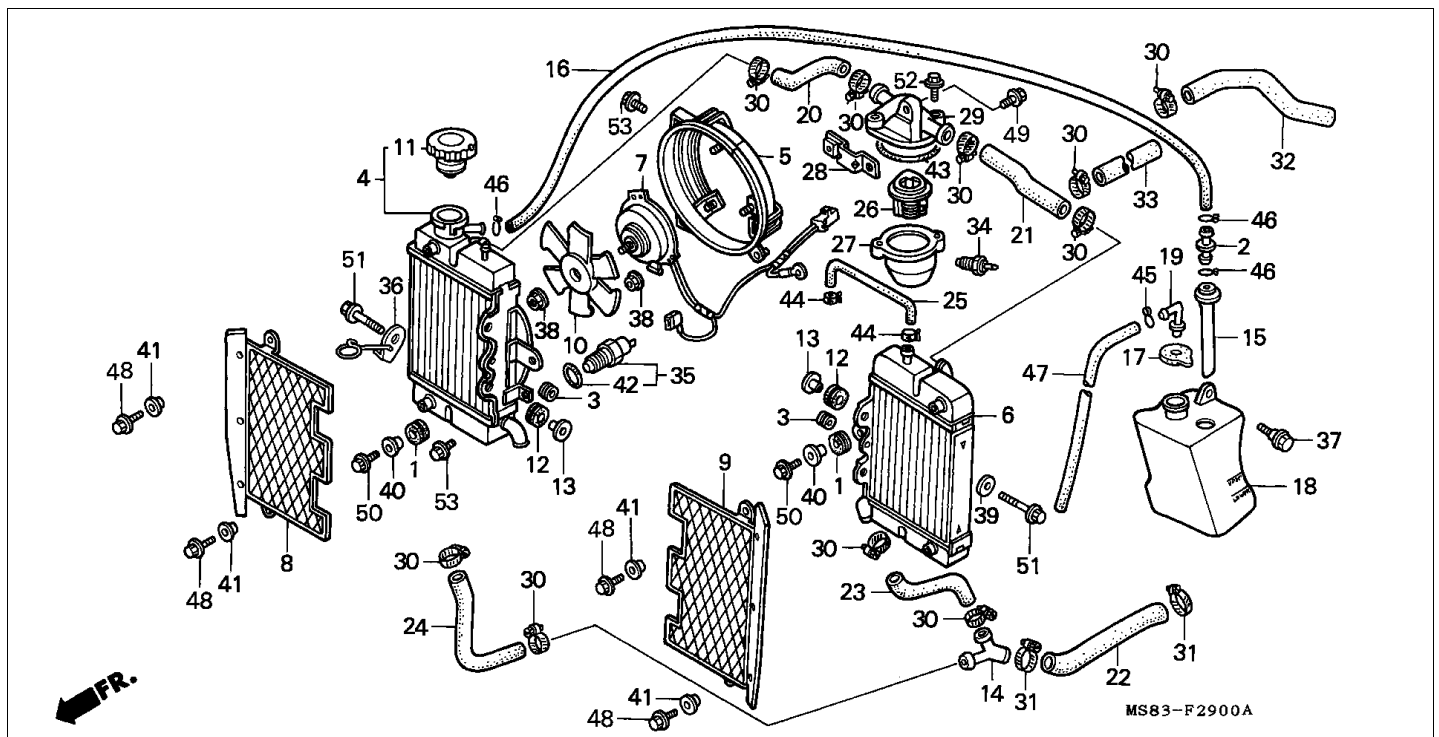


Block F-29 RADIATOR

Refrnr	Part Number	Parts Description	Unit Qty	Repair Qty
39	94103-06700-	WASHER, PLAIN, 6MM	003	0
40	90501-MA3-770	COLLAR, 6.2X12	002	0
41	90522-170-700	COLLAR, GEARSHIFT LEVER SETTING	004	0
42	91307-611-000	O-RING, 13.5X1.4	001	0
43	91311-KE8-000	O-RING, 47.5X2	001	0
44	95002-4120004	CLAMP, TUBE (D12)	002	0
45	95002-02070-	CLIP, TUBE (B7)	001	0
46	95002-02120-	CLIP, TUBE (B12)	003	0
47	95005-4556030	TUBE, 4.5X560 (95005-45001-30M)	001	0
48	95700-0601207	BOLT, FLANGE, 6X12	004	0
49	95701-0601800	BOLT, FLANGE, 6X18	001	0
50	95800-0602007	BOLT, FLANGE, 6X20	002	0
51	95800-0602807	BOLT, FLANGE, 6X28	004	0
52	96000-0602007	BOLT, FLANGE, 6X20	002	0
53	96001-0601007	BOLT, FLANGE, 6X10	003	0

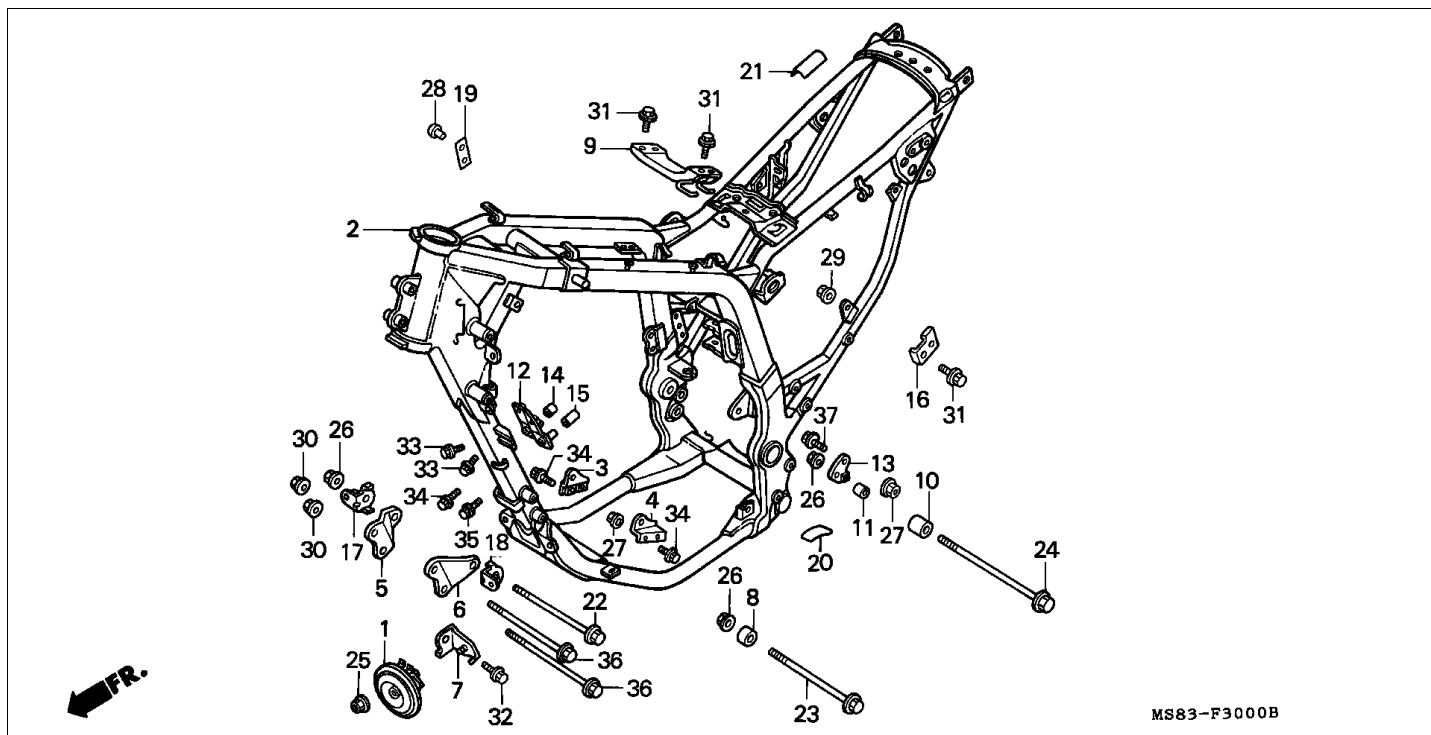


Block F-30 FRAME BODY

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	38120-MM9-008	HORN COMP., LOW (MITSUBA)	001	0
2	50100-MS8-611	BODY COMP., FRAME *NH138*	001	0
3	50123-MS8-000	PLATE, R. ENGINE HANGER LOWER *NH138*	001	0
4	50124-MS8-000	PLATE, L. ENGINE HANGER LOWER *NH138*	001	0
5	50181-MS8-000	PLATE, R. FR. ENGINE HANGER	001	0
6	50182-MS8-000	PLATE, L. FR. ENGINE HANGER	001	0
7	50183-MS8-000	STAY, HORN	001	0
8	50184-MM9-000	COLLAR, R. ENGINE HANGER LOWER	001	0
9	50185-MS8-000	BRIDGE, MAIN PIPE	001	0
10	50186-MS8-000	COLLAR A, ENGINE MOUNTING	001	0
11	50187-MS8-000	COLLAR, ENGINE MOUNTING (B)	001	0
12	50188-MS8-000	PLATE, FR. HEAD ENGINE HANGER	001	0
13	50202-MS8-000	PLATE, R. RR. ENGINE HANGER UPPER *NH138*	001	0
14	50203-MS8-000	COLLAR, FR. ENGINE HANGER (A)	001	0
15	50204-MS8-000	COLLAR, FR. ENGINE HANGER (B)	001	0
16	50211-MS8-000	STAY, SIDE COVER SUB	001	0
17	64207-MS8-000	STAY, R. LOWER COWL	001	0
18	64208-MS8-000	STAY, L. LOWER COWL	001	0
19	87501-MS8-610	PLATE, REGISTERED NUMBER	001	0
20	87507-MB4-670	LABEL, RESERVE TANK	001	0
21	87565-MS8-870	LABEL, COLOR *TYPE1* (NH138H)	001	0
22	90103-162-000	BOLT, ENGINE HANGER	001	0
22	96400-1016000	BOLT, FLANGE, 10X160	001	0
23	90108-GE1-670	BOLT, FLANGE, 10X155	001	0
24	90117-KW3-000	BOLT, FLANGE, 10X250	001	0
25	90208-425-870	NUT, FLANGE, 8MM	001	0
26	90308-382-670	NUT, FLANGE, 10MM	003	0
27	90309-357-000	NUT, HEX., 8MM	003	0
28	90841-001-000	SCREW, RIVET, 1.8X5	002	0
29	94050-06000-	NUT, FLANGE, 6MM	001	0
30	94050-08000-	NUT, FLANGE, 8MM	002	0
31	95700-0601000	BOLT, FLANGE, 6X10	005	0
32	95701-0801207	BOLT, FLANGE, 8X12	001	0
33	95701-0801408	BOLT, FLANGE, 8X14	002	0
34	95701-0804508	BOLT, FLANGE, 8X45	005	0
35	95701-0805508	BOLT, FLANGE, 8X55	001	0
36	95701-0809500	BOLT, FLANGE, 8X95	002	0
37	96300-0802200	BOLT, FLANGE, 8X22	002	0

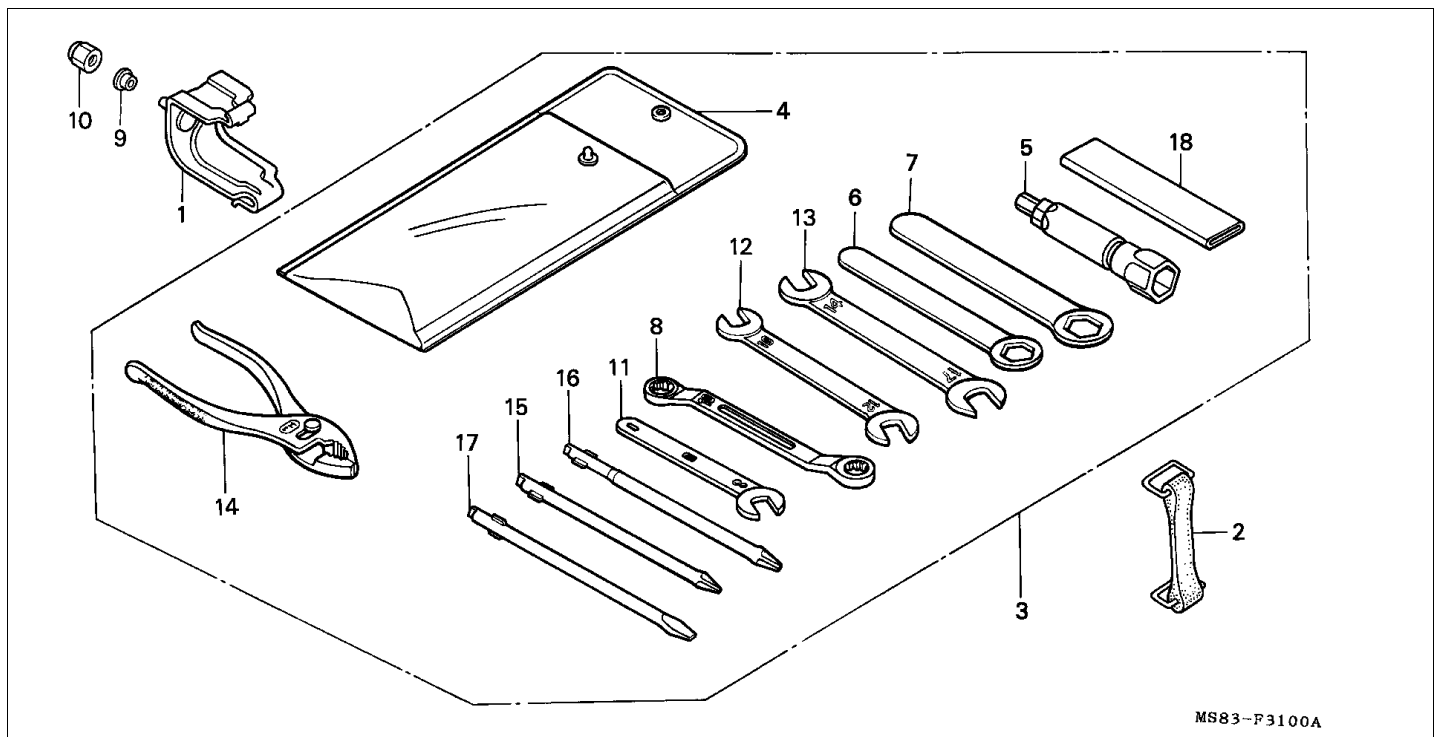


Block F-31 TOOLS

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	83552-MS8-000	STAY COMP., TOOL SETTING	001	0
2	83553-MS8-000	BAND, TOOL	001	0
3	89010-MS8-000	TOOL SET	001	0
4	89101-MS8-000	BAG, TOOL	001	0
5	89216-MJ1-000	WRENCH, PLUG	001	0
6	89218-MF5-000	WRENCH, EYE, 17MM	001	0
7	89223-MM9-000	WRENCH, EYE, 24MM	001	0
8	89227-MJ4-000	WRENCH, EYE, 10X12	001	0
8	89227-461-000	WRENCH, EYE, 10X12	001	0
9	90506-425-000	WASHER, RR. COVER	002	0
10	94021-060700S	NUT, CAP, 6MM	002	0
11	99001-08000-	SPANNER, 8	001	0
12	99001-10120-	SPANNER, 10X12	001	0
13	99001-14170-	SPANNER, 14X17	001	0
14	99002-13500-	PLIERS, 135	001	0
15	99003-10000-	DRIVER 1, PLUS SCREW (NO.2)	001	0
16	99003-20000-	DRIVER 2, PLUS SCREW (NO.3)	001	0
17	99003-30000-	DRIVER 3, MINUS SCREW (NO.2)	001	0
18	99006-12000-	HANDLE, EYE WRENCH, 12MM	001	0

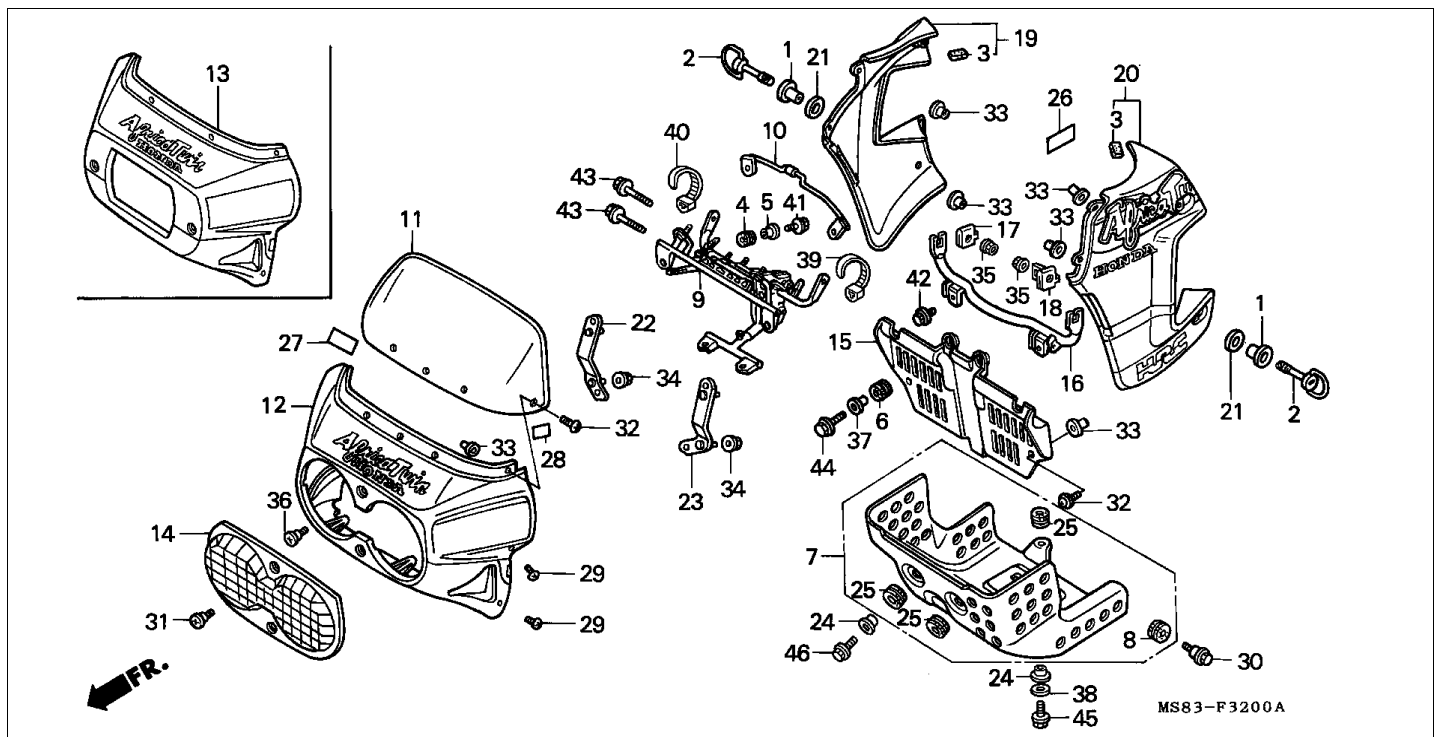


Block F-32 COWL

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	17223-KN5-670	COLLAR, AIR CLEANER COVER SETTING	004	0
2	17225-KN5-670	STUD, 6X21	004	0
4	19051-GE2-000	RUBBER, RADIATOR MOUNTING	004	0
5	19052-MB0-000	COLLAR, RADIATOR MOUNTING	004	0
6	33712-KT1-670	RUBBER, TAILLIGHT	002	0
7	50351-MS8-010	PLATE, SKID	001	0
8	50370-HA2-770	GROMMET, ENGINE HANGER	001	0
9	61310-MS8-000	STAY, FR. COWL	001	0
10	61315-MS8-000	BAR COMP., SCREEN SUPPORT	001	0
11	61320-MS8-000	SCREEN, FR. (WL)	001	0
12	64200-MS8-000	COWL SET, UPPER (WL) *NH138*	001	0
14	64202-MS8-305	GUARD, DUAL HEADLIGHT	(1)	0
15	64206-MS8-000	COWL, CENTER	001	0
16	64209-MS8-000	PIPE COMP., COWL MOUNTING	001	0
17	64211-MS8-000	PLATE, R. NUT, 8MM	001	0
18	64212-MS8-000	PLATE, L. NUT, 8MM	001	0
19	64220-MS8-620	COWL SET, R. SIDE (WL) *NH138*	001	0
20	64230-MS8-620	COWL SET, L. SIDE (WL) *NH138*	001	0
21	64297-MR7-000	RETAINER	004	0
22	64303-MS8-000	SUB STAY, R. UPPER COWL	001	0
23	64304-MS8-000	SUB STAY, L. UPPER COWL	001	0
24	80101-KB7-600	COLLAR, 8X12	003	0
25	80152-958-680	RUBBER, RR. FENDER	003	0
26	87508-GE3-610	MARK, RADIATOR CAUTION	001	0
27	87515-MS8-610	LABEL, FAIRING CAUTION	001	0
28	87522-KE8-600	LABEL, VISOR CAUTION	001	0
29	90001-MG1-000	SCREW, SPECIAL, 5X16	004	0
30	90003-732-900	BOLT, HEIGHT ADJUST SETTING	001	0
31	90104-MS8-000	SCREW, SPECIAL, 6X16	(2)	0
32	90109-SB6-000	SCREW, TRUSS, 5X16	007	0
33	90111-MM9-000	NUT, COWL SETTING, 5MM	011	0
34	90203-PD1-000	NUT, FLANGE, 6MM	004	0
35	90301-SA0-000	NUT, FLANGE CAP, 8MM	002	0
36	90380-MS8-000	SCREW, SPECIAL, 6X12	002	0
37	90001-961-670	COLLAR, SIDE MOUNTING	002	0
38	90505-VA9-K40	WASHER, 13MM	001	0
39	90650-KV6-003	BAND, WIRE	001	0
40	90652-KT1-771	BAND, WIRE (BLACK)	001	0

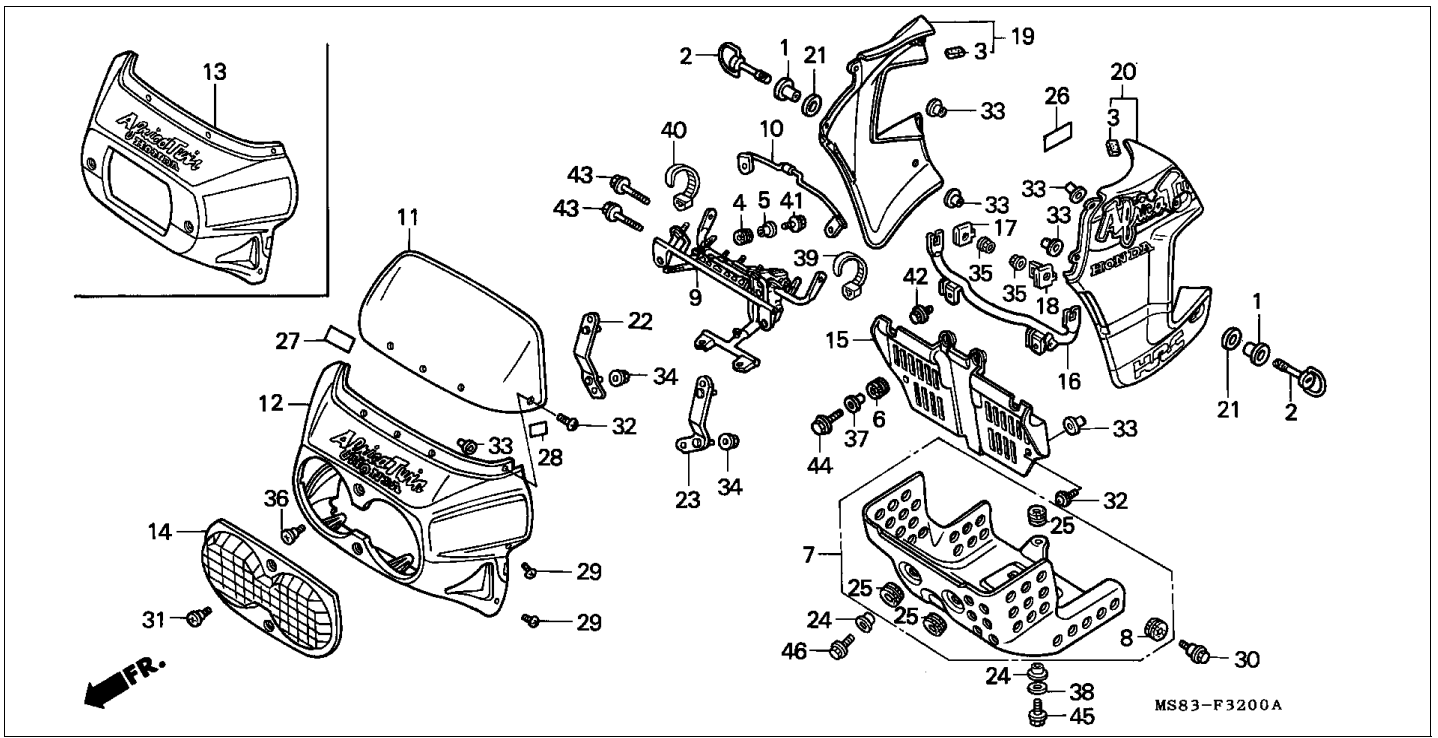

Block F-32 COWL

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
41	92301-060220A	BOLT, RECESSED, 6X22	004	0
42	95701-0601200	BOLT, FLANGE, 6X12	002	0
43	96400-0803807	BOLT, FLANGE, 8X38	002	0
44	96300-0601807	BOLT, FLANGE, 6X18	002	0
45	96300-0802500	BOLT, FLANGE, 8X25	001	0
46	96300-0802800	BOLT, FLANGE, 8X28	002	0

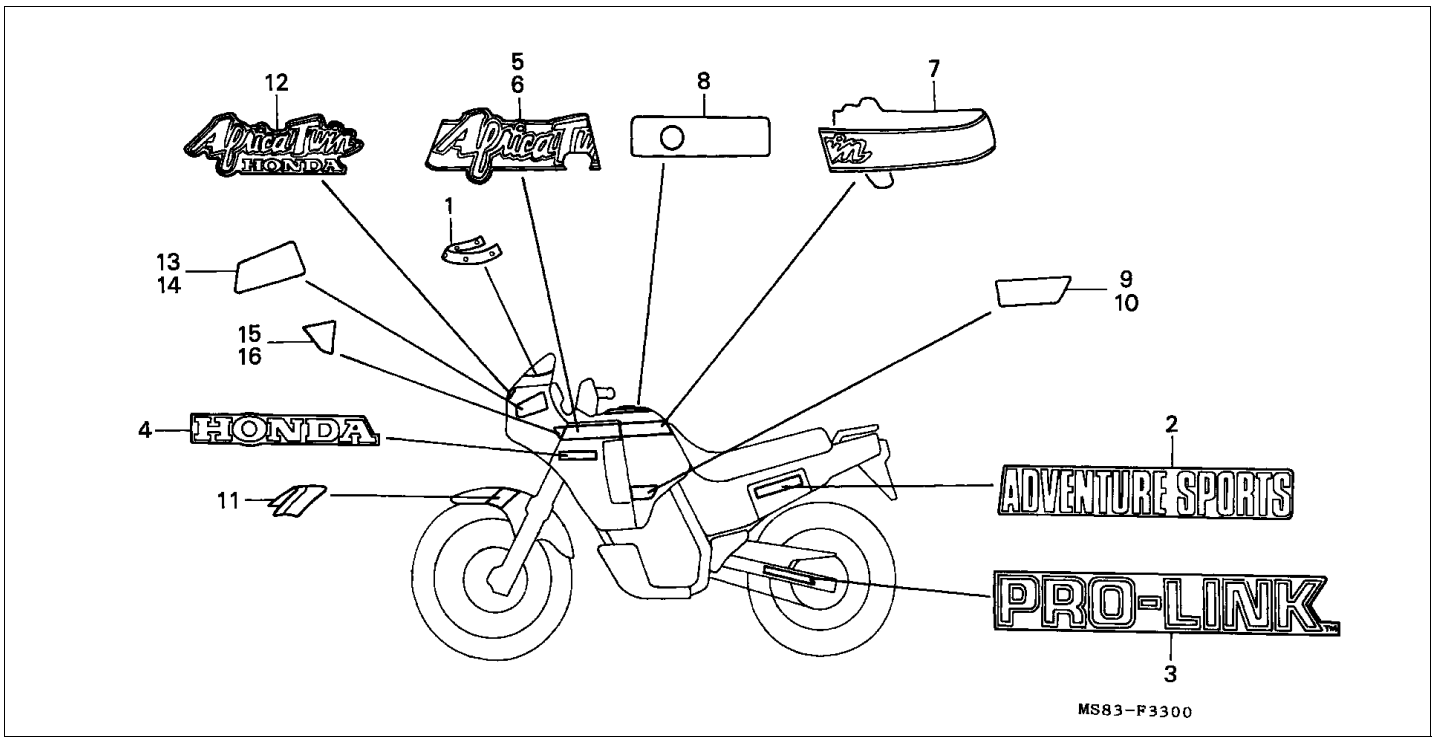

MS83-F3300

Block F-33 STRIPE/MARK

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	61321-MS8-300	STRIPE, FR. SCREEN	001	0
2	80133-MS8-000	MARK, SIDE COVER	002	0
3	87121-MS8-620	MARK, RR. FORK	002	0
4	87135-MS8-000	MARK, SIDE COWL (A)	002	0
5	87136-MS8-000	STRIPE, R. SIDE COWL	001	0
6	87137-MS8-000	STRIPE, L. SIDE COWL	001	0
7	87138-MS8-000	STRIPE, FUEL TANK (B)	001	0
8	87139-MS8-000	STRIPE, FUEL TANK (A)	001	0
9	87141-MS8-000	STRIPE, R. FUEL TANK (C)	001	0
10	87142-MS8-000	STRIPE, L. FUEL TANK (C)	001	0
11	87143-MS8-000	STRIPE, FR. FENDER	001	0
12	87144-MS8-000	MARK, UPPER COWL	001	0
13	87145-MS8-000	STRIPE, R. UPPER COWL (A)	001	0
14	87146-MS8-000	STRIPE, L. UPPER COWL (A)	001	0
15	87147-MS8-000	STRIPE, R. UPPER COWL (B)	001	0
16	87148-MS8-000	STRIPE, L. UPPER COWL (B)	001	0