


Block E-1 CYLINDER HEAD COVER


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	12310-MV1-000	COVER, FR. CYLINDER HEAD	001	0
2	12320-MV1-000	COVER, RR. CYLINDER HEAD	001	0
3	12351-MF5-000	COVER, TAPPET ADJUSTING HOLDER	002	0
4	12361-MF5-000	CAP, TAPPET ADJUSTING HOLDER	002	0
5	12391-MF5-750	GASKET, HEAD COVER	002	0
6	90011-MA6-000	BOLT, FLANGE, 6X30	004	0
7	90541-MB0-000	WASHER, MOUNTING RUBBER	004	0
8	90542-MB0-000	RUBBER, MOUNTING	004	0
9	91303-MF5-003	O-RING, 44X3 (ARAI)	002	0
10	91304-MF5-003	O-RING, 62.4X2.5 (ARAI)	002	0
11	96001-0602000	BOLT, FLANGE, 6X20	004	0

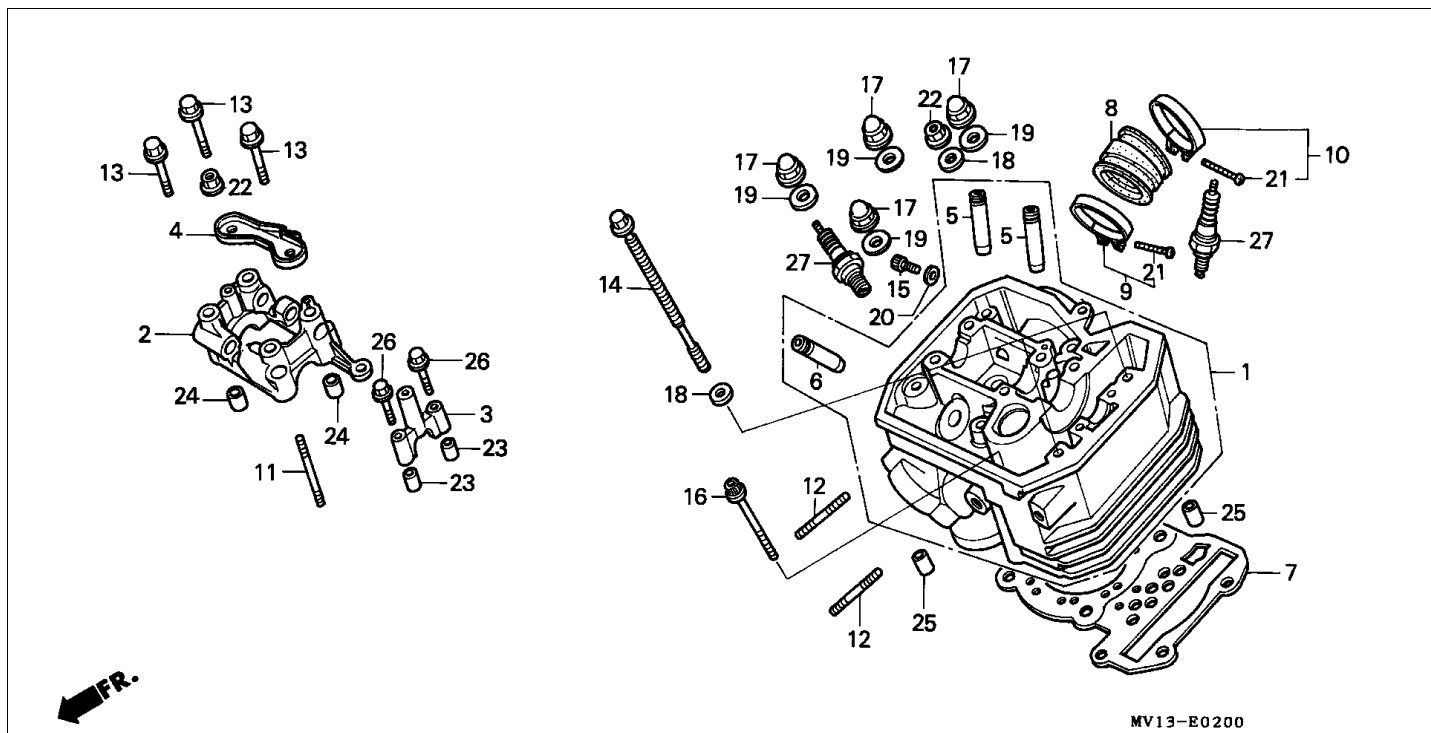

MV13-E0200

Block E-2 FRONT CYLINDER HEAD


Refrnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	12210-MV1-000	HEAD COMP., FR. CYLINDER	001	0
2	12223-MV1-000	HOLDER, CAMSHAFT	001	0
3	12225-MF5-000	HOLDER, SIDE CAMSHAFT	001	0
4	12226-MF5-000	PLATE, VALVE OIL GUIDE	001	0
5	12231-MF5-305	GUIDE, IN. VALVE (O.S.)	002	0
6	12241-MF5-315	GUIDE, EX. VALVE (O.S.)	001	0
7	12251-MV1-004	GASKET, CYLINDER HEAD	001	0
8	16211-MN8-750	INSULATOR, CARBURETOR	001	0
9	16218-MN8-750	BAND A, INSULATOR	001	0
10	16219-MN8-750	BAND B, INSULATOR	001	0
11	90013-MF5-000	BOLT, STUD, 8X50	001	0
12	90015-MN8-000	BOLT, STUD, 8X22	002	0
13	90066-MC7-000	BOLT, FLANGE, 8X68	003	0
14	90081-MM9-003	BOLT, CYLINDER, 8X187	002	0
15	90089-MN8-000	BOLT, SOCKET, 5X8	001	0
16	90094-MK4-600	BOLT, FLANGE SOCKET, 6X70	001	0
17	90202-329-000	NUT, FLANGE CAP, 10MM	004	0
18	90401-MR1-000	WASHER, 8MM	003	0
19	90410-HC4-000	WASHER, 10MM	004	0
20	90452-323-000	WASHER, SEALING, 5MM	001	0
21	93500-050250G	SCREW, PAN, 5X25	002	0
22	94050-08080-	NUT, FLANGE, 8MM	002	0
23	94301-08140-	DOWEL PIN, 8X14	002	0
24	94301-10160-	DOWEL PIN, 10X16	002	0
25	94301-14200-	DOWEL PIN, 14X20	002	0
26	96001-0604000	BOLT, FLANGE, 6X40	002	0
27	98069-57916-	PLUG, SPARK (DPR7EA-9)(NGK)	(2)	0
27	98069-57926-	PLUG, SPARK (X22EPR-U9)(DENSO)	(2)	0
27	98069-58916-	PLUG, SPARK (DPR8EA-9)(NGK)	002	0
27	98069-58926-	PLUG, SPARK (X24EPR-U9)(DENSO)	002	0
27	98069-59916-	PLUG, SPARK (DPR9EA-9)(NGK)	(2)	0
27	98069-59926-	PLUG, SPARK (X27EPR-U9)(DENSO)	(2)	0

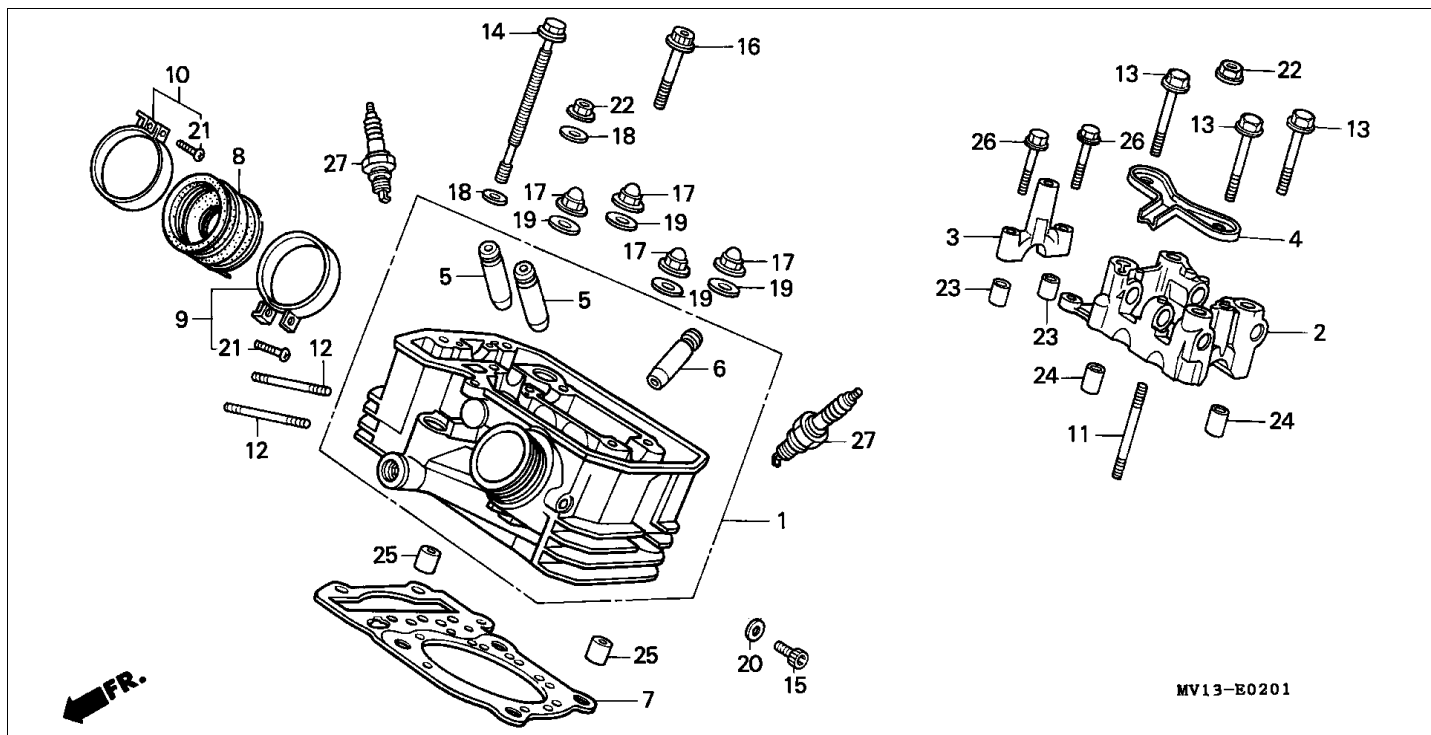

MV13-E0201


Block E-2-1 REAR CYLINDER HEAD

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	12220-MV1-000	HEAD COMP., RR. CYLINDER	001	0
2	12223-MV1-000	HOLDER, CAMSHAFT	001	0
3	12225-MF5-000	HOLDER, SIDE CAMSHAFT	001	0
4	12226-MF5-000	PLATE, VALVE OIL GUIDE	001	0
5	12231-MF5-305	GUIDE, IN. VALVE (O.S.)	002	0
6	12241-MF5-315	GUIDE, EX. VALVE (O.S.)	001	0
7	12251-MV1-004	GASKET, CYLINDER HEAD	001	0
8	16211-MN8-750	INSULATOR, CARBURETOR	001	0
9	16218-MN8-750	BAND A, INSULATOR	001	0
10	16219-MN8-750	BAND B, INSULATOR	001	0
11	90013-MF5-000	BOLT, STUD, 8X50	001	0
12	90015-MN8-000	BOLT, STUD, 8X22	002	0
13	90066-MC7-000	BOLT, FLANGE, 8X68	003	0
14	90081-MM9-003	BOLT, CYLINDER, 8X187	002	0
15	90089-MN8-000	BOLT, SOCKET, 5X8	001	0
16	90094-MK4-600	BOLT, FLANGE SOCKET, 6X70	001	0
17	90202-329-000	NUT, FLANGE CAP, 10MM	004	0
18	90401-MR1-000	WASHER, 8MM	003	0
19	90410-HC4-000	WASHER, 10MM	004	0
20	90452-323-000	WASHER, SEALING, 5MM	001	0
21	93500-050250G	SCREW, PAN, 5X25	002	0
22	94050-08080-	NUT, FLANGE, 8MM	002	0
23	94301-08140-	DOWEL PIN, 8X14	002	0
24	94301-10160-	DOWEL PIN, 10X16	002	0
25	94301-14200-	DOWEL PIN, 14X20	002	0
26	96001-0604000	BOLT, FLANGE, 6X40	002	0
27	98069-57916-	PLUG, SPARK (DPR7EA-9)(NGK)	(2)	0
27	98069-57926-	PLUG, SPARK (X22EPR-U9)(DENSO)	(2)	0
27	98069-58916-	PLUG, SPARK (DPR8EA-9)(NGK)	002	0
27	98069-58926-	PLUG, SPARK (X24EPR-U9)(DENSO)	002	0
27	98069-59916-	PLUG, SPARK (DPR9EA-9)(NGK)	(2)	0
27	98069-59926-	PLUG, SPARK (X27EPR-U9)(DENSO)	(2)	0

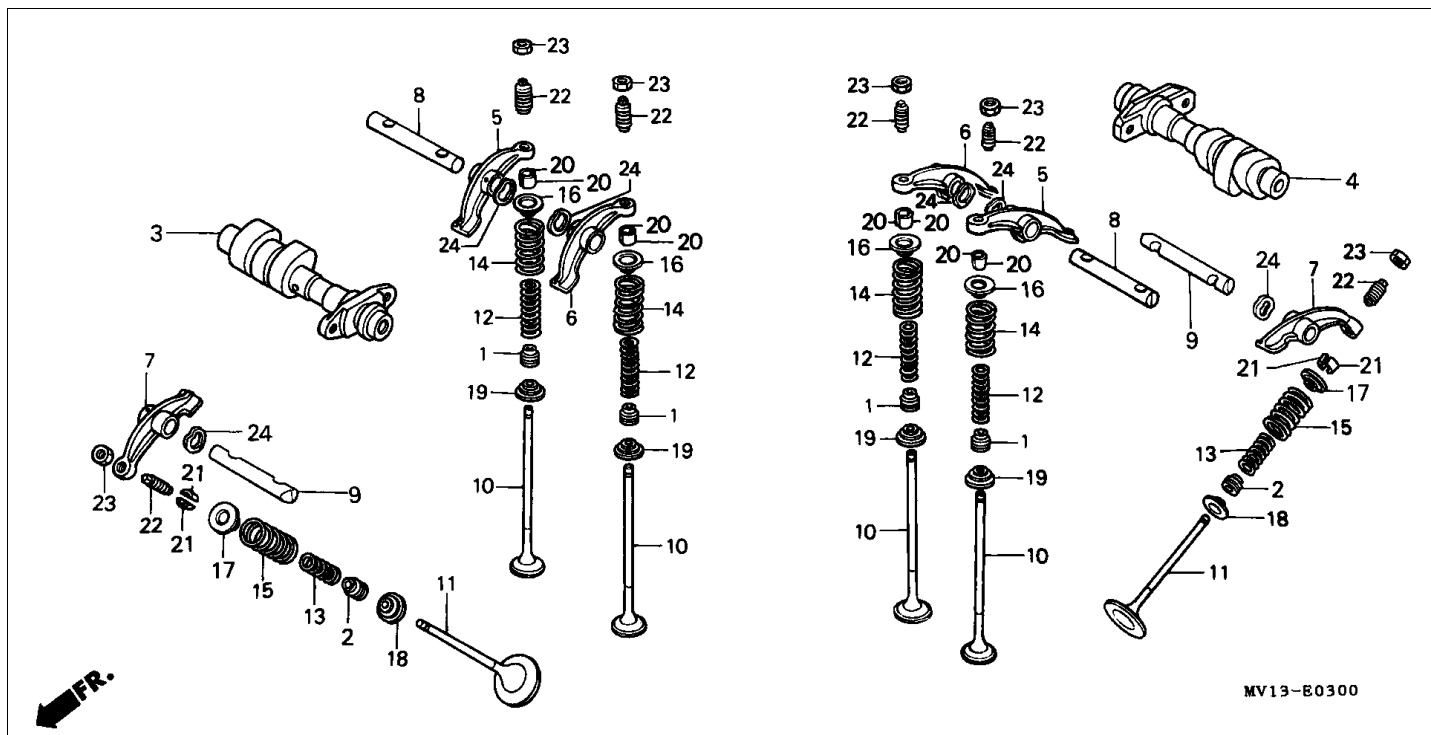



Block E-3 CAMSHAFT/VALVE

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	12208-413-003	SEAL, VALVE STEM (ARAI)	004	0
2	12209-413-003	SEAL, VALVE STEM (ARAI)	002	0
3	14110-MV1-000	CAMSHAFT COMP., FR.	001	0
4	14120-MV1-000	CAMSHAFT COMP., RR.	001	0
5	14421-MR1-000	ARM A, IN. ROCKER	002	0
6	14422-MR1-000	ARM B, IN. ROCKER	002	0
7	14431-MR1-000	ARM, EX. VALVE ROCKER	002	0
8	14441-MF5-000	SHAFT, IN. ROCKER ARM	002	0
9	14451-MF5-000	SHAFT, EX. ROCKER ARM	002	0
10	14711-MV1-000	VALVE, IN.	004	0
11	14721-MR1-000	VALVE, EX.	002	0
12	14751-MR1-003	SPRING, IN. VALVE INNER (CHUO HATSUJO)	004	0
13	14752-MR1-003	SPRING, EX. VALVE INNER (CHUO HATSUJO)	002	0
14	14761-MR1-003	SPRING, IN. VALVE OUTER (CHUO HATSUJO)	004	0
15	14762-MR1-003	SPRING, EX. VALVE OUTER (CHUO HATSUJO)	002	0
16	14771-MF5-000	RETAINER, IN. VALVE SPRING	004	0
17	14771-MR1-000	RETAINER, VALVE SPRING	002	0
18	14775-ME9-000	SEAT, VALVE SPRING	002	0
19	14775-MF5-000	SEAT, VALVE SPRING	004	0
20	14781-MB4-000	COTTER, VALVE	008	0
21	14781-MB9-000	COTTER, VALVE	004	0
22	90014-MF5-000	SCREW, TAPPET ADJUSTING	006	0
23	90206-590-000	NUT, TAPPET ADJUSTING	006	0
24	90402-428-000	WASHER, WAVE, 12MM	006	0

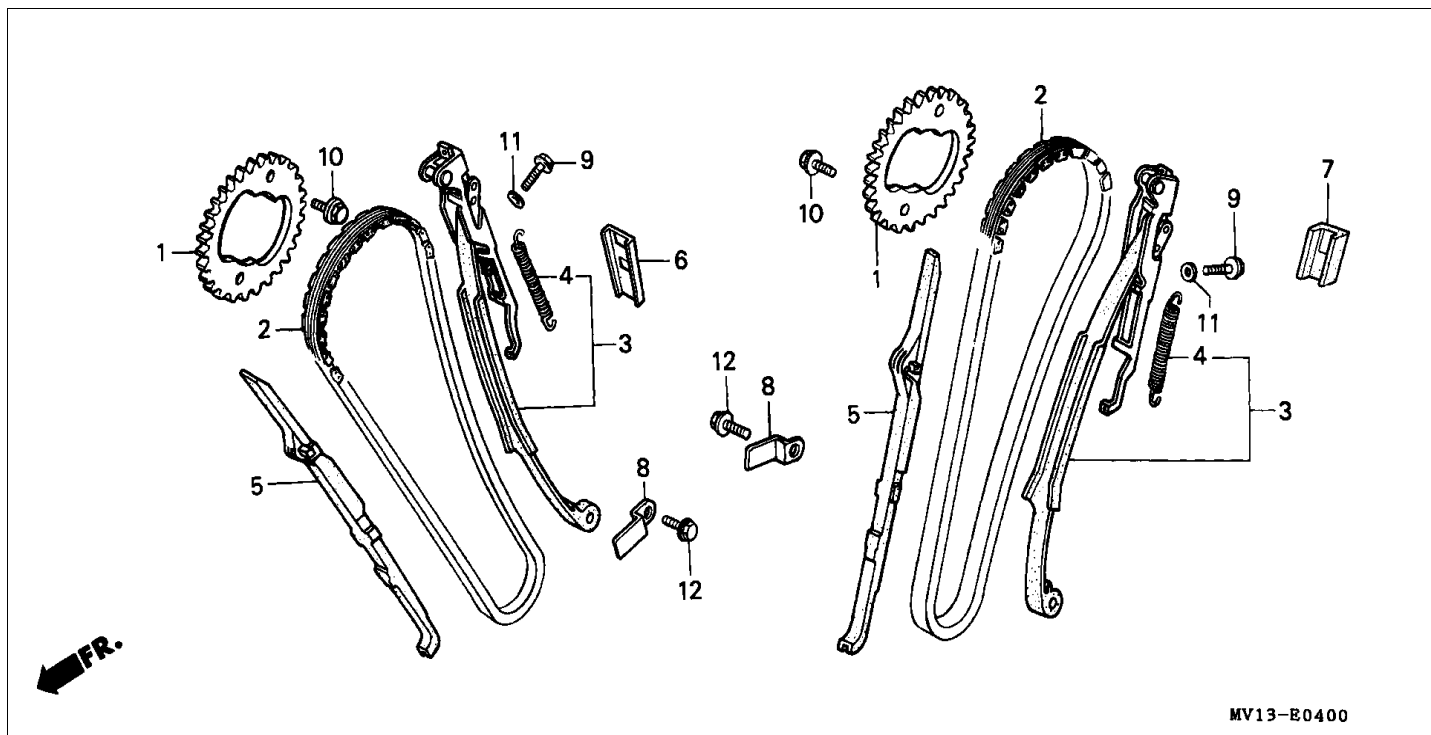

Block E-4 CAM CHAIN/TENSIONER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	14322-MR1-000	SPROCKET, CAM (40T)	002	0
2	14401-MN1-671	CHAIN, CAM (BORG WARNER)(118L)	002	0
3	14510-MR1-000	TENSIONER COMP., CAM CHAIN	002	0
4	14516-MG8-003	SPRING, CAM CHAIN TENSIONER (NIPPON HATSUJO)	002	0
5	14522-MV1-000	GUIDE, CAM CHAIN	002	0
6	14531-MN8-000	RUBBER, FR. CUSHION	001	0
7	14532-MN8-000	RUBBER, RR. CUSHION	001	0
8	14623-MV1-000	PLATE, TENSIONER SETTING	002	0
9	90021-KE9-000	BOLT, SPECIAL, 6MM	004	0
10	90086-MF5-000	BOLT, FLANGE KNOCK, 7X13	004	0
11	90441-706-000	WASHER, SEALING, 6MM	004	0
12	95701-0601600	BOLT, FLANGE, 6X16	002	0

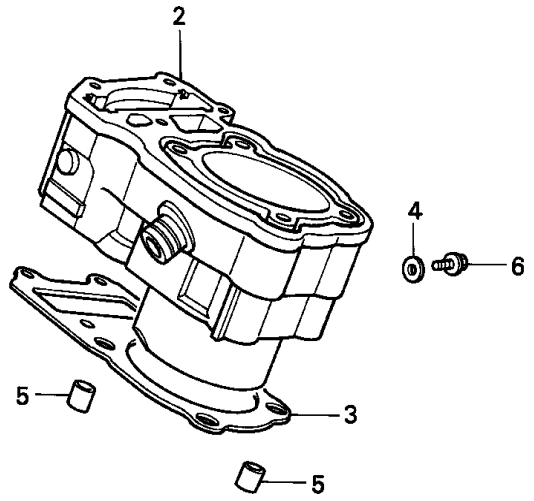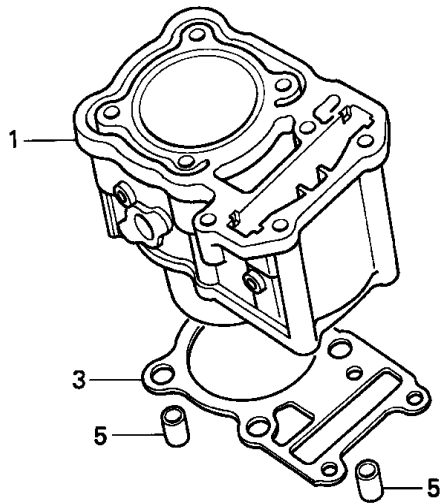


FR.

MV13-E0500


Block E-5 CYLINDER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	12100-MV1-000	CYLINDER COMP., FR.	001	0
2	12110-MV1-000	CYLINDER COMP., RR.	001	0
3	12191-MV1-004	GASKET, CYLINDER	002	0
4	90441-706-000	WASHER, SEALING, 6MM	001	0
5	94301-14200-	DOWEL PIN, 14X20	004	0
6	95701-0601000	BOLT, FLANGE, 6X10	001	0

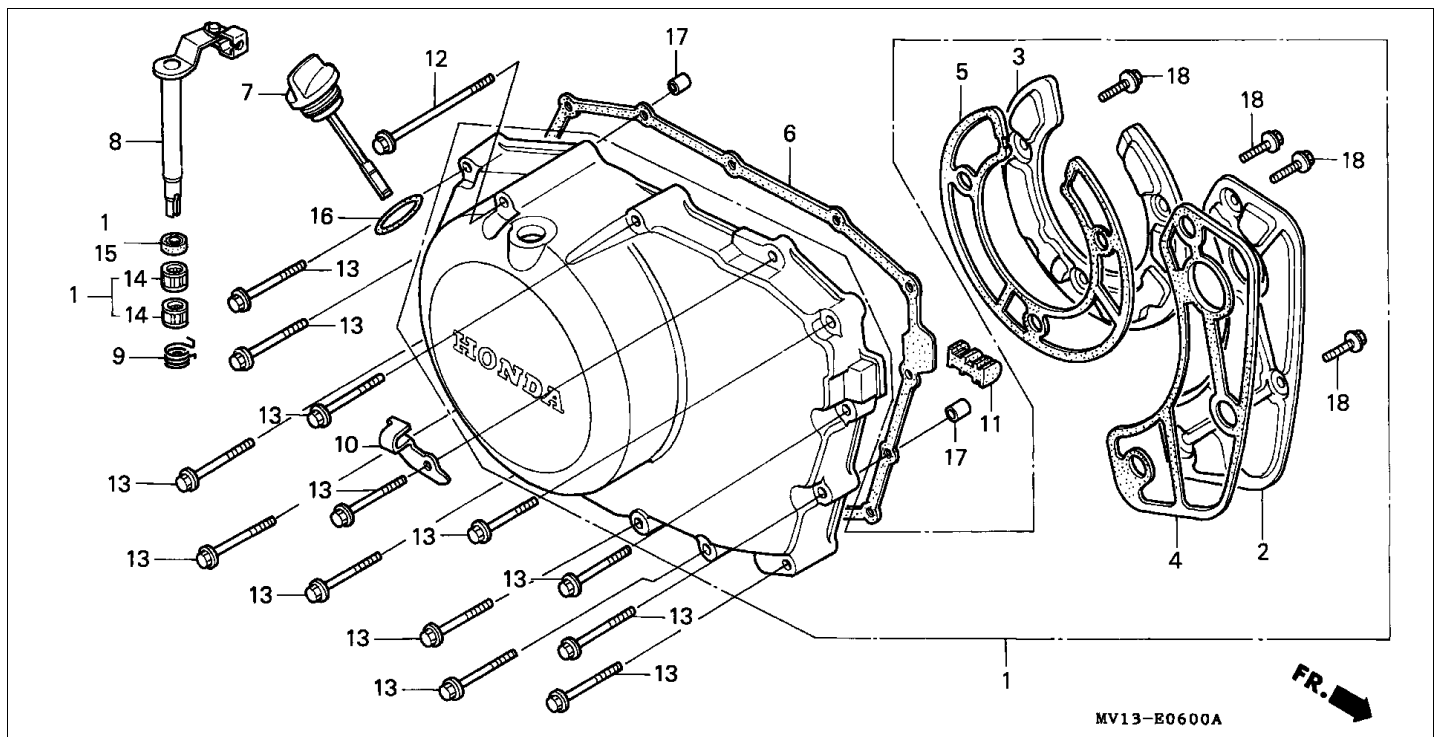


Block E-6 RIGHT CRANKCASE COVER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	11330-MV1-000	COVER COMP., R. CRANKCASE	001	0
2	11332-MV1-000	PLATE, R. COVER	001	0
3	11333-MV1-000	PLATE, R. COVER (B)	001	0
4	11334-MV1-000	RUBBER A, R. COVER DAMPER	001	0
5	11335-MV1-000	RUBBER B, R. COVER DAMPER	001	0
6	11394-MV1-850	GASKET, R. COVER	001	0
7	15650-MM9-000	GAUGE COMP., OIL LEVEL	001	0
8	22810-MV1-000	LEVER COMP., CLUTCH	001	0
9	22815-413-000	SPRING, CLUTCH LEVER	001	0
10	22825-MV1-000	RECEIVER, CLUTCH WIRE	001	0
11	32970-MV1-000	PLUG, PULSER CORD	001	0
12	90002-GHB-790	BOLT, FLANGE, 6X80	001	0
13	90003-MS8-000	BOLT, FLANGE, 6X35	013	0
14	91053-719-003	BEARING, NEEDLE, 12X16X10 (TOMUSON)	002	0
14	91053-719-004	BEARING, NEEDLE, 12X16X10 (TOYO)	002	0
14	91053-719-005	BEARING, NEEDLE, 12X16X10 (NTN)	002	0
15	91204-KK0-003	OIL SEAL, 12X18X5 (ARAI)	001	0
16	91301-250-000	O-RING, 21.5MM	001	0
17	94301-08140-	DOWEL PIN, 8X14	002	0
18	95701-0601200	BOLT, FLANGE, 6X12	006	0

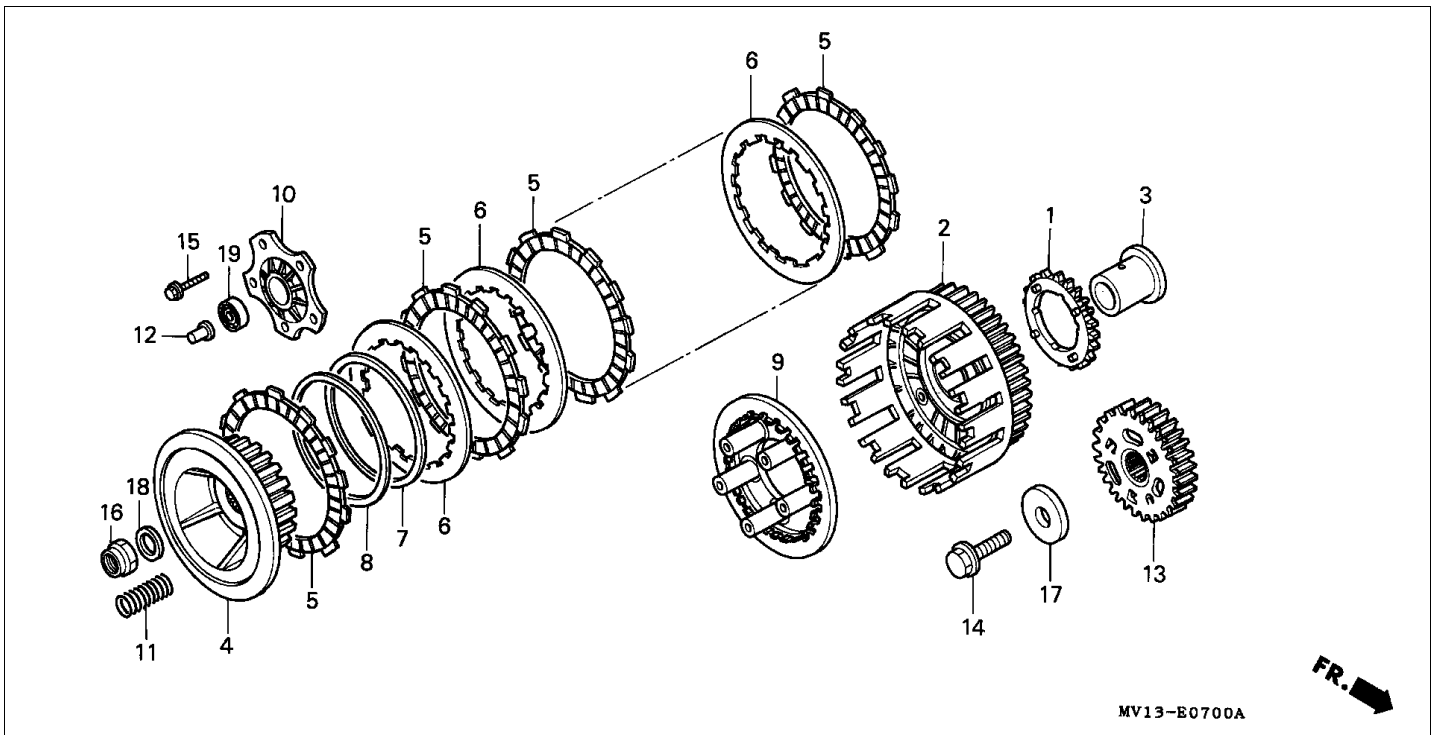


Block E-7 CLUTCH

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	15131-MV1-000	SPROCKET COMP., OIL PUMP DRIVE (33T)	001	0
2	22100-MV1-000	OUTER COMP., CLUTCH	001	0
3	22116-MV1-000	COLLAR, PRIMARY DRIVEN	001	0
4	22120-MV1-000	CENTER COMP., CLUTCH	001	0
5	22201-MJ1-761	DISK, CLUTCH FRICTION	007	0
6	22321-MV1-000	PLATE A, CLUTCH	006	0
7	22325-MV1-000	SPRING, CLUTCH PLATE	001	0
8	22326-MV1-000	SEAT, JUDDER SPRING	001	0
9	22350-MV1-000	PLATE, CLUTCH PRESSURE	001	0
10	22361-MV1-000	PLATE, CLUTCH LIFTER	001	0
11	22401-MV1-000	SPRING, CLUTCH	005	0
12	22847-MV1-000	ROD, CLUTCH LIFTER	001	0
13	23110-MV1-000	GEAR ASSY., PRIMARY DRIVE (38T)	001	0
14	90005-MN5-000	BOLT, FLANGE, 12X30	001	0
15	90007-MR1-000	BOLT, FLANGE SPECIAL, 6X30	005	0
16	90231-MM5-000	NUT, LOCK, 22MM	001	0
17	90402-MV1-000	WASHER, 12.2X40X5	001	0
18	90498-MN5-000	WASHER, 22.2X35X2.6	001	0
19	96100-6001000	BEARING, RADIAL BALL, 6001	001	0

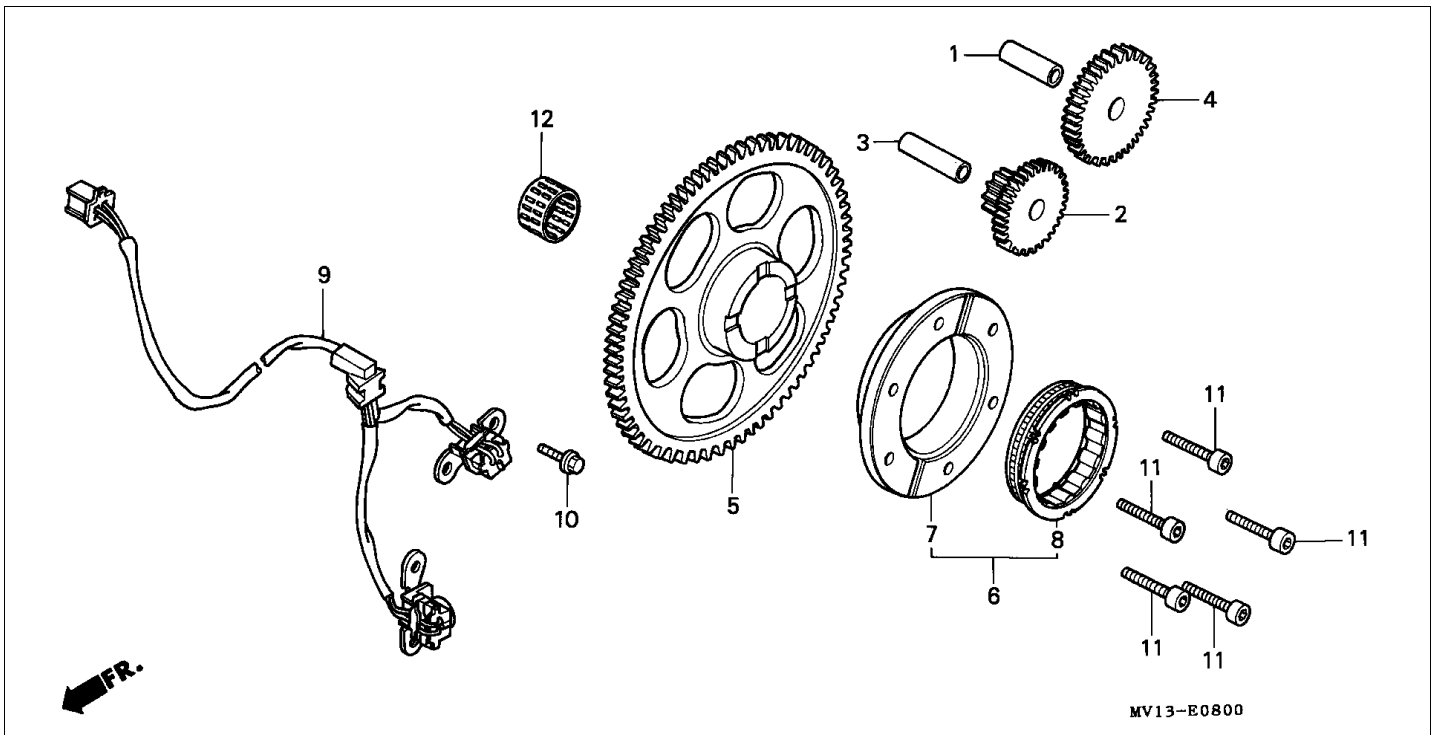

Block E-8 PULSE GENERATOR/ STARTING CLUTCH


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	13111-122-000	PIN, PISTON, 10X33	001	0
2	28101-MN8-000	GEAR, STARTER REDUCTION (39/12T)	001	0
3	28102-ME9-000	PIN, 10X44	001	0
4	28106-ME9-010	GEAR, STARTER (51T)	001	0
5	28110-MV1-000	GEAR COMP., STARTER DRIVEN (88T)	001	0
6	28120-MM9-003	OUTER ASSY., STARTING CLUTCH (BORG WARNER)	001	0
6	28125-MM9-004	OUTER COMP., STARTING CLUTCH	001	0
7	28121-MM9-000	OUTER, STARTING CLUTCH	001	0
7	28128-MM9-004	OUTER, STARTING CLUTCH	001	0
8	28125-MK5-023	CLUTCH, ONE WAY	001	0
8	28126-MK5-004	CLUTCH, ONE WAY	001	0
9	30300-MV1-004	GENERATOR ASSY., PULSE	001	0
10	90001-GHB-620	BOLT, FLANGE, 6X14	004	0
11	90010-KE5-000	BOLT, SOCKET, 8MM	006	0
12	91002-MV1-003	BEARING, NEEDLE, 32X39X23	001	0

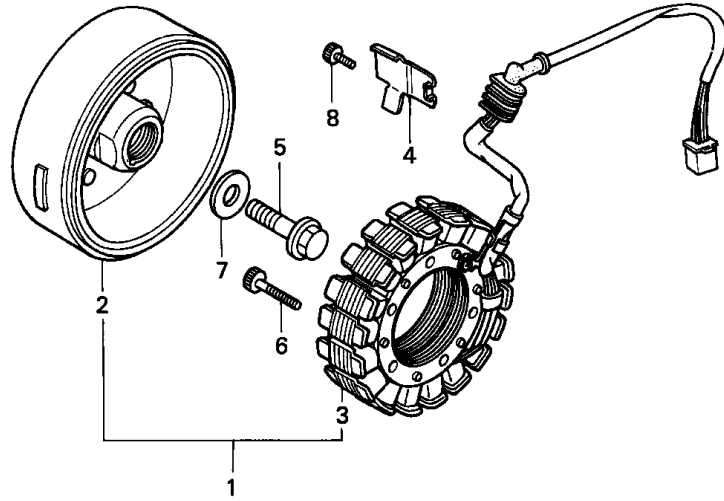

MV13-E0900


Block E-9 GENERATOR

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	31100-MV1-004	GENERATOR ASSY., FLYWHEEL TYPE A.C. (DENSO)	001	0
2	31110-MV1-004	FLYWHEEL COMP. (DENSO)	001	0
3	31120-MV1-004	STATOR COMP. (DENSO)	001	0
4	32961-MV1-000	CLAMPER, A.C. GENERATOR CORD	001	0
5	90025-MN8-000	BOLT, FLANGE, 12X48	001	0
6	90116-375-000	BOLT, SOCKET, 6X38	004	0
7	90402-PC6-000	WASHER, 12.5X34X5	001	0
8	96700-0601200	BOLT, SOCKET, 6X12	001	0

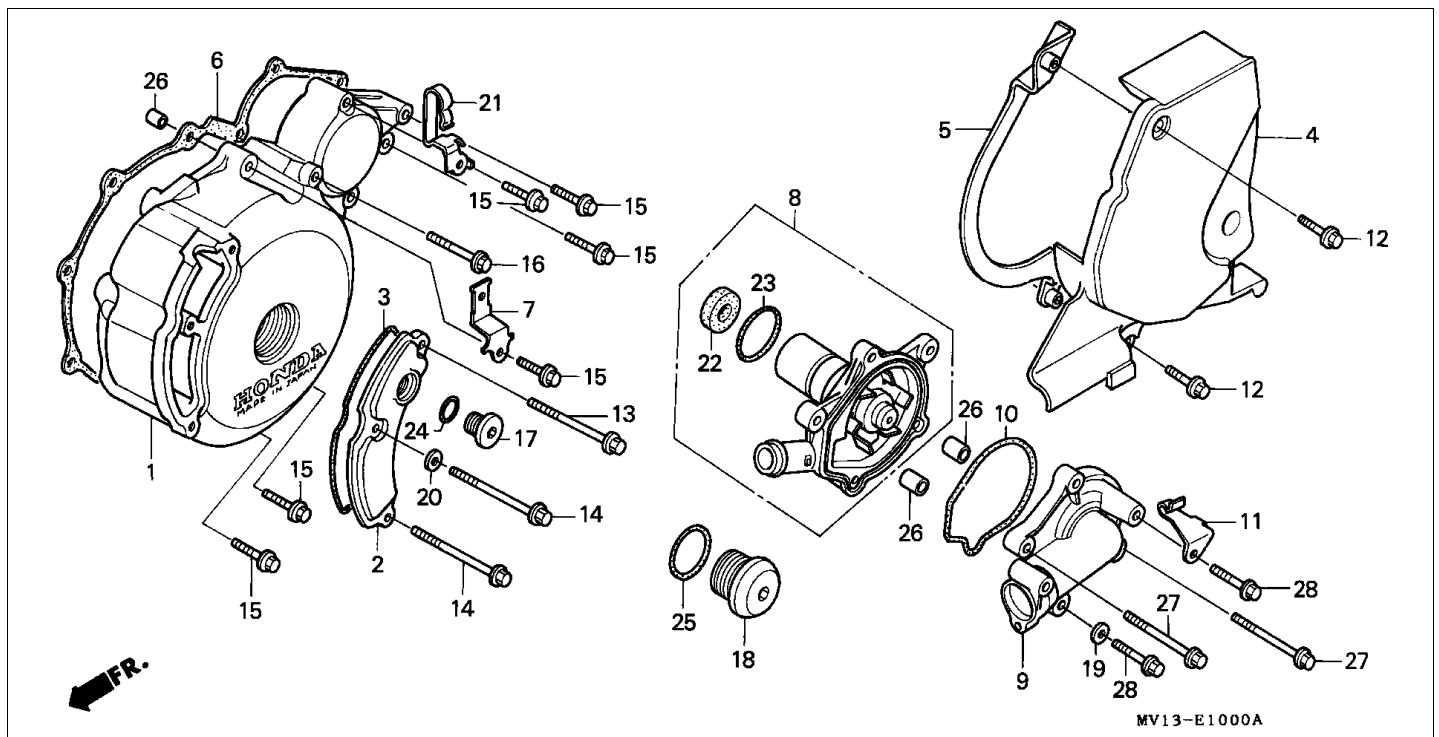


Block E-10 LEFT CRANKCASE COVER/ WATER PUMP/REAR COVER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	11341-MV1-000	COVER, L. CRANKCASE	001	0
2	11342-MV1-000	COVER, PULSER	001	0
3	11343-MV1-000	GASKET, PULSER COVER	001	0
4	11351-MV1-000	COVER, L. RR.	001	0
5	11355-MV1-000	PLATE, DRIVE CHAIN GUIDE	001	0
6	11395-MV1-850	GASKET, L. COVER	001	0
7	16712-MS8-000	STAY, FUEL STRAINER	001	0
8	19200-MV1-010	PUMP COMP., WATER	001	0
9	19221-MV1-000	COVER, WATER PUMP	001	0
10	19226-MM9-000	GASKET, WATER PUMP COVER	001	0
11	32972-MM9-000	CLAMPER, OIL PRESSURE SWITCH CORD	001	0
12	90002-GHB-670	BOLT, FLANGE, 6X25	002	0
13	90002-GHB-810	BOLT, FLANGE, 6X90	001	0
14	90002-GHB-820	BOLT, FLANGE, 6X95	002	0
15	90003-MS8-000	BOLT, FLANGE, 6X35	007	0
16	90004-MS8-000	BOLT, FLANGE, 6X45	001	0
17	90084-MN8-010	CAP, 14MM	001	0
18	90087-KT7-000	CAP, 30MM	001	0
19	90425-300-000	WASHER, 11MM	001	0
20	90441-706-000	WASHER, SEALING, 6MM	001	0
21	90601-MS8-000	CLIP, FUEL TUBE	001	0
22	91201-MF2-003	OIL SEAL, 12X28X7 (ARAI)	001	0
23	91302-MB0-013	O-RING, 32.95X2.62 (ARAI)	001	0
24	91303-377-000	O-RING, 13.8X2.5	001	0
25	91356-425-003	O-RING, 30MM	001	0
26	94301-08140-	DOWEL PIN, 8X14	004	0
27	95701-0602507	BOLT, FLANGE, 6X25	002	0
28	95701-0604507	BOLT, FLANGE, 6X45	002	0

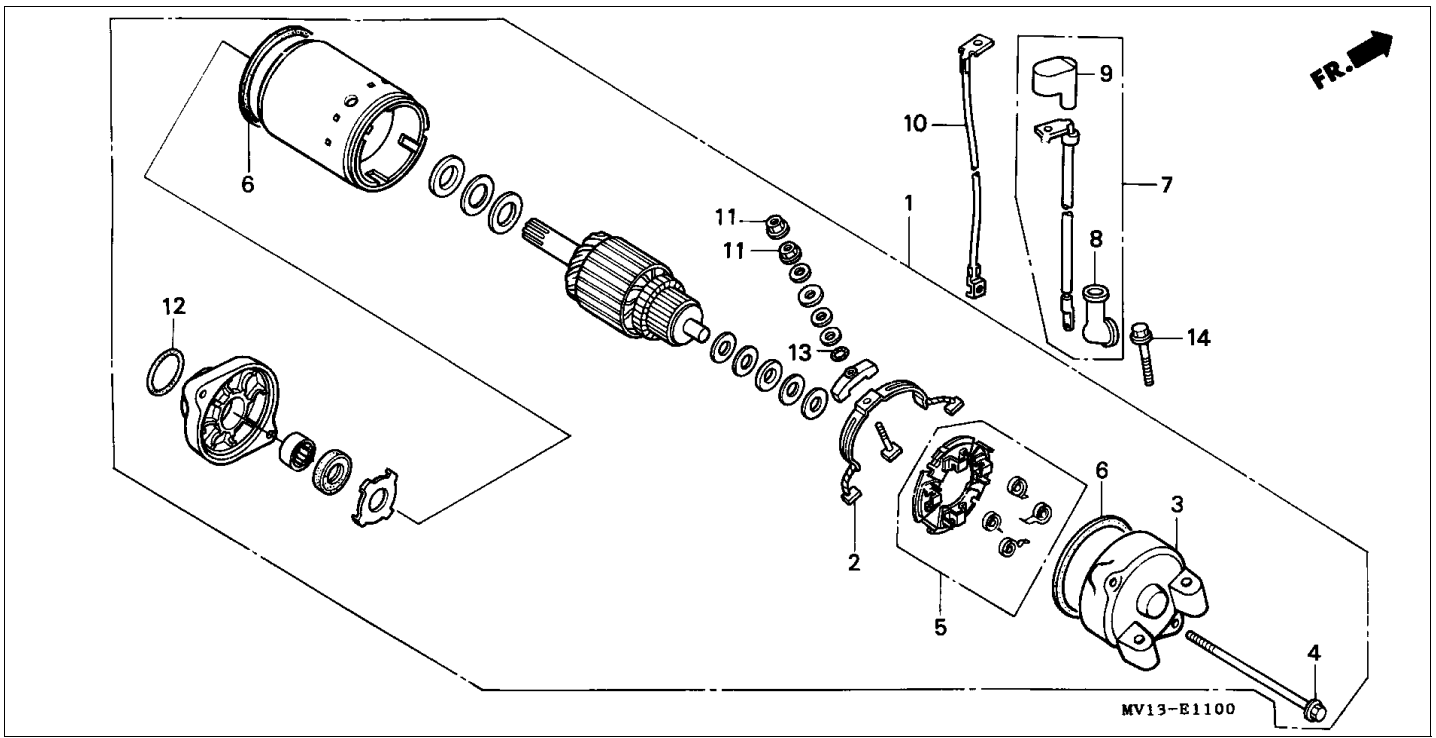

Block E-11 STARTING MOTOR


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	31200-MW6-610	MOTOR ASSY., STARTING	001	0
2	31201-MR6-008	TERMINAL SET, BRUSH	001	0
3	31203-MN8-008	BRACKET, RR.	001	0
4	31205-MR1-008	BOLT, SETTING	002	0
5	31206-MR6-008	HOLDER SET, BRUSH	001	0
6	31207-KS5-901	RING	002	0
7	32410-MM9-000	CABLE, STARTER MOTOR	001	0
8	32411-253-000	COVER, STARTER MOTOR TERMINAL	001	0
9	32414-MJ6-720	COVER A, MAGNETIC SWITCH	001	0
10	32601-MV1-000	CABLE, BATTERY EARTH	001	0
11	90071-MB0-000	NUT-WASHER, 6MM	002	0
12	91309-425-003	O-RING, 24.4X3.1 (ARAI)	001	0
13	91320-MB0-000	O-RING	001	0
14	96001-0603200	BOLT, FLANGE, 6X32	002	0

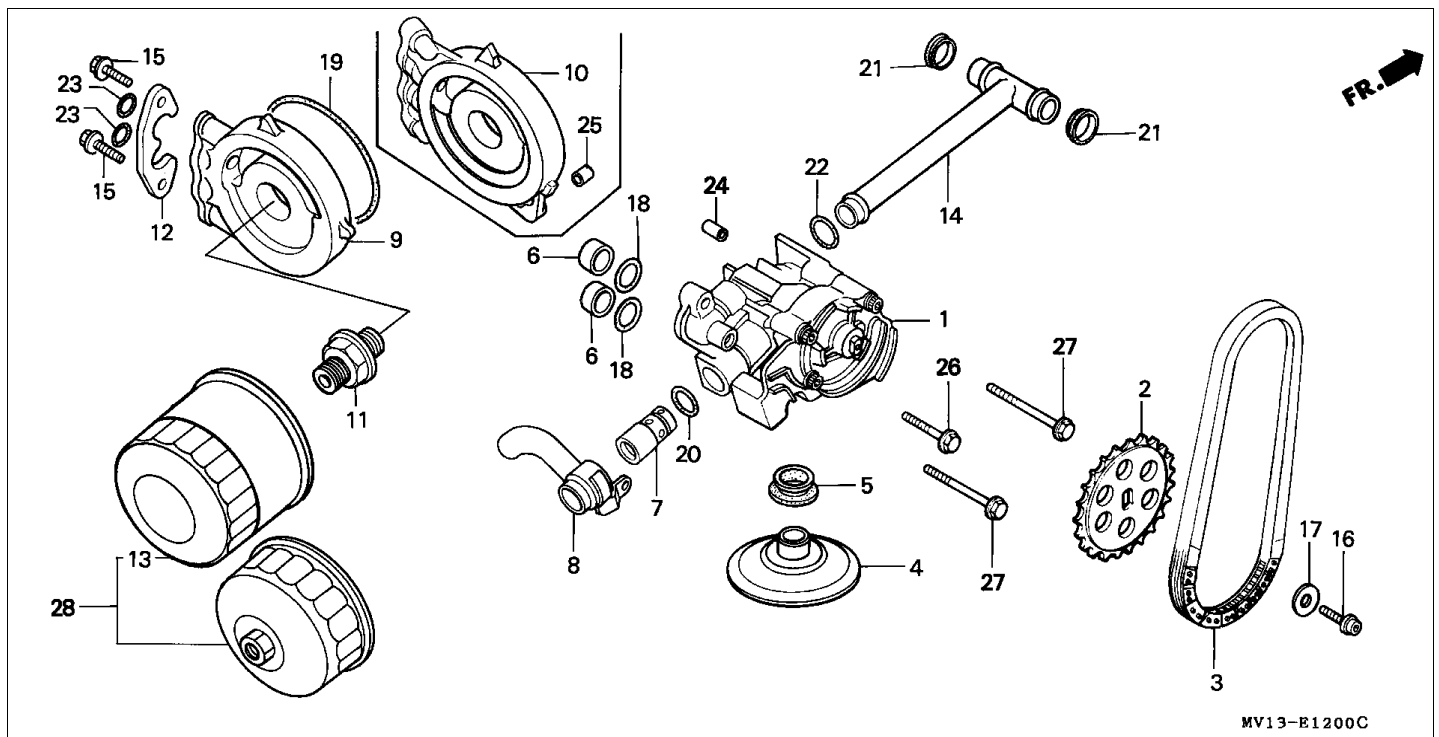

MV13-E1200C

Block E-12 OIL PUMP/OIL FILTER


Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	15100-MV1-000	PUMP ASSY., OIL	001	0
2	15134-MV1-000	SPROCKET, OIL PUMP DRIVEN (29T)	001	0
3	15136-MV1-003	CHAIN, OIL PUMP DRIVE	001	0
4	15153-MR1-000	STRAINER, OIL	001	0
5	15154-425-000	GASKET, OIL STRAINER	001	0
6	15155-300-000	COLLAR, O-RING	002	0
7	15220-MB0-010	VALVE ASSY., RELIEF	001	0
8	15240-MM9-000	PIPE, OIL RELIEF	001	0
10	15400-MV1-010	CASE, OIL DISTRIBUTING	001	0
11	15401-MV1-000	BOLT, OIL DISTRIBUTING	001	0
12	15403-MV1-850	PLATE, OIL PIPE SETTING	001	0
13	15410-MM9-003	CARTRIDGE, OIL FILTER (TOYO ROKI)	001	0
13	15410-MM9-013	CARTRIDGE, OIL FILTER (TOYO ROKI)	001	0
14	15511-MF5-000	PIPE, OIL	001	0
15	90102-MK4-000	BOLT, SPECIAL FLANGE SOCKET, 6X20	002	0
16	90009-ME5-000	BOLT, FLANGE SOCKET, 6X14	001	0
17	90488-MB0-000	WASHER, 6X2.3	001	0
18	91303-KF0-003	O-RING, 14.8X2.4 (ARAI)	002	0
19	91312-PC6-003	O-RING, 57.8X2.4	001	0
20	91313-MB0-003	O-RING, 14.7X2.2 (ARAI)	001	0
21	91315-MF5-003	SEAL, OIL PIPE	002	0
22	91319-300-000	O-RING, 13X2.5	001	0
23	91301-MV1-851	O-RING, 9.8X2.4	002	0
24	94301-08140-	DOWEL PIN, 8X14	001	0
25	94303-05080-	DOWEL PIN, 5X8	001	0
26	95701-0602800	BOLT, FLANGE, 6X28	001	0
27	95701-0604500	BOLT, FLANGE, 6X45	002	0
28	15010-MW0-000	FILTER SET, OIL	001	0

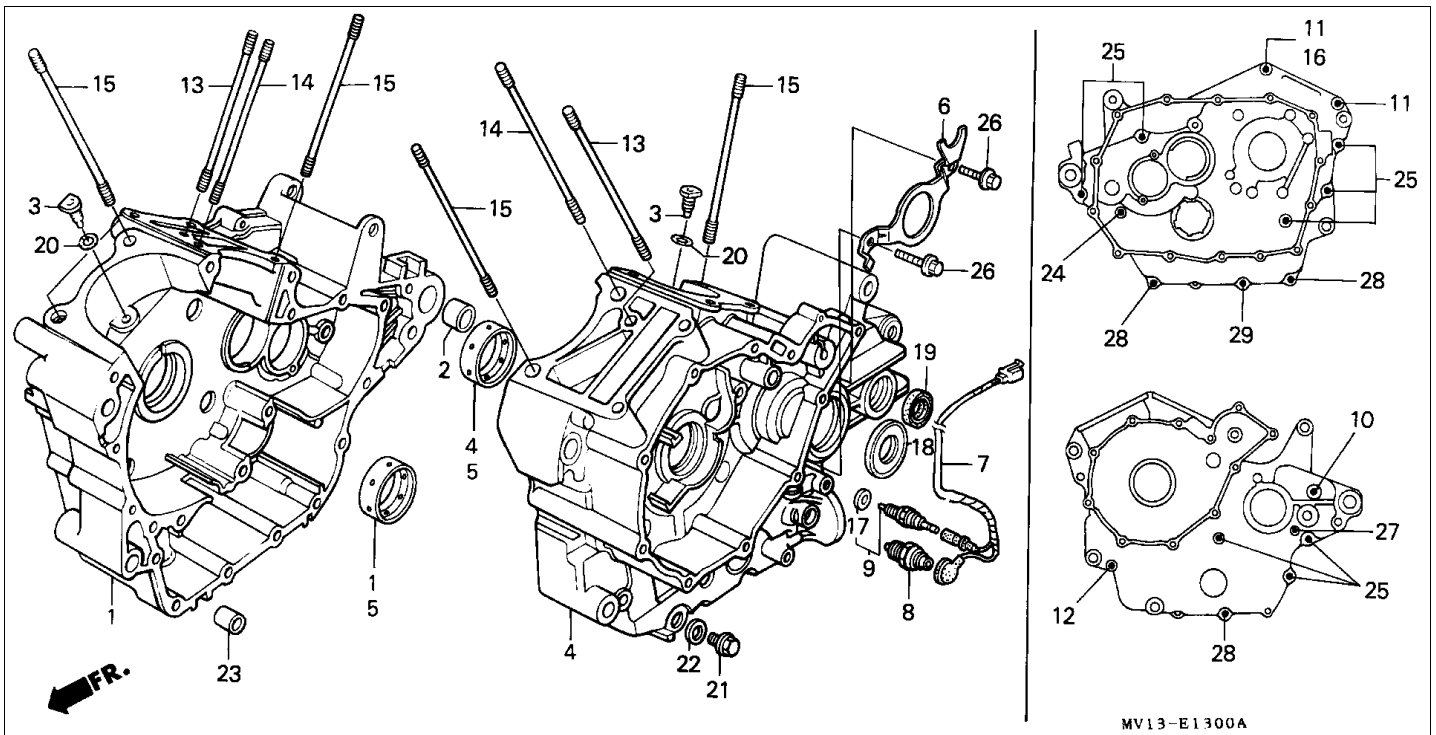

MV13-E1300A


Block E-13 CRANKCASE

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	11100-MV1-000	CRANKCASE COMP., R.	001	0
2	11105-MM9-000	COLLAR, 23X20	001	0
3	11146-MN8-000	JET, OIL	002	0
4	11200-MV1-010	CRANKCASE COMP., L.	001	0
5	13325-ME9-305	BEARING A, MAIN (BLUE)	002	0
5	13326-ME9-305	BEARING B, MAIN (BLACK)	002	0
5	13327-ME9-305	BEARING C, MAIN (BROWN)	002	0
6	23531-MV1-000	PLATE, OIL SEAL SETTING	001	0
7	32101-MS8-000	SUB HARNESS	001	0
8	35500-MJ4-024	SWITCH ASSY., OIL PRESSURE (DENSO)	001	0
9	35600-MS9-600	SWITCH ASSY., NEUTRAL	001	0
10	90001-MM9-000	BOLT, SOCKET, 8X125	001	0
11	90002-MM9-000	BOLT, FLANGE, 8X140	002	0
12	90008-KE9-000	BOLT, FLANGE, 8X70	001	0
13	90011-MV1-000	BOLT, STUD, 8X189	002	0
14	90012-MV1-000	BOLT, STUD, 12X177	002	0
15	90013-MV1-000	BOLT, STUD, 10X177	006	0
16	90441-ME9-000	WASHER, SEALING, 8MM	001	0
17	90443-KR0-000	WASHER, NEUTRAL SWITCH	001	0
18	91201-MV1-003	OIL SEAL, 28X46X7	001	0
19	91204-425-003	OIL SEAL, 12.5X25X8 (ARAI)	001	0
20	91305-MG7-003	O-RING, 5X1.7 (ARAI)	002	0
21	92800-14000-	BOLT, DRAIN PLUG, 14MM	001	0
22	94109-14000-	WASHER, DRAIN PLUG, 14MM	001	0
23	94301-14200-	DOWEL PIN, 14X20	001	0
24	95701-0806500	BOLT, FLANGE, 8X65	001	0
25	95701-0808000	BOLT, FLANGE, 8X80	008	0
26	96001-0601400	BOLT, FLANGE, 6X14	002	0
27	96001-0604000	BOLT, FLANGE, 6X40	001	0
28	96001-0605000	BOLT, FLANGE, 6X50	003	0
29	96001-0608000	BOLT, FLANGE, 6X80	001	0

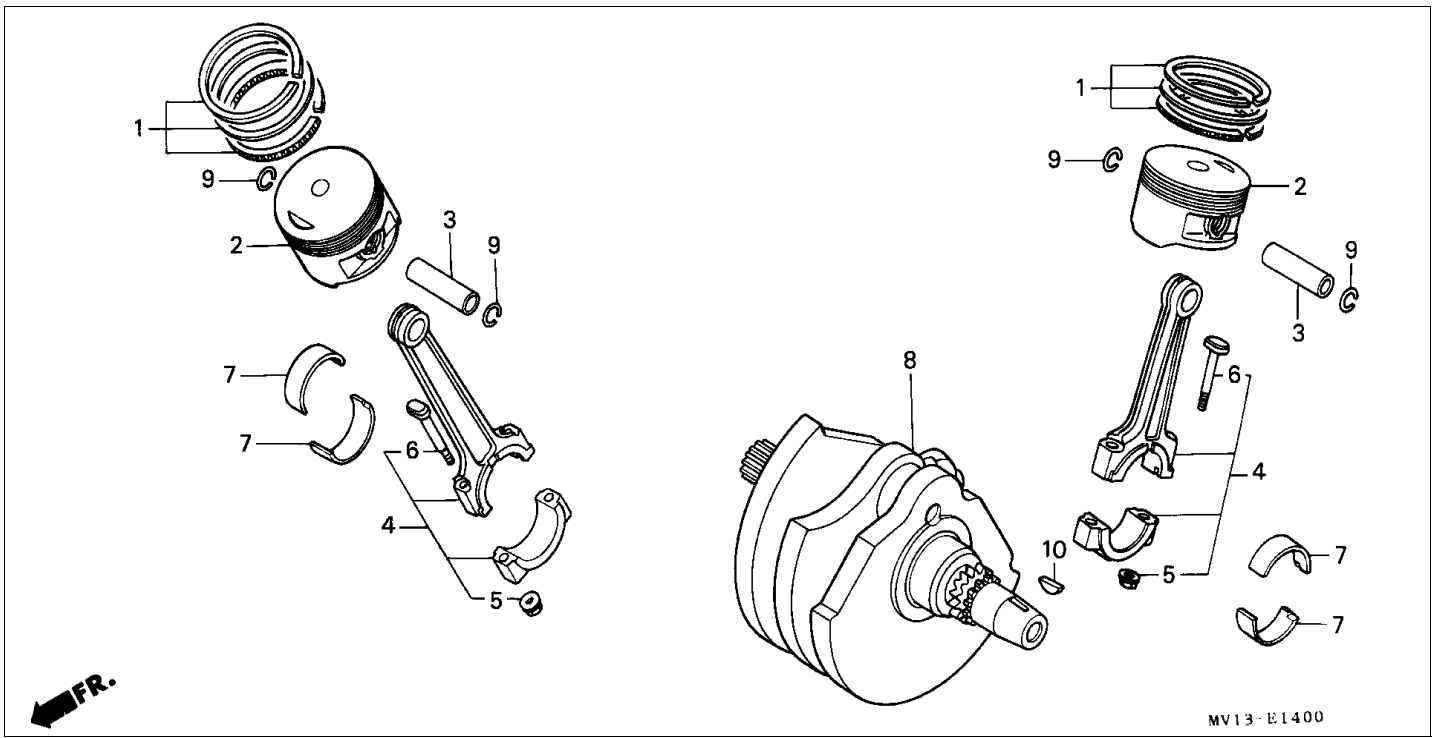


Block E-14 CRANK SHAFT/PISTON

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	13011-MV1-305	RING SET, PISTON (STD.)(RIKEN)	002	0
1	13012-MV1-305	RING SET, PISTON (0.25)(RIKEN)	(2)	0
1	13013-MV1-305	RING SET, PISTON (0.50)(RIKEN)	(2)	0
2	13101-MV1-000	PISTON (STD.)	002	0
2	13102-MV1-305	PISTON (0.25)	(2)	0
2	13103-MV1-305	PISTON (0.50)	(2)	0
3	13111-ME9-000	PIN, PISTON	002	0
4	13201-MV1-000	ROD ASSY., CONNECTING (A)	002	0
4	13202-MV1-000	ROD ASSY., CONNECTING (B)	002	0
4	13203-MV1-000	ROD ASSY., CONNECTING (C)	002	0
4	13204-MV1-000	ROD ASSY., CONNECTING (D)	002	0
5	13205-ME2-000	NUT, CONNECTING ROD	004	0
6	13213-ME2-000	BOLT, CONNECTING ROD	004	0
7	13218-MV1-003	BEARING D, CONNECTING ROD (GREEN)	004	0
7	13219-MV1-003	BEARING E, CONNECTING ROD (YELLOW)	004	0
7	13220-MV1-003	BEARING F, CONNECTING ROD (PINK)	004	0
8	13300-MV1-000	CRANKSHAFT COMP.	001	0
9	90601-KA5-000	CLIP, PISTON PIN, 1.2X20	004	0
10	90741-413-000	KEY, WOODRUFF, 25X14	001	0

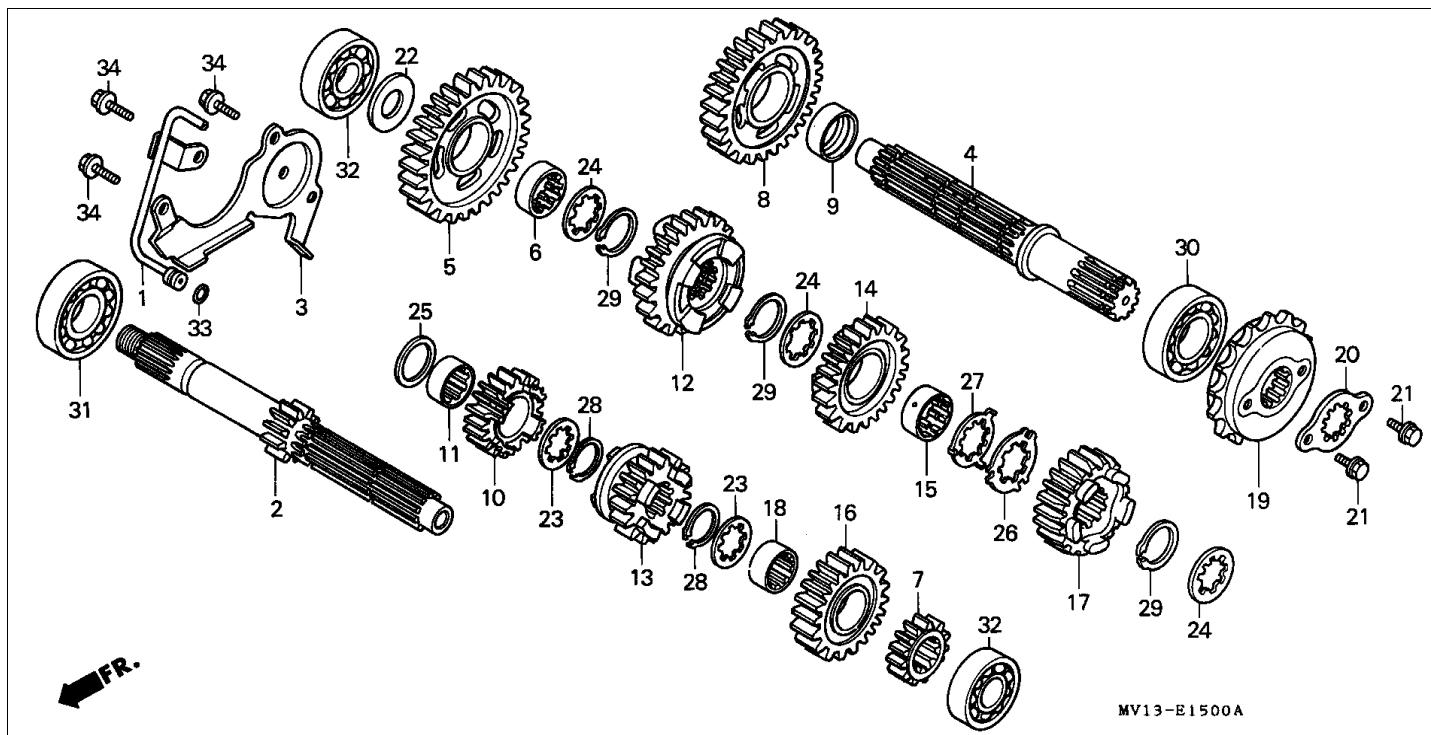


Block E-15 TRANSMISSION

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	15520-MS6-000	PIPE COMP., OIL FEED	001	0
2	23210-MV1-000	MAINSHAFT COMP. (12T)	001	0
3	23212-MS6-920	PLATE, BEARING SETTING	001	0
4	23220-MV1-000	COUNTERSHAFT	001	0
5	23421-MV1-000	GEAR, COUNTERSHAFT LOW (37T)	001	0
6	23422-MV1-000	COLLAR, SPLINE, 28X10	001	0
7	23431-MV1-000	GEAR, MAINSHAFT SECOND (16T)	001	0
8	23441-MV1-000	GEAR, COUNTERSHAFT SECOND (33T)	001	0
9	23442-MR5-670	BUSH, 28X31X10	001	0
10	23451-MV1-000	GEAR, MAINSHAFT THIRD (20T)	001	0
11	23455-MS9-750	BUSH, 25X28X13.5	001	0
12	23461-MV1-000	GEAR, COUNTERSHAFT THIRD (31T)	001	0
13	23471-MV1-000	GEAR, MAINSHAFT FOURTH (22T)	001	0
14	23481-MV1-000	GEAR, COUNTERSHAFT FOURTH (28T)	001	0
15	23482-MR7-000	COLLAR, SPLINE, 28X13.5	001	0
16	23491-MV1-000	GEAR, MAINSHAFT FIFTH (24T)	001	0
17	23501-MV1-000	GEAR, COUNTERSHAFT FIFTH (26T)	001	0
18	23512-MR7-000	COLLAR, SPLINE, 25X16	001	0
19	23801-MV1-000	SPROCKET, DRIVE (16T)	001	0
20	23811-MV1-000	PLATE, FIXING	001	0
21	90118-958-003	BOLT, FLANGE, 6X12	002	0
22	90404-KK0-000	WASHER, 20X37X2	001	0
23	90451-KY2-000	WASHER, SPLINE, 25X31X1.5	002	0
24	90452-MR7-000	WASHER, SPLINE, 28X34X1.5	003	0
25	90456-MA6-000	WASHER, THRUST, 25MM	001	0
26	90463-MR7-000	WASHER, SPLINE, 28MM	001	0
27	90464-MR7-000	WASHER, LOCK, 28MM	001	0
28	90601-107-000	CIRCLIP, 25MM	002	0
29	90603-MN4-000	CIRCLIP, 28MM	003	0
30	91001-MN5-003	BEARING, BALL, 28X54X20.6 (NTN)	001	0
31	91001-MV1-003	BEARING, RADIAL BALL, 62/25	001	0
32	91003-MG2-791	BEARING, RADIAL BALL, 6204U (TOYO)	002	0
32	91003-MG2-792	BEARING, RADIAL BALL, 6204U (KOYO)	002	0
33	91318-ME5-003	O-RING, 5.6X1.9 (ARAI)	001	0
34	95701-0601600	BOLT, FLANGE, 6X16	003	0

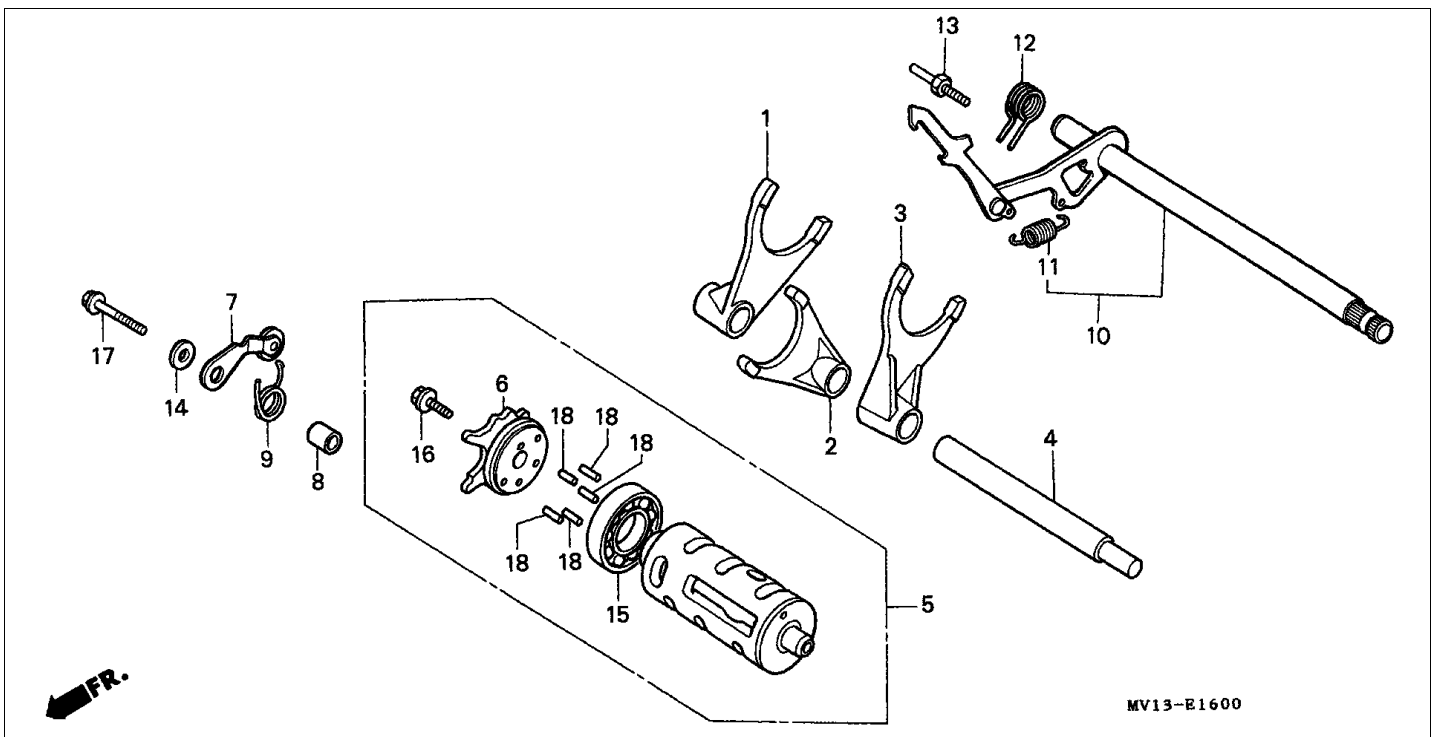


Block E-16 GEARSHIFT DRUM

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	24211-MV1-000	FORK, R. GEARSHIFT	001	0
2	24212-MV1-000	FORK, CENTER GEARSHIFT	001	0
3	24213-MV1-000	FORK, L. GEARSHIFT	001	0
4	24241-MV1-000	SHAFT, GEARSHIFT FORK GUIDE	001	0
5	24300-MV1-000	DRUM COMP., GEARSHIFT	001	0
6	24301-MM9-300	PLATE COMP., CAM	001	0
7	24430-MF5-000	STOPPER COMP., GEARSHIFT DRUM	001	0
8	24432-413-000	COLLAR, GEARSHIFT DRUM STOPPER	001	0
9	24435-MM9-000	SPRING, SHIFT DRUM STOPPER	001	0
10	24610-MM9-000	ARM COMP., GEARSHIFT	001	0
11	24641-216-000	SPRING, GEARSHIFT ARM	001	0
12	24651-MB0-000	SPRING, GEARSHIFT RETURN	001	0
13	24652-259-000	PIN, SHIFT RETURN SPRING	001	0
14	90488-MB0-000	WASHER, 6X2.3	001	0
15	91008-374-003	BEARING, BALL, 16005 (NTN)	001	0
16	95701-0601800	BOLT, FLANGE, 6X18	001	0
17	95801-0602800	BOLT, FLANGE, 6X28	001	0
18	96220-40118-	ROLLER, 4X11.8	005	0

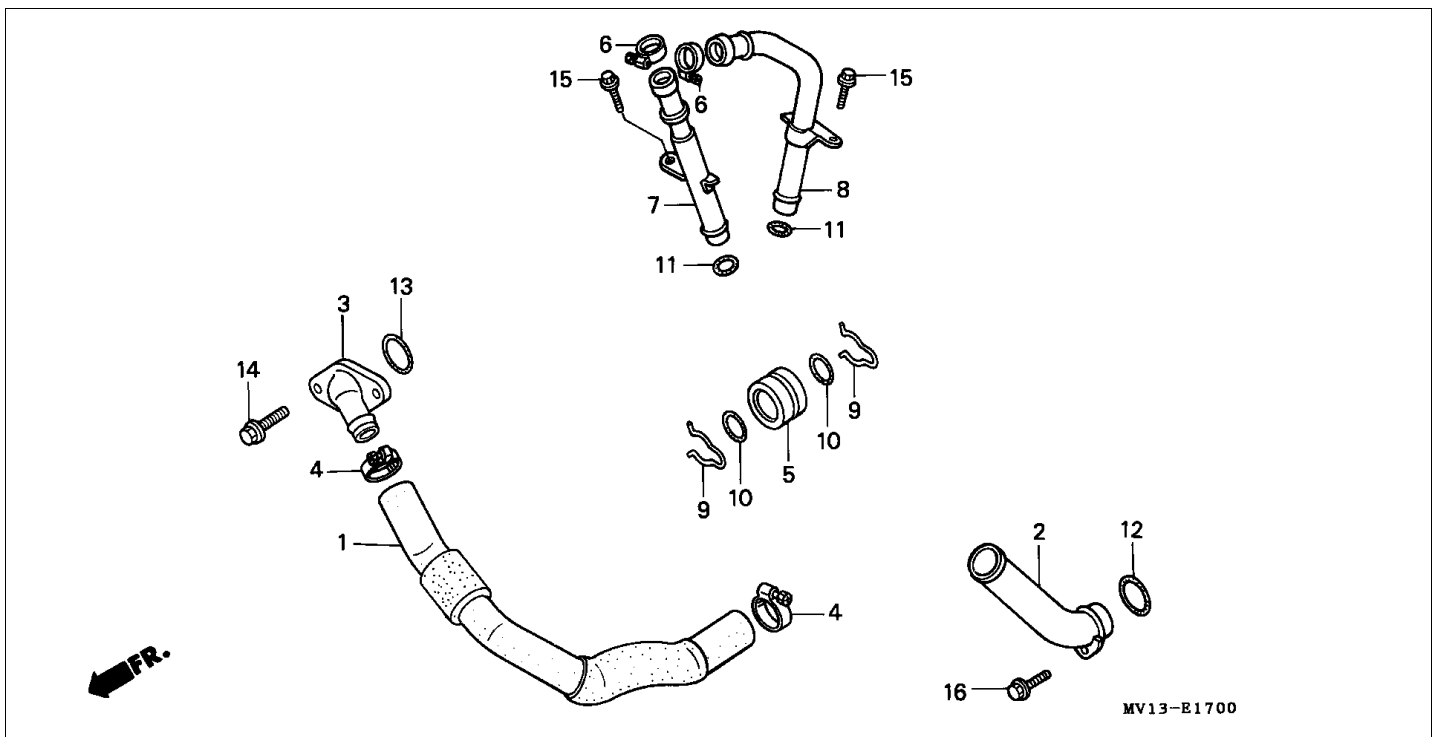


Block E-17 WATER PIPE

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	19501-MR1-000	HOSE, MAIN WATER	001	0
2	19502-MV1-000	PIPE, IN. WATER	001	0
3	19503-MR1-000	JOINT, WATER HOSE	001	0
4	19505-ML3-770	CLAMPER, WATER HOSE	002	0
5	19505-MR1-000	JOINT, WATER	001	0
6	19506-KS6-700	CLAMP B, WATER HOSE	002	0
7	19511-MV1-000	PIPE, FR. OUTLET WATER	001	0
8	19512-MV1-000	PIPE, RR. OUTLET WATER	001	0
9	90601-MR1-000	CLIP, RING, 18MM	002	0
10	91306-KK4-003	O-RING, 18X2.6 (ARAI)	002	0
11	91315-MN8-000	SEAL, WATER PIPE, 16MM	002	0
12	91316-MN8-000	SEAL, WATER PIPE, 28MM	001	0
13	91356-169-003	O-RING	001	0
14	95701-0602000	BOLT, FLANGE, 6X20	002	0
15	96001-0601200	BOLT, FLANGE, 6X12	002	0
16	96001-0601600	BOLT, FLANGE, 6X16	001	0

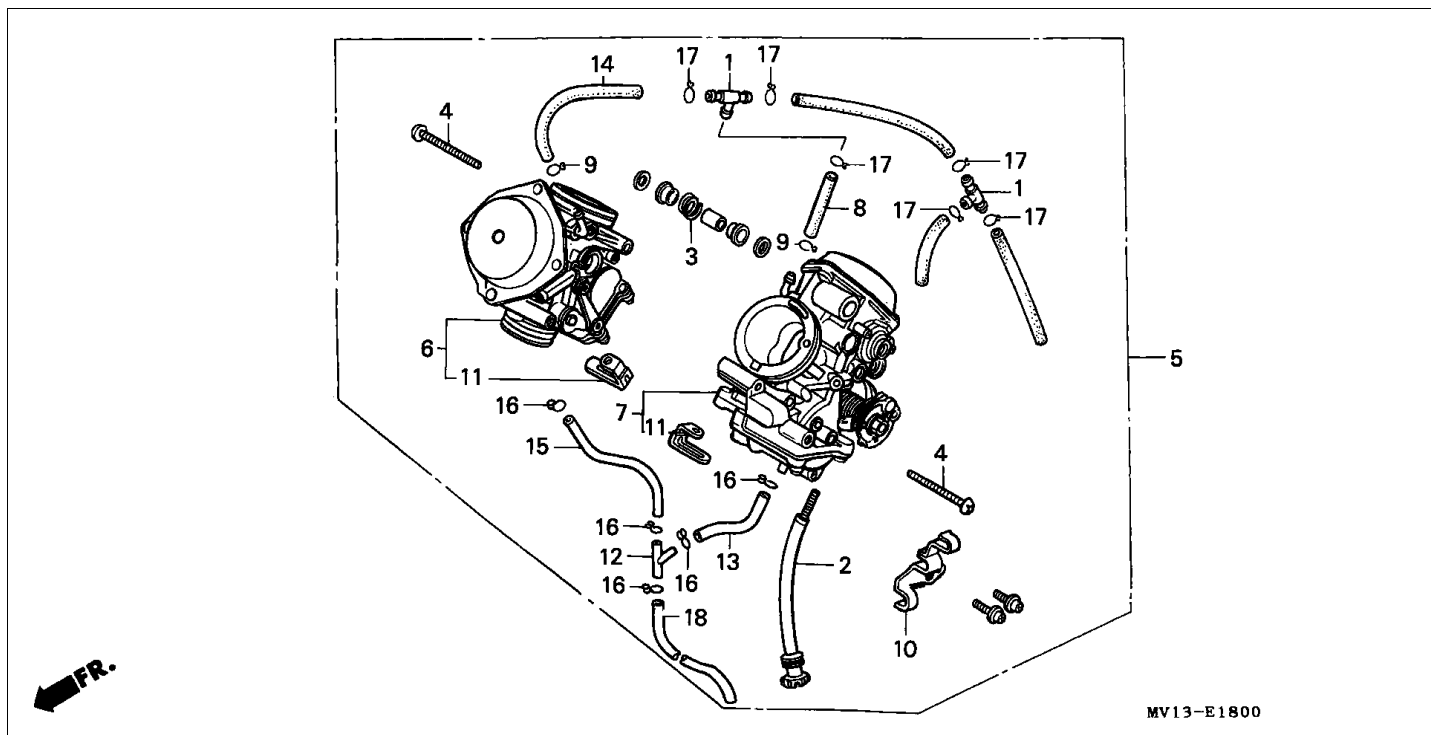


Block E-18 CARBURETOR (ASSY.)

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	16026-MN8-004	T-JOINT	002	0
2	16028-MV1-700	SCREW SET	001	0
3	16053-MG7-601	SPRING	001	0
4	16082-ME9-671	SCREW, PAN	002	0
5	16100-MV1-630	CARBURETOR ASSY. (VDG8A A)	001	0
6	16101-MV1-630	CARBURETOR ASSY., R. FR.	001	0
7	16102-MV1-630	CARBURETOR ASSY., L. RR.	001	0
8	16143-MN8-014	TUBE	001	0
9	16163-KM4-004	CLIP, TUBE	002	0
10	16169-MM9-621	STAY COMP., WIRE	001	0
11	16179-MM9-621	CLIP, PLATE	002	0
12	16180-195-731	T-JOINT	001	0
13	16198-MS8-004	TUBE	001	0
14	16199-MN8-672	TUBE	001	0
15	16199-MS8-004	TUBE	001	0
16	95002-02070-	CLIP, TUBE (B7)	005	0
17	95002-02100-	CLIP, TUBE (B10)	006	0
18	95005-3570010	TUBE, 3.5X700 (95005-35001-10M)	001	0

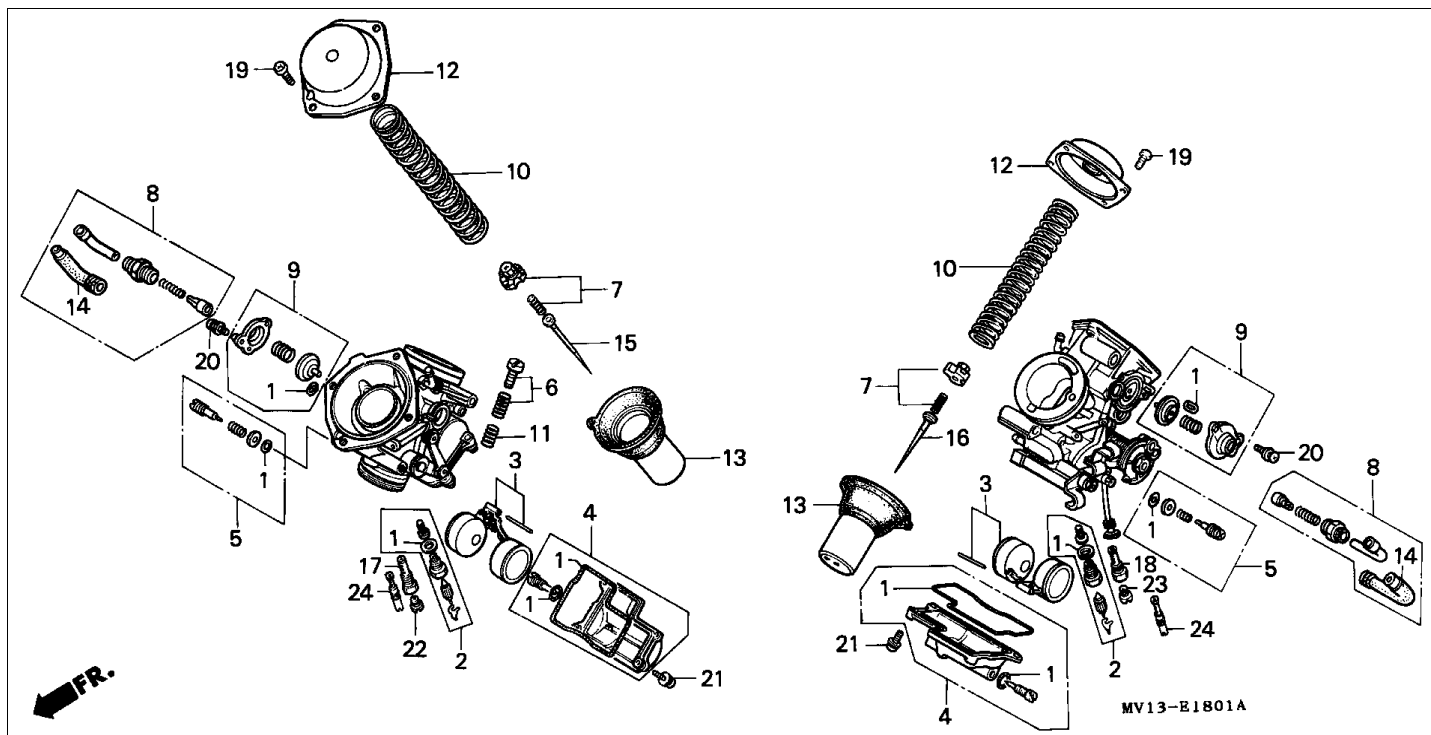

Block E-18-1 CARBURETOR (COMPONENT PARTS)


Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	16010-MV1-700	GASKET SET	002	0
2	16011-MV1-700	VALVE SET, FLOAT	002	0
3	16013-ML7-004	FLOAT SET	002	0
4	16015-MV1-700	CHAMBER SET, FLOAT	002	0
5	16016-MV1-630	SCREW SET	002	0
6	16029-MN4-003	SCREW SET	001	0
7	16037-MB4-671	PLATE SET, VALVE	002	0
8	16046-MN8-004	VALVE SET, STARTER	002	0
9	16048-MR1-004	VALVE SET, AIR CUT	002	0
10	16050-MS9-004	SPRING	002	0
11	16052-ME9-672	SPRING	001	0
12	16107-MM8-004	TOP COMP.	002	0
13	16112-MB6-881	PISTON COMP., VACUUM	002	0
14	16118-ME9-671	CAP, CABLE SEALING	002	0
15	16151-MM9-621	NEEDLE COMP., JET (RR.)	001	0
16	16151-MV1-700	NEEDLE COMP., JET	001	0
17	16165-MF5-671	HOLDER, NEEDLE JET	001	0
18	16165-MV1-630	HOLDER, NEEDLE JET	001	0
19	93500-040101A	SCREW, PAN, 4X10	008	0
20	93892-0401210	SCREW-WASHER, 4X12	004	0
21	93892-0401610	SCREW-WASHER, 4X16	008	0
22	99101-393-118	JET, MAIN, #118	001	0
23	99101-393-122	JET, MAIN, #122	001	0
24	99103-437-042	JET, SLOW, #42	002	0

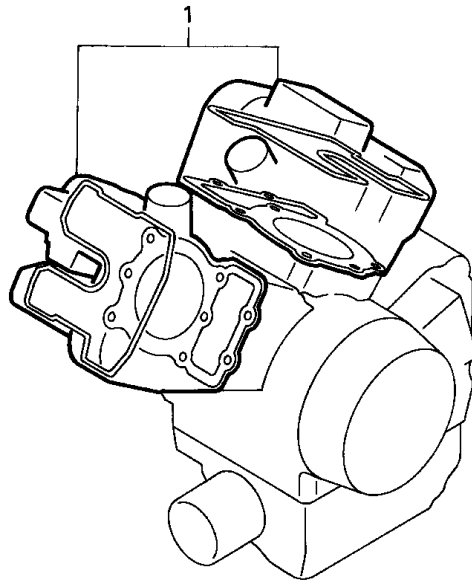

ENG1 - X0004

Block EOP-1 GASKET KIT A


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	061A1-MV1-850	GASKET KIT A (COMPONENT PARTS)	001	0
1	12191-MV1-004	GASKET, CYLINDER	002	0
1	12208-413-003	SEAL, VALVE STEM (ARAI)	004	0
1	12209-413-003	SEAL, VALVE STEM (ARAI)	002	0
1	12251-MV1-004	GASKET, CYLINDER HEAD	002	0
1	12391-MF5-750	GASKET, HEAD COVER	002	0
1	18291-MM5-860	GASKET, EX. PIPE	001	0
1	18291-MN4-920	GASKET, EX. PIPE	001	0
1	91303-MF5-003	O-RING, 44X3 (ARAI)	002	0
1	91304-MF5-003	O-RING, 62.4X2.5 (ARAI)	002	0
1	91306-KK4-003	O-RING, 18X2.6 (ARAI)	002	0
1	91315-MN8-000	SEAL, WATER PIPE, 16MM	002	0
1	91316-MN8-000	SEAL, WATER PIPE, 28MM	001	0
1	91356-169-003	O-RING	001	0

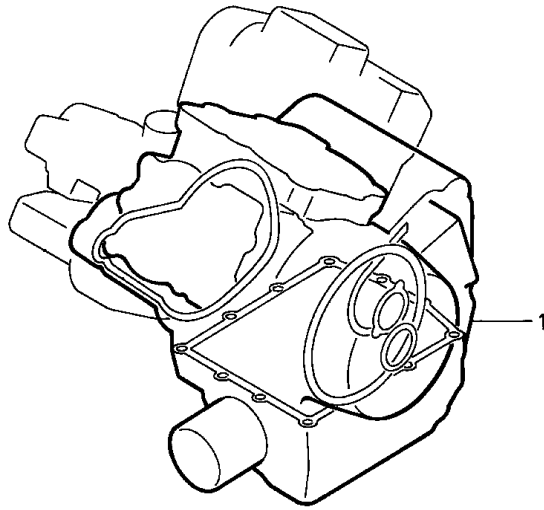

ENG2 - X0004


Block EOP-2 GASKET KIT B

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	06112-MV1-000	GASKET KIT B (COMPONENT PARTS)	001	0
1	11343-MV1-000	GASKET, PULSER COVER	001	0
1	15154-425-000	GASKET, OIL STRAINER	001	0
1	19226-MM9-000	GASKET, WATER PUMP COVER	001	0
1	90425-300-000	WASHER, 11MM	001	0
1	91201-MF2-003	OIL SEAL, 12X28X7 (ARAI)	001	0
1	91201-MV1-003	OIL SEAL, 28X46X7	001	0
1	91204-425-003	OIL SEAL, 12.5X25X8 (ARAI)	001	0
1	91204-KK0-003	OIL SEAL, 12X18X5 (ARAI)	001	0
1	91301-250-000	O-RING, 21.5MM	001	0
1	91302-MB0-013	O-RING, 32.95X2.62 (ARAI)	001	0
1	91303-377-000	O-RING, 13.8X2.5	001	0
1	91303-KF0-003	O-RING, 14.8X2.4 (ARAI)	002	0
1	91305-MG7-003	O-RING, 5X1.7 (ARAI)	002	0
1	91309-425-003	O-RING, 24.4X3.1 (ARAI)	001	0
1	91312-PC6-003	O-RING, 57.8X2.4	001	0
1	91313-MB0-003	O-RING, 14.7X2.2 (ARAI)	001	0
1	91315-MF5-003	SEAL, OIL PIPE	002	0
1	91318-ME5-003	O-RING, 5.6X1.9 (ARAI)	001	0
1	91319-300-000	O-RING, 13X2.5	001	0
1	91320-MB0-000	O-RING	001	0
1	91356-425-003	O-RING, 30MM	001	0
1	94109-14000-	WASHER, DRAIN PLUG, 14MM	001	0
1	11394-MV1-850	GASKET, R. COVER	001	0
1	11395-MV1-850	GASKET, L. COVER	001	0
1	91301-MV1-851	O-RING, 9.8X2.4	002	0

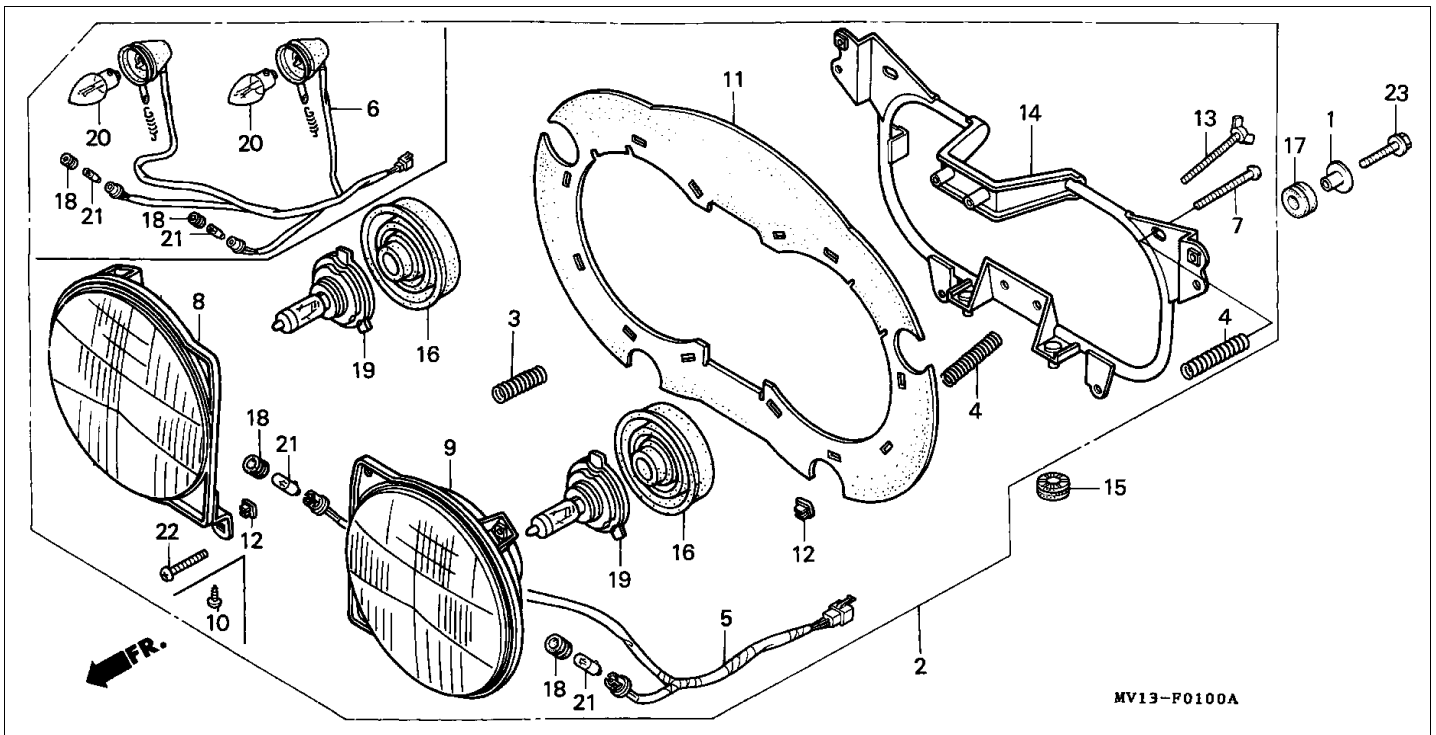


Block F-1 HEADLIGHT

Refrnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	19052-MB0-000	COLLAR, RADIATOR MOUNTING	002	0
2	33100-MS8-832	HEADLIGHT ASSY., DUAL (12V 60/55W)	001	0
3	33107-KR0-003	SPRING, SETTING	002	0
4	33108-MJ0-003	SPRING, ADJUSTING	004	0
5	33110-MS8-871	SOCKET ASSY., POSITION LIGHT	001	0
7	33114-MS8-871	SCREW, BEAM ADJUSTING	002	0
8	33120-MS8-831	HEADLIGHT UNIT, R.	001	0
9	33121-MS8-831	HEADLIGHT UNIT, L.	001	0
11	33130-MS8-611	RUBBER, HEADLIGHT SEAL	001	0
12	33135-MS8-611	NUT, SPECIAL	004	0
13	33142-MM9-003	SCREW, SPECIAL	002	0
14	33155-MS8-871	BRACKET COMP.	001	0
15	33157-MJ0-000	RUBBER, HEADLIGHT BRACKET	002	0
16	33180-MJ0-010	COVER, RUBBER	002	0
17	33712-KT1-670	RUBBER, TAILLIGHT	002	0
18	33905-371-601	RUBBER, JOINT	001	0
19	34901-MC7-601	BULB, HEADLIGHT (STANLEY) (12V 60/55W)	002	0
21	34903-388-611	BULB, POSITION (12V 4W)	001	0
22	90110-MK5-611	SCREW, PAN	002	0
23	95701-0602207	BOLT, FLANGE, 6X22	002	0

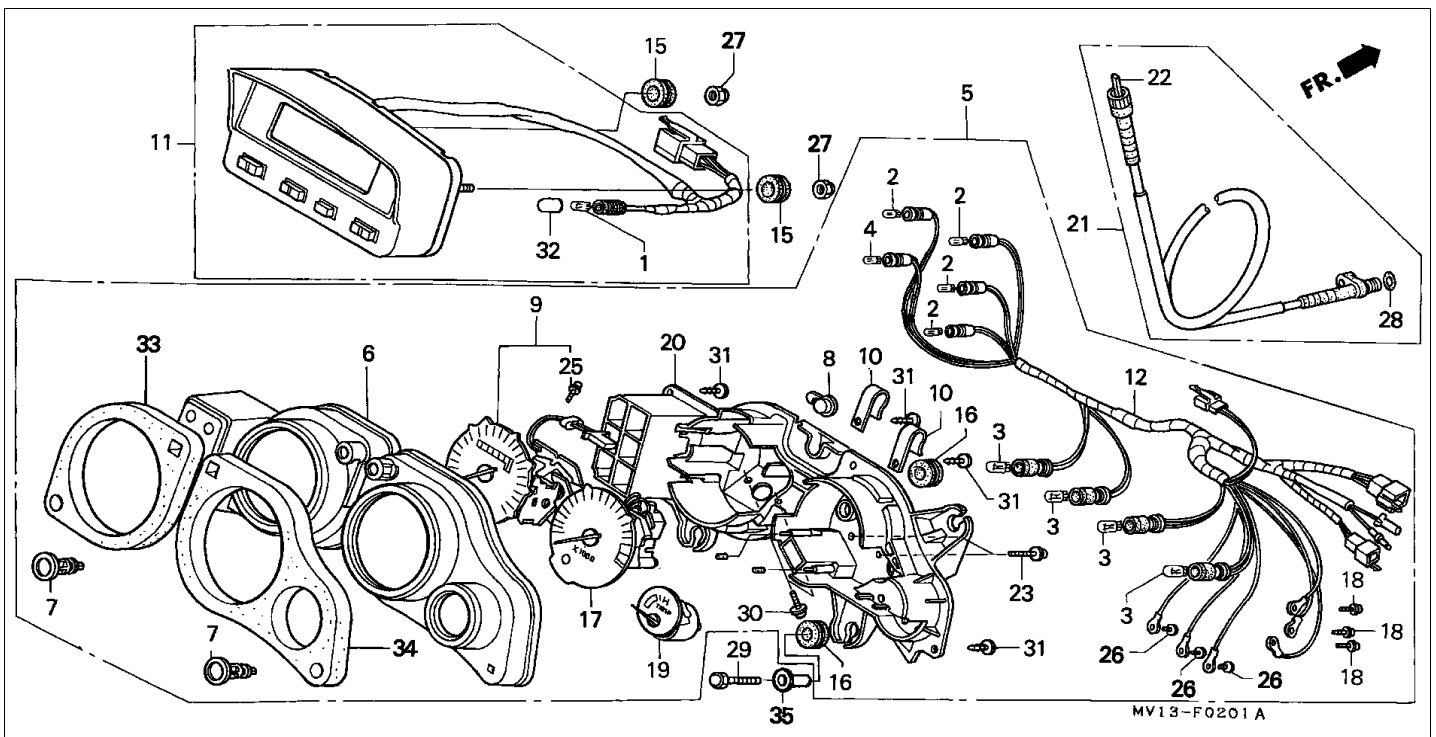


Block F-2-1 METER (XR750N)

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	34908-GE0-701	BULB, WEDGE BASE (12V/2W)	001	0
2	34908-KM1-671	BULB, WEDGE BASE (T6.5) (12V 3W)	006	0
3	34908-MB9-871	BULB, WEDGE BASE (12V 1.7W)	004	0
4	34908-MG9-951	BULB, WEDGE BASE (12V 1.7W)	001	0
5	37100-MV1-941	METER ASSY., COMBINATION (KPH)	001	0
6	37110-MV1-941	CASE ASSY., UPPER	001	0
7	37112-MS8-003	CLIP, METER PANEL	002	0
8	37113-ML7-008	CAP	001	0
9	37200-MV1-941	SPEEDOMETER ASSY. (KPH)	001	0
10	37215-MV1-941	CLAMP	002	0
11	37220-MV1-941	METER ASSY., DIGITAL TRIP	001	0
12	37222-MV1-941	SOCKET COMP.	001	0
15	37242-435-700	RUBBER, SPEEDOMETER MOUNTING	002	0
16	37244-MB6-631	RUBBER, METER MOUNTING	004	0
17	37250-MV1-941	TACHOMETER ASSY.	001	0
18	37305-KE5-008	SCREW-WASHER, 3X22	003	0
19	37400-MV1-941	METER ASSY., TEMPERATURE	001	0
20	37610-MV1-941	CASE ASSY., LOWER	001	0
21	44830-MV1-000	CABLE ASSY., SPEEDOMETER	001	0
22	44831-443-720	CABLE, SPEEDOMETER INNER	001	0
23	90032-ML7-671	SCREW, TAPPING, 4X36	002	0
25	90102-MT8-008	SCREW-WASHER, 3X12	002	0
26	90108-GN2-008	SCREW-WASHER, 3X10	003	0
27	90215-GM0-000	NUT, CAP, 6MM	002	0
28	91301-027-000	O-RING, 6.8X1.9	001	0
29	92501-060250G	BOLT, CAP, 6X25	004	0
30	93893-0401210	SCREW-WASHER, 4X12	002	0
31	93913-24420-	SCREW, TAPPING, 4X16 (PO)	008	0
32	34909-MV1-941	CAP, BULB	001	0
33	37205-MV1-941	PANEL, SPEEDOMETER	001	0
34	37241-MV1-941	PANEL, TACHOMETER & TEMPERATURE METER	001	0
35	84702-KV0-670	COLLAR, NUMBER PLATE BRACKET	004	0

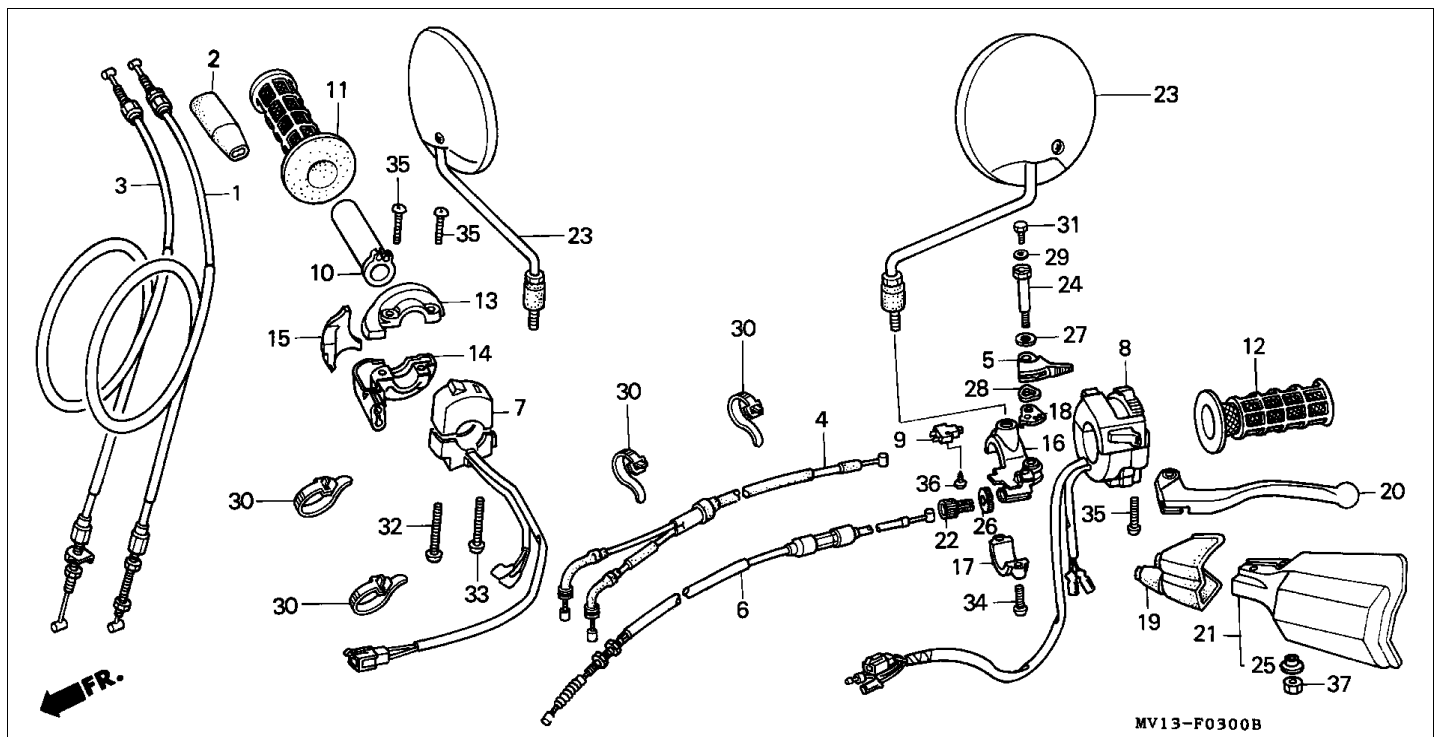


Block F-3 HANDLE LEVER/SWITCH/ CABLE

Refrnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	17910-MV1-000	CABLE COMP. A, THROTTLE	001	0
2	17913-KB7-000	COVER, THROTTLE CABLE	001	0
3	17920-MV1-000	CABLE COMP. B, THROTTLE	001	0
4	17950-MS8-000	CABLE COMP., CHOKE	001	0
5	17961-MG2-000	LEVER COMP., CHOKE	001	0
6	22870-MV1-000	CABLE COMP., CLUTCH	001	0
7	35130-MS8-000	SWITCH ASSY., STARTER KILL	001	0
8	35200-MS6-910	SWITCH ASSY., WINKER	001	0
9	35330-MK5-003	SWITCH ASSY., CLUTCH	001	0
10	53141-MR7-000	PIPE, THROTTLE GRIP	001	0
11	53165-MV1-000	GRIP, R. HANDLE	001	0
12	53166-MV1-000	GRIP, L. HANDLE	001	0
13	53167-KB7-000	HOUSING, UPPER THROTTLE	001	0
14	53168-MG7-000	HOUSING, UNDER THROTTLE	001	0
15	53169-KB7-000	SLIDER, THROTTLE CABLE	001	0
16	53172-MK5-000	BRACKET, L. HANDLE LEVER	001	0
17	53174-KE1-000	HOLDER, L. LEVER BRACKET	001	0
18	53176-MM9-000	PLATE, POINT	001	0
19	53177-MK5-000	COVER, L. HANDLE LEVER	001	0
20	53178-MG7-003	LEVER, L. STEERING HANDLE	001	0
21	53185-MN9-000	GUARD, L. KNUCKLE *NH138*	001	0
22	53192-268-000	BOLT, WIRE ADJUSTING	001	0
23	88110-MV1-000	MIRROR ASSY., R. BACK	002	0
24	90114-MK5-000	BOLT, LEVER PIVOT	001	0
25	90127-KF0-770	COLLAR, 6X4	001	0
26	90321-315-670	NUT, FIXING	001	0
27	90405-463-000	WASHER, 8MM	001	0
28	90406-KF0-003	WASHER, WAVE	001	0
29	90554-240-000	WASHER B	001	0
30	90650-KW3-000	BAND, WIRE	004	0
31	92101-050120A	BOLT, HEX., 5X12	001	0
32	93500-040320G	SCREW, PAN, 4X32	001	0
33	93500-040450G	SCREW, PAN, 4X45	001	0
34	93500-050160G	SCREW, PAN, 5X16	002	0
35	93500-050200G	SCREW, PAN, 5X20	004	0
36	93901-32320-	SCREW, TAPPING, 3X12	001	0
37	94001-060000S	NUT, HEX., 6MM	001	0

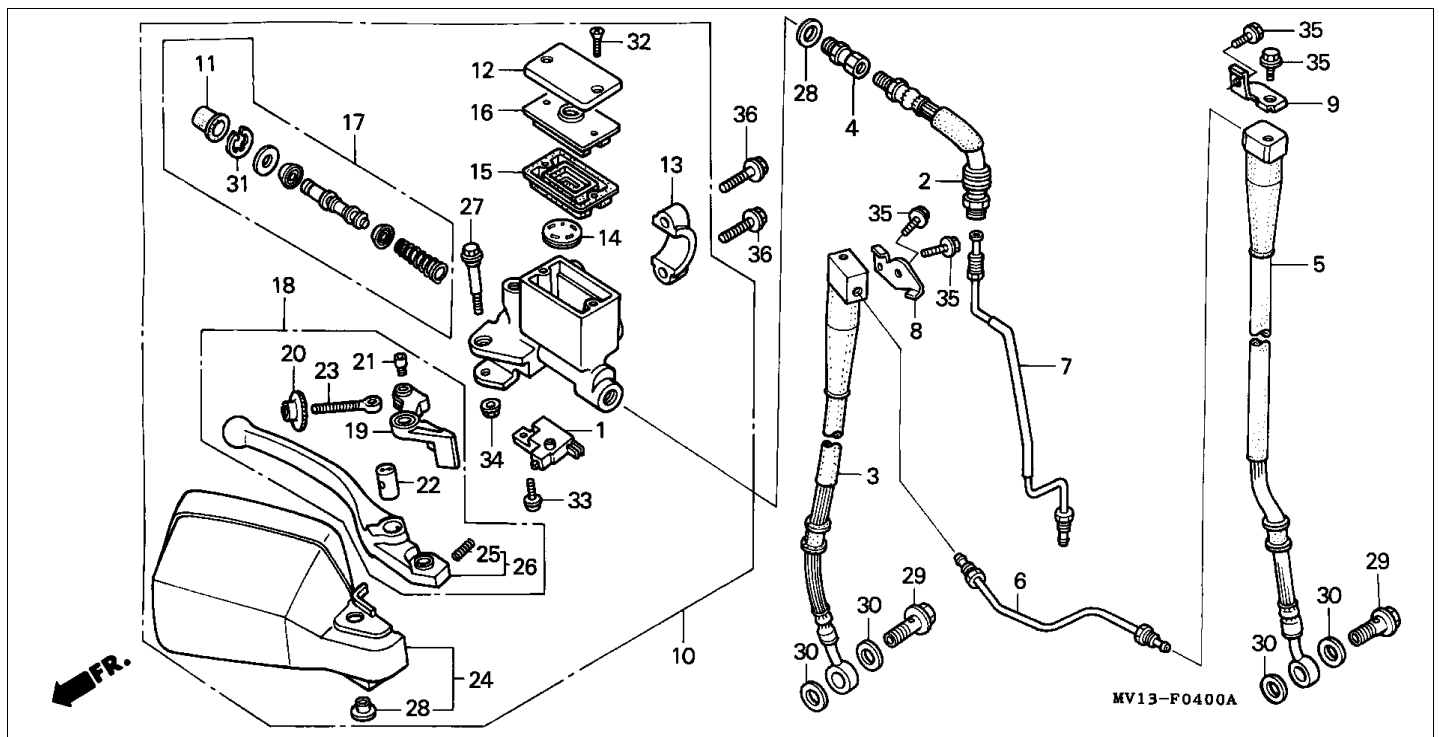


Block F-4 FR. BRAKE MASTER CYLINDER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	35340-MM5-600	SWITCH ASSY., FR. STOP	001	0
2	45125-MV1-003	HOSE, BRAKE UPPER	001	0
3	45126-MV1-000	HOSE, R. FR. BRAKE	001	0
4	45127-KZ4-003	JOINT, BRAKE HOSE	001	0
5	45127-MV1-000	HOSE, L. FR. BRAKE	001	0
6	45136-MV1-000	PIPE COMP., FR. BRAKE LOWER	001	0
7	45135-MV1-000	PIPE COMP., FR. BRAKE UPPER	001	0
8	45462-MV1-000	STAY, BRAKE HOSE (A)	001	0
9	45463-MV1-000	STAY, BRAKE HOSE (B)	001	0
10	45500-MV1-006	CYLINDER ASSY., FR. MASTER *NH138*	001	0
11	45504-410-003	BOOT COMP.	001	0
12	45513-KK1-771	CAP, MASTER CYLINDER	001	0
13	45517-166-006	HOLDER, MASTER CYLINDER	001	0
14	45518-MG3-016	SEPARATOR COMP.	001	0
15	45520-MG7-006	DIAPHRAGM	001	0
16	45521-HA2-006	PLATE, DIAPHRAGM	001	0
17	45530-471-831	CYLINDER SET, MASTER	001	0
18	53170-MN9-000	LEVER ASSY., R. HANDLE	001	0
19	53171-MJ4-006	KNOCKER, MASTER CYLINDER	001	0
20	53172-KV0-006	ADJUSTER, R. HANDLE LEVER	001	0
21	53177-KV0-006	BOLT, LEVER SOCKET, 5X5	001	0
22	53179-KV0-006	JOINT, LEVER	001	0
23	53180-KV0-006	BOLT, ADJUSTING	001	0
24	53180-MN9-000	GUARD, R. KNUCKLE *NH138*	001	0
25	53181-KV0-006	SPRING, HANDLE LEVER	001	0
26	53185-MN9-305	LEVER SET, R. HANDLE	001	0
27	90114-MN9-006	BOLT, HANDLE LEVER	001	0
28	90127-KF0-770	COLLAR, 6X4	001	0
29	90145-MS9-611	BOLT, OIL, 10X22	002	0
30	90545-300-000	WASHER, OIL BOLT	005	0
31	90651-MA5-671	CIRCLIP	001	0
32	93600-040121G	SCREW, FLAT, 4X12	002	0
33	93893-0401218	SCREW-WASHER, 4X12	001	0
34	94050-06000-	NUT, FLANGE, 6MM	001	0
35	96001-0601000	BOLT, FLANGE, 6X10	004	0
36	96001-0602207	BOLT, FLANGE, 6X22	002	0

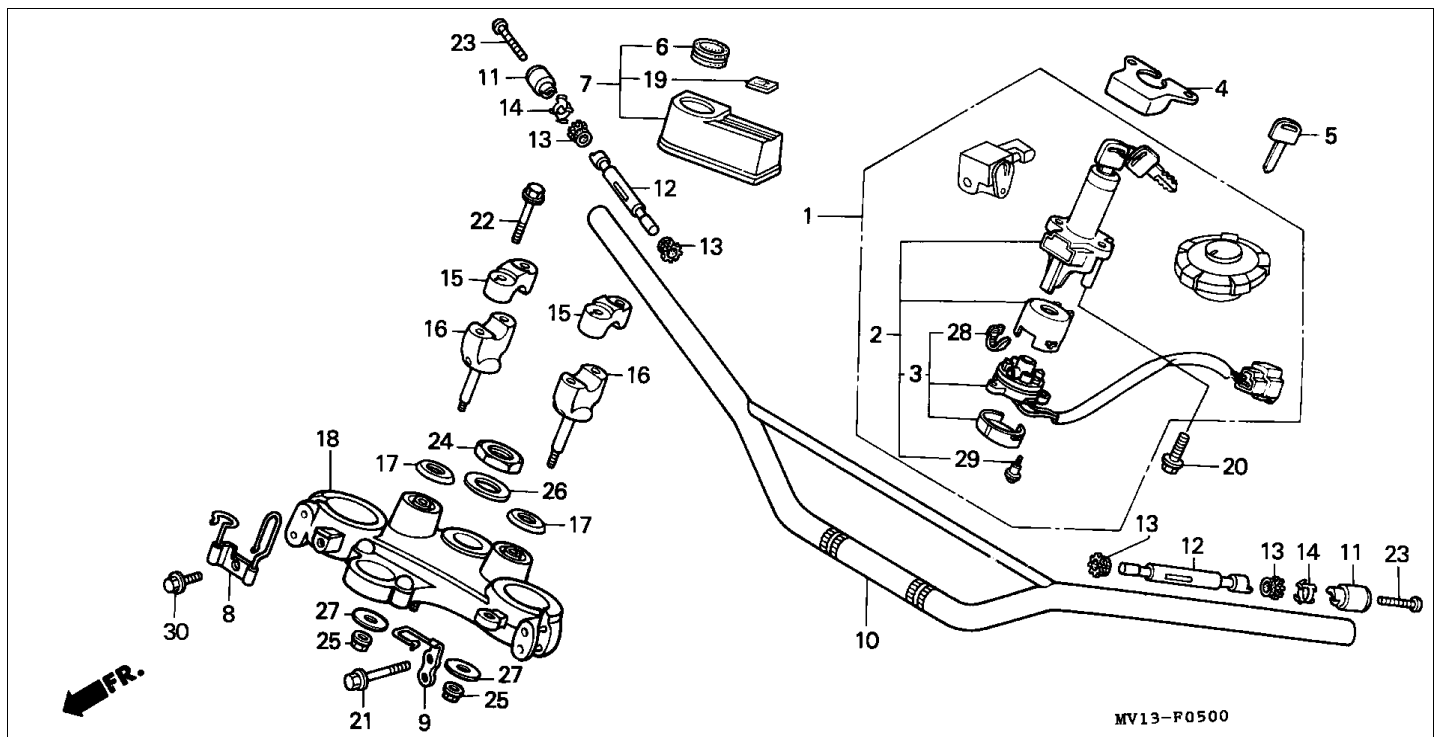


Block F-5 HANDLE PIPE/TOP BRIDGE

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	35010-MV1-621	KEY SET	001	0
2	35100-MS8-612	SWITCH ASSY., COMBINATION & LOCK	001	0
3	35101-MM9-612	BASE COMP., CONTACT	001	0
4	35106-MB0-610	COVER, COMBINATION SWITCH	001	0
5	35121-MN9-611	KEY, BLANK	(1)	0
6	37312-KB7-008	GROMMET, COMBINATION SWITCH	001	0
7	37610-MS8-000	COVER COMP., IGNITION SWITCH	001	0
8	45461-MS8-000	HOLDER, BRAKE HOSE UPPER	001	0
9	50296-MN9-000	GUIDE, CLUTCH CABLE	001	0
10	53100-MV1-000	BAR, STEERING HANDLE *YR112MU*	001	0
11	53104-MJ6-000	WEIGHT, HANDLE (A)	002	0
12	53104-MS2-000	WEIGHT B, STEERING HANDLE	002	0
13	53106-KR3-000	RUBBER A, HANDLE WEIGHT	004	0
14	53108-KR3-770	RING, HANDLE WEIGHT SNAP	002	0
15	53131-MS8-000	HOLDER, UPPER	002	0
16	53132-MS8-000	HOLDER, HANDLE UNDER	002	0
17	53135-MS8-000	CAP, HANDLE PIPE	002	0
18	53220-MS8-000	BRIDGE COMP., FORK TOP	001	0
19	87122-KY7-910	MARK, WING	001	0
20	90105-KE1-722	BOLT, COMBINATION SWITCH SETTING	002	0
21	90107-KF0-000	BOLT, FLANGE, 8X40	004	0
22	90111-362-000	BOLT, FLANGE, 8X36	004	0
23	90191-MJ0-000	SCREW, OVAL, 6X50	002	0
24	90304-415-000	NUT, STEERING STEM	001	0
25	90309-KF0-003	NUT, FLANGE, 8MM	002	0
26	90503-283-000	WASHER, STEERING STEM	001	0
27	90535-KB9-000	WASHER, HANDLE CUSHION	002	0
28	91058-MG9-681	BAND, SELF LOCK	001	0
29	91059-KY2-711	SCREW, TAPPING, 3X16	003	0
30	96400-0601000	BOLT, FLANGE, 6X10	001	0

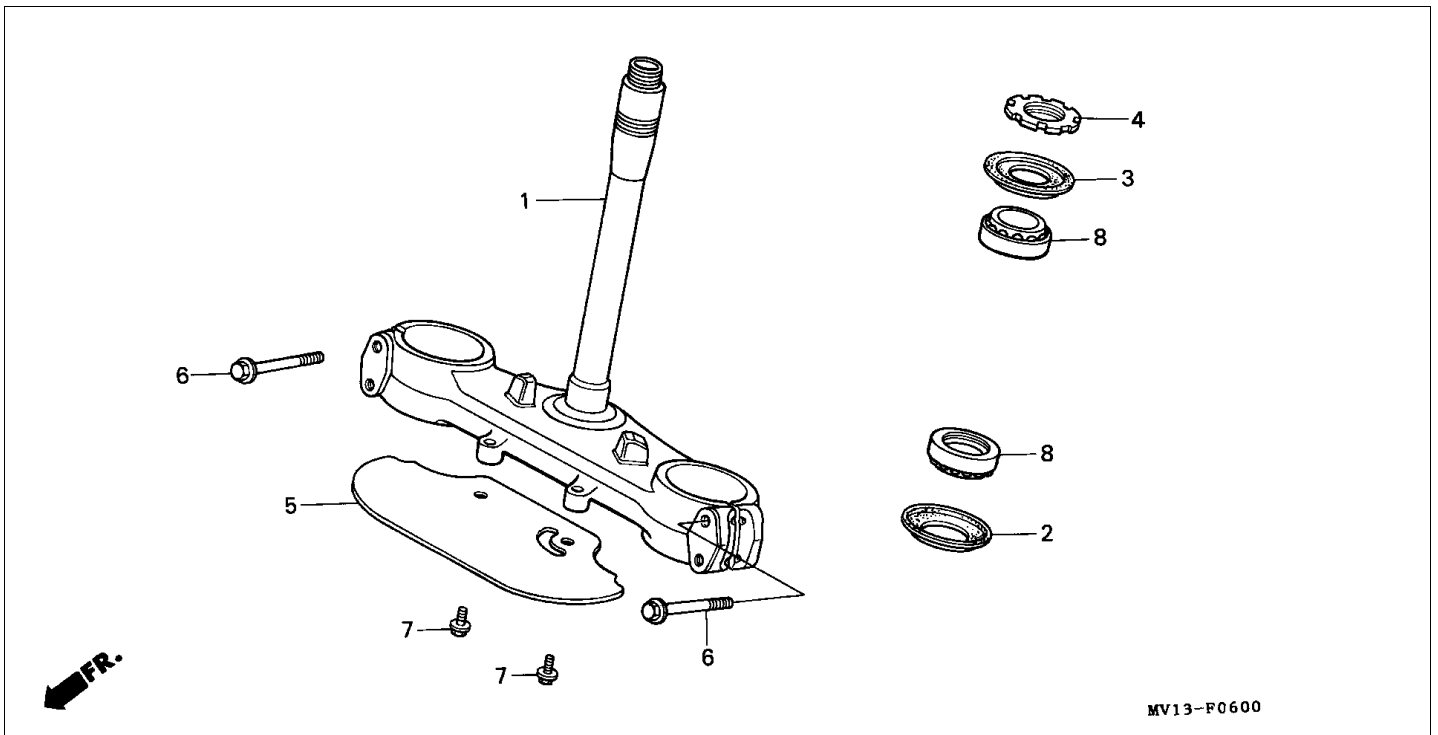


Block F-6 STEERING STEM

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	53200-MS8-000	STEM COMP., STEERING	001	0
2	53214-KA4-701	DUST SEAL, STEERING HEAD (ARAI)	001	0
3	53214-MM9-003	DUST SEAL, STEERING HEAD (ARAI)	001	0
3	53214-MM9-005	DUST SEAL, STEERING HEAD (NOK)	001	0
4	53229-KN5-650	THREAD, STEERING HEAD TOP	001	0
5	61120-MM9-000	PLATE, AIR GUIDE	001	0
6	90107-KF0-000	BOLT, FLANGE, 8X40	004	0
7	90111-ML0-730	BOLT, FLANGE, 6MM	002	0
8	91015-KT8-005	BEARING, HEAD PIPE UPPER (KOYO)	002	0

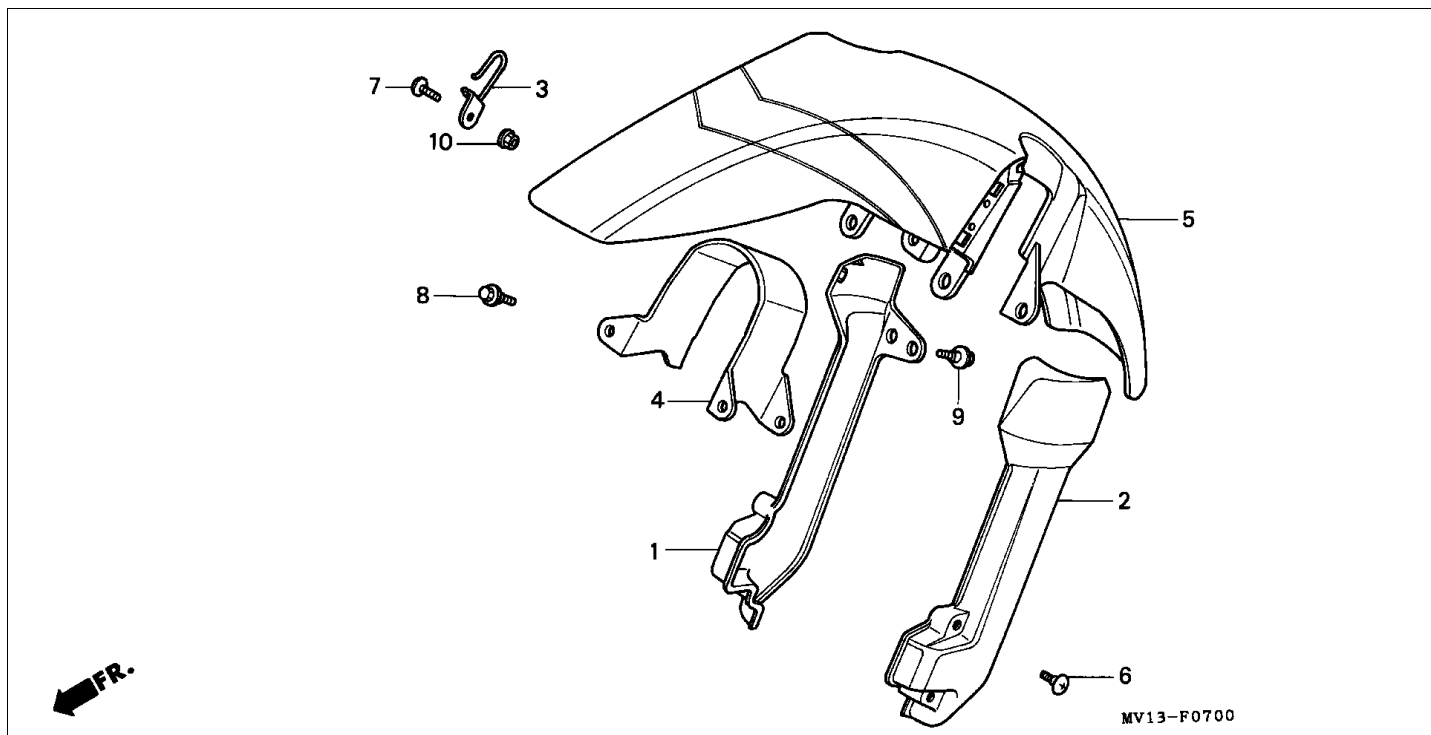


Block F-7 FRONT FENDER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	45340-MV1-000	COVER, R. BOTTOM CASE *NH138*	001	0
1	45340-MV1-000	COVER, R. BOTTOM CASE *NH1*	001	0
1	45340-MV1-000	COVER, R. BOTTOM CASE *PB136*	001	0
2	45350-MV1-000	COVER, L. BOTTOM CASE *NH138*	001	0
2	45350-MV1-000	COVER, L. BOTTOM CASE *NH1*	001	0
2	45350-MV1-000	COVER, L. BOTTOM CASE *PB136*	001	0
3	45451-MV1-000	GUIDE, SPEEDOMETER CABLE	001	0
4	53240-MS8-000	BRACE, FR. FORK	001	0
5	61200-MV1-930	FENDER SET, FR. (WL) *TYPE1*	001	0
5	61200-MV1-930	FENDER SET, FR. (WL) *TYPE2*	001	0
5	61200-MV1-930	FENDER SET, FR. (WL) *TYPE3*	001	0
6	90103-MN9-000	BOLT, FR. DISK	004	0
7	90105-KS6-700	BOLT, DISK, 6X17	001	0
8	90106-MM9-000	BOLT, FR. FENDER FIXING	002	0
9	90106-MN9-000	BOLT, FR. FENDER FIXING	002	0
10	94071-06080-	NUT-WASHER, 6MM	001	0

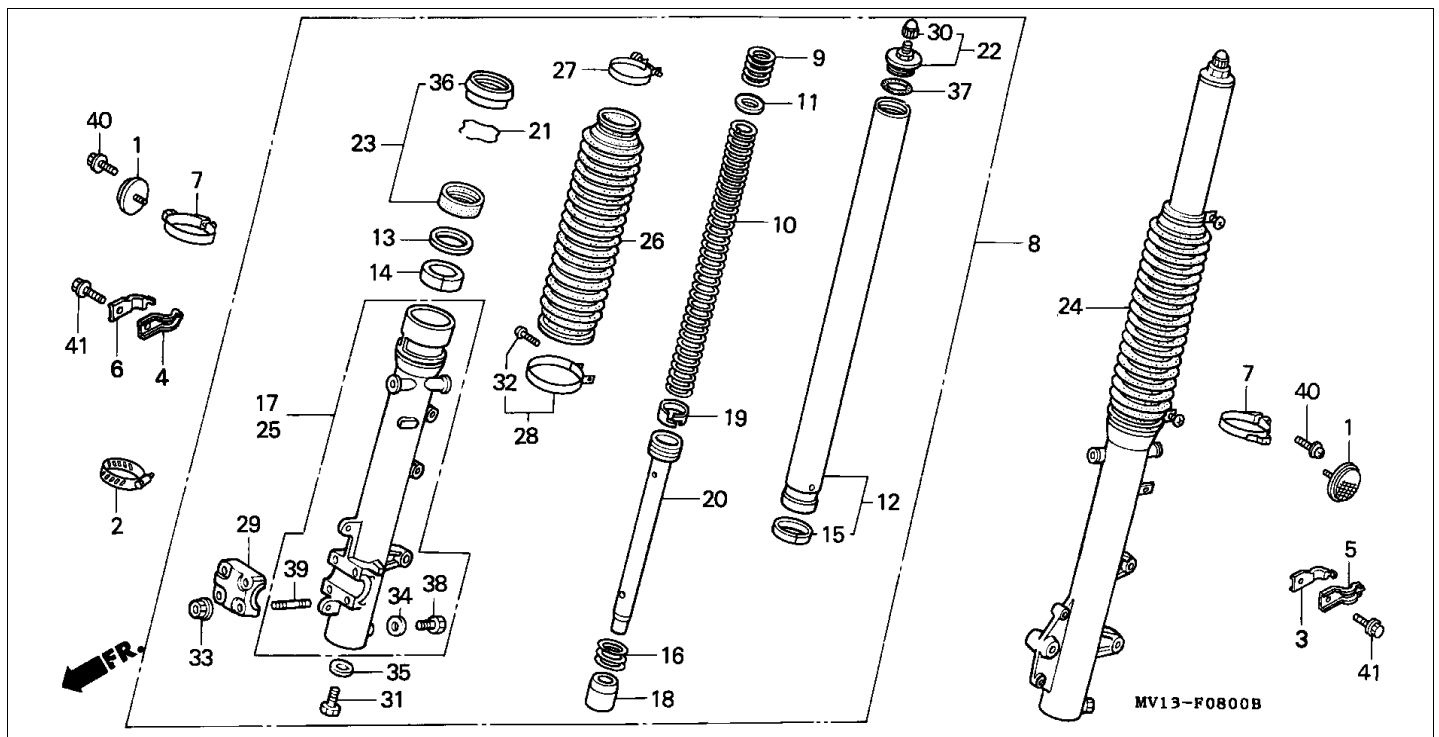


Block F-8 FRONT FORK

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
2	44832-MV1-000	BAND, SPEEDOMETER CABLE	001	0
3	45464-MM9-000	CLAMPER A, BRAKE HOSE	001	0
4	45464-MV1-000	CLAMPER A, BRAKE HOSE	001	0
5	45465-MM9-000	CLAMPER B, BRAKE HOSE	001	0
6	45465-MV1-000	CLAMPER B, BRAKE HOSE	001	0
8	51400-MV1-931	FORK ASSY., R. FR. (SHOWA) *NH1*	001	0
8	51400-MV1-931	FORK ASSY., R. FR. (SHOWA) *PB181*	001	0
9	51401-MV1-003	SPRING A, FR. CUSHION (SHOWA)	002	0
10	51402-MV1-003	SPRING B, FR. CUSHION (SHOWA)	002	0
11	51405-KA4-711	SEAT, SPRING	002	0
12	51410-MV1-003	PIPE COMP., FR. FORK (SHOWA)	002	0
13	51412-KA4-711	RING, BACK UP	002	0
14	51414-MN1-671	BUSH, GUIDE	002	0
15	51415-MN1-671	BUSH, SLIDER	002	0
16	51416-KA4-831	SPRING, FR. REBOUND (SHOWA) (34.3N/MM, 3.5KGF/MM)	002	0
17	51420-MV1-003	CASE COMP., R. BOTTOM (SHOWA)	001	0
18	51432-MG7-003	PIECE, OIL LOCK	002	0
19	51437-KA4-711	RING, PISTON (SHOWA)	002	0
20	51440-MV1-931	PIPE, SEAT (SHOWA)	002	0
21	51447-KA4-711	RING, OIL SEAL STOPPER	002	0
22	51450-MS8-003	BOLT ASSY., FR. FORK	002	0
23	51490-KA4-831	SEAL SET, FR. FORK (SHOWA)	002	0
24	51500-MV1-931	FORK ASSY., L. FR. (SHOWA) *NH1*	001	0
24	51500-MV1-931	FORK ASSY., L. FR. (SHOWA) *PB181*	001	0
25	51520-MV1-003	CASE COMP., L. BOTTOM (SHOWA)	001	0
26	51611-MS8-003	BOOT, FR. FORK *PB181*	002	0
26	51611-MS8-003	BOOT, FR. FORK *NH1*	002	0
27	51612-KA4-831	BAND, BOOT UPPER (SHOWA)	002	0
28	51613-MK2-003	BAND, BOOT LOWER	002	0
29	51634-MV1-003	HOLDER, AXLE	001	0
30	52425-381-771	CAP, AIR VALVE	002	0
31	90116-KV3-701	BOLT, SOCKET, 8MM	002	0
32	90202-MK2-003	SCREW, PAN, 3.5X25	002	0
33	90301-473-003	NUT, U, 6MM	004	0
34	90543-273-000	PACKING, FR. FORK DRAIN COCK	002	0
35	90544-283-000	WASHER, SPECIAL, 8MM	002	0
36	91254-KA4-831	DUST SEAL, FR. FORK	002	0
37	91356-KA4-711	O-RING, 35.2X2.4	002	0

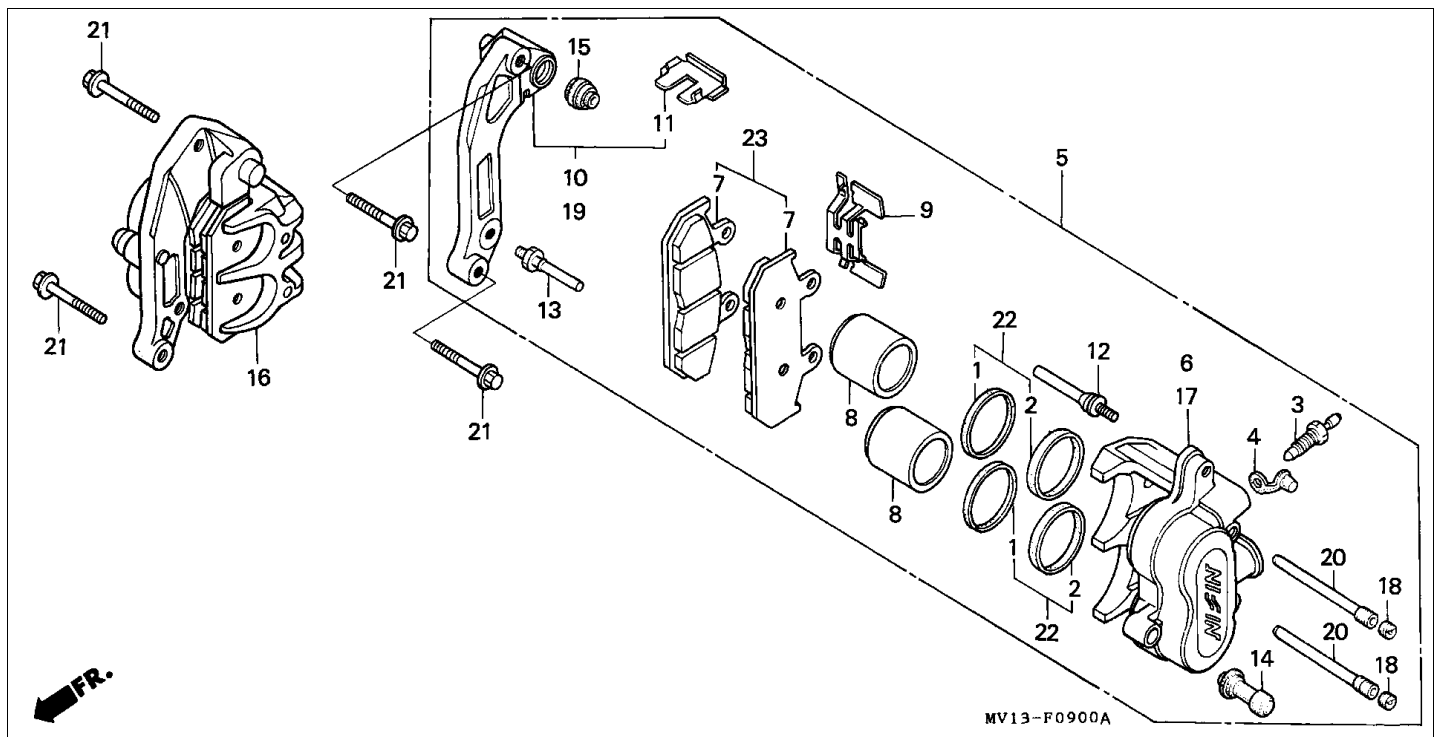


Block F-9 FRONT BRAKE CALIPER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
3	43352-568-003	SCREW, BLEEDER	002	0
4	43353-461-771	CAP, BLEEDER	002	0
5	45100-MV1-008	CALIPER ASSY., L. FR. (NISSIN)	001	0
6	45101-ML0-006	BODY, L. CALIPER	001	0
8	45107-ML4-006	PISTON	004	0
9	45108-ML4-006	SPRING, PAD	002	0
10	45110-MV1-006	BRACKET COMP., L. FR. (NISSIN)	001	0
11	45112-MG3-006	RETAINER	002	0
12	45131-HA5-672	BOLT A, PIN	002	0
13	45131-KAE-006	BOLT, PIN	002	0
14	45132-166-016	BOOT, PIN BUSH (NISSIN)	002	0
15	45133-MA3-006	BOOT B	002	0
16	45200-MV1-008	CALIPER ASSY., R. FR. (NISSIN)	001	0
17	45201-ML0-006	BODY, R. CALIPER	001	0
18	45203-MG3-016	PLUG, PIN	004	0
19	45210-MV1-006	BRACKET COMP., R. FR. (NISSIN)	001	0
20	45215-KA3-732	PIN, HANGER	004	0
21	90131-MS6-900	BOLT, FLANGE, 8X40	004	0
22	06431-MA3-405	SEAL SET, PISTON	004	0
23	45105-MV1-405	PAD SET	002	0

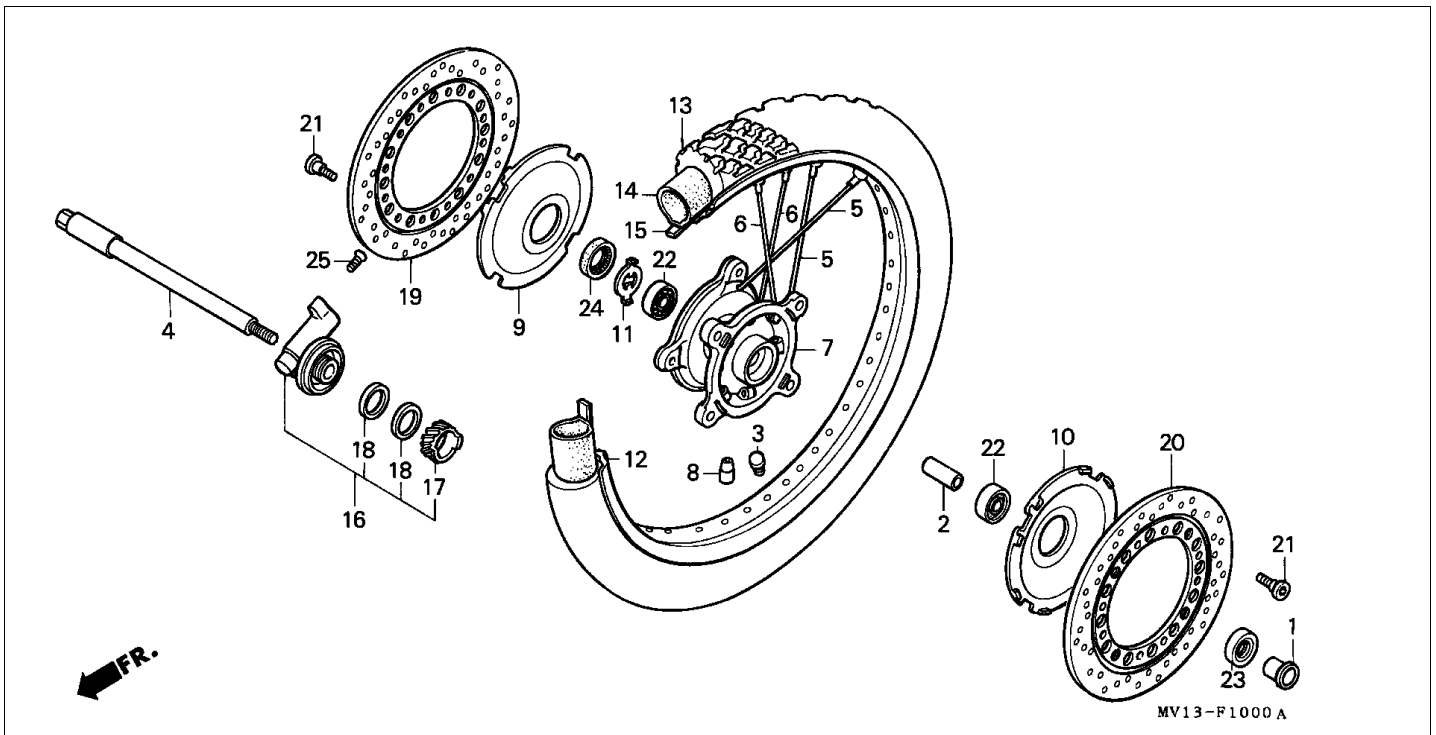


Block F-10 FRONT WHEEL

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	42311-KE5-000	COLLAR, RR. WHEEL SIDE	001	0
2	42620-MF5-000	COLLAR, AXLE DISTANCE	001	0
3	42717-329-000	CAP, RIM HOLE	001	0
4	44301-MV1-000	AXLE, FR. WHEEL	001	0
5	446A0-MV1-000	SPOKE SET A, FR.	018	0
6	446B0-MV1-000	SPOKE SET B, FR.	018	0
7	44601-MV1-000	HUB, FR. WHEEL	001	0
8	44606-283-000	BALANCER (20G)	N	0
8	42705-MK4-850	BALANCER (10G)	N	0
8	42707-MK4-850	BALANCER (20G)	N	0
9	44610-MV1-000	COVER, R. HUB	001	0
10	44611-MV1-000	COVER, L. HUB	001	0
11	44680-ML7-000	RETAINER, GEAR BOX	001	0
12	44701-MV1-003	RIM, FR. WHEEL	001	0
13	44711-MN9-015	TIRE, FR. (DUNLOP) (90/90-21 54S K560)	001	0
13	44711-MV1-003	TIRE, FR. (BS) (90/90-21 54S TW47)	001	0
14	44712-400-004	TUBE, TIRE (DUNLOP) (2.75/3.00-21)	001	0
14	44712-MG7-003	TUBE, TIRE (BRIDGESTONE)	001	0
15	44713-400-004	FLAP, TIRE (DUNLOP) (1.40/1.60-21)	001	0
15	44713-MG7-003	FLAP, TIRE (BRIDGESTONE) (1.85X21)	001	0
16	44800-MV1-003	BOX ASSY., SPEEDOMETER GEAR	001	0
17	44806-MV1-003	GEAR, SPEEDOMETER	001	0
18	44809-ML7-003	WASHER, SPEEDOMETER GEAR	002	0
19	45251-MV1-000	DISK, R. FR. BRAKE	001	0
20	45351-MV1-000	DISK, L. FR. BRAKE	001	0
21	90105-MK5-010	BOLT, DISK, 8X22	008	0
22	91053-MV1-003	BEARING, RADIAL BALL, 6203UU	002	0
23	91257-KA3-711	DUST SEAL, 28X42X8 (NOK)	001	0
23	91257-KA3-712	DUST SEAL, 28X42X8 (ARAI)	001	0
24	91258-ML7-003	DUST SEAL, 45X55X5 (ARAI)	001	0
24	91258-ML7-004	DUST SEAL, 45X55X5 (NOK)	001	0
25	93700-050200G	SCREW, OVAL, 5X20	001	0

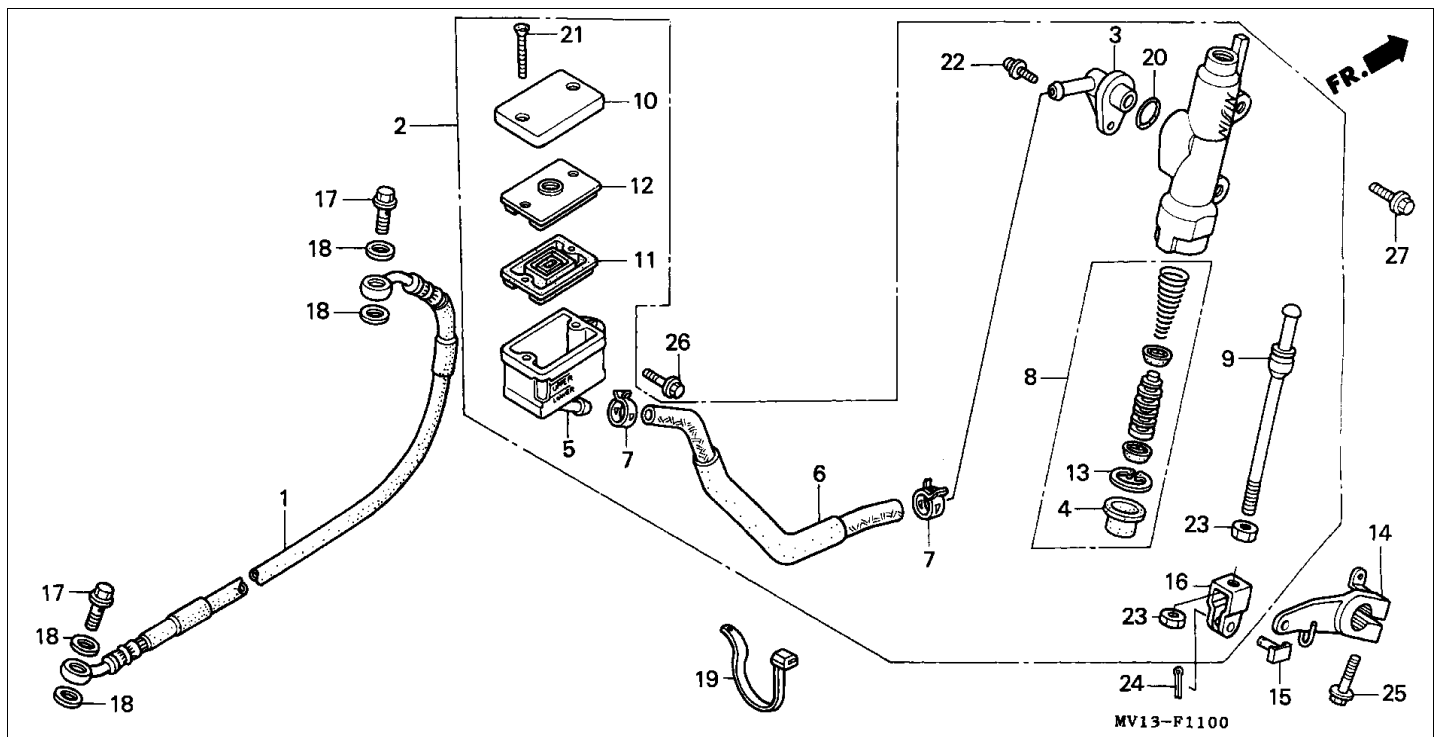


Block F-11 REAR BRAKE MASTER CYLINDER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	43310-MV1-003	HOSE, RR. BRAKE	001	0
2	43500-MS8-612	CYLINDER ASSY., RR. MASTER	001	0
3	43503-MS8-006	CONNECTOR	001	0
4	43504-MB2-006	BOOT COMP.	001	0
5	43511-KT8-006	CUP COMP., OIL	001	0
6	43512-MS8-006	HOSE, MASTER CYLINDER	001	0
7	43514-445-771	CLAMP, MASTER CYLINDER OIL HOSE	002	0
8	43520-MB2-305	PISTON SET, MASTER CYLINDER (NISSIN)	001	0
9	43530-MS8-006	ROD COMP., PUSH	001	0
10	45513-KK1-771	CAP, MASTER CYLINDER	001	0
11	45520-MG7-006	DIAPHRAGM	001	0
12	45521-HA2-006	PLATE, DIAPHRAGM	001	0
13	46182-500-013	CIRCLIP	001	0
14	46502-MS8-000	ARM, RR. BRAKE MIDDLE	001	0
15	46503-KW3-000	PIN COMP., BRAKE ROD	001	0
16	46504-MB2-006	JOINT, BRAKE ROD	001	0
17	90145-MS9-611	BOLT, OIL, 10X22	002	0
18	90545-300-000	WASHER, OIL BOLT	004	0
19	90652-KT1-771	BAND, WIRE (BLACK)	001	0
20	91212-422-006	O-RING, 14.8X2.4	001	0
21	93600-040401G	SCREW, FLAT, 4X40	002	0
22	93893-0401218	SCREW-WASHER, 4X12	001	0
23	94002-080000S	NUT, HEX., 8MM	002	0
24	94201-20120-	PIN, SPLIT, 2.0X12	001	0
25	95701-0802508	BOLT, FLANGE, 8X25	001	0
26	96500-0601400	BOLT, FLANGE, 6X14	001	0
27	96500-0601600	BOLT, FLANGE, 6X16	002	0

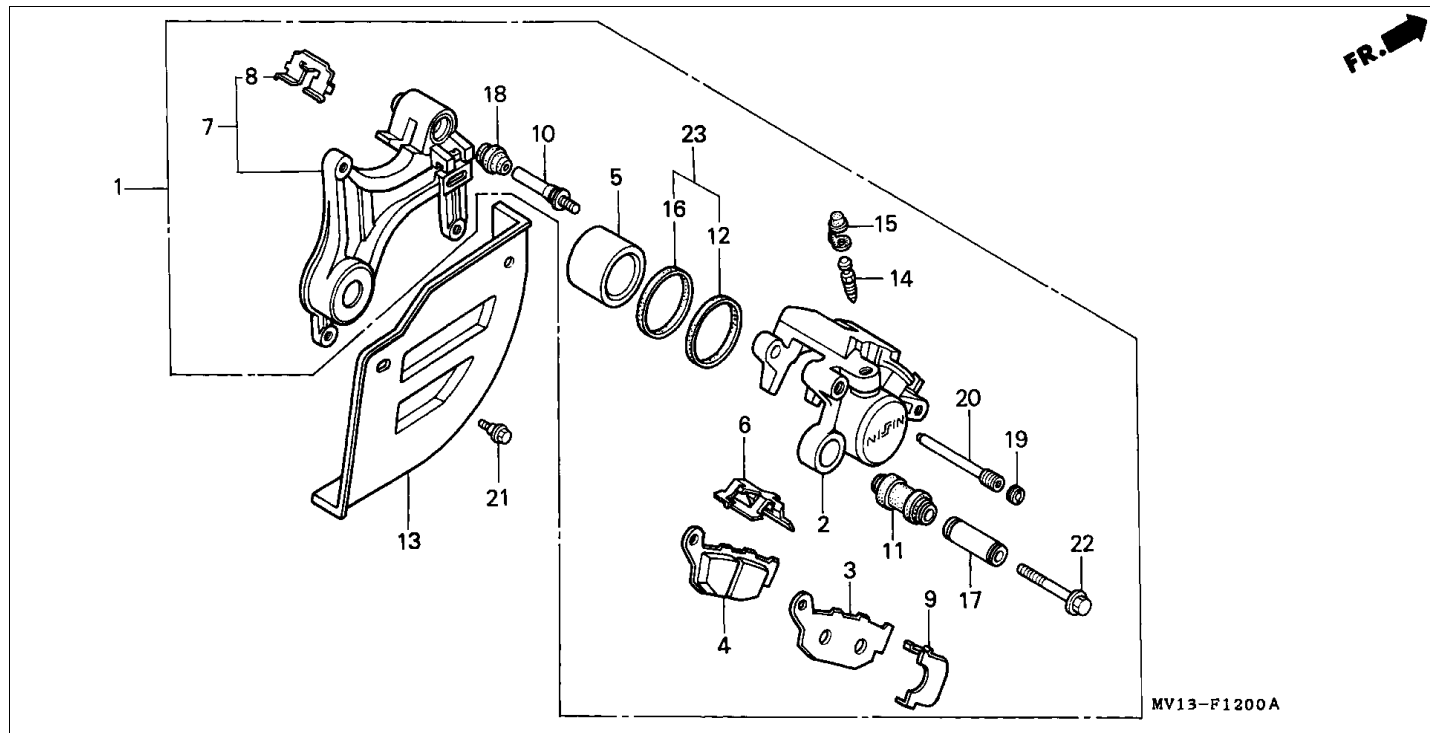FR. 


Block F-12 REAR BRAKE CALIPER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	43100-MV1-006	CALIPER ASSY., RR. (NISSIN)	001	0
2	43101-KAF-016	BODY, RR. CALIPER	001	0
3	43105-KT7-762	PAD COMP. A, RR.	001	0
4	43106-KT7-762	PAD COMP. B, RR.	001	0
5	43107-KT7-761	PISTON	001	0
6	43108-KT7-761	SPRING, PAD	001	0
7	43110-MV1-006	BRACKET COMP., RR.	001	0
8	43112-KT7-761	RETAINER	001	0
9	43114-KT7-761	SHIM A	001	0
10	43131-KW3-006	BOLT, PIN	001	0
11	43132-KT7-761	BOOT, SLEEVE	001	0
13	43330-MN9-000	COVER, RR. DISK	001	0
14	43352-568-003	SCREW, BLEEDER	001	0
15	43353-461-771	CAP, BLEEDER	001	0
17	45111-MA3-006	SLEEVE	001	0
18	45133-MA3-006	BOOT B	001	0
19	45203-MG3-016	PLUG, PIN	001	0
20	45215-KA3-732	PIN, HANGER	001	0
21	90111-GJ5-000	BOLT, FLANGE, 6MM	002	0
22	90180-MA3-006	BOLT, FLANGE, 8X49	001	0
23	06451-443-405	SEAL SET, PISTON	001	0

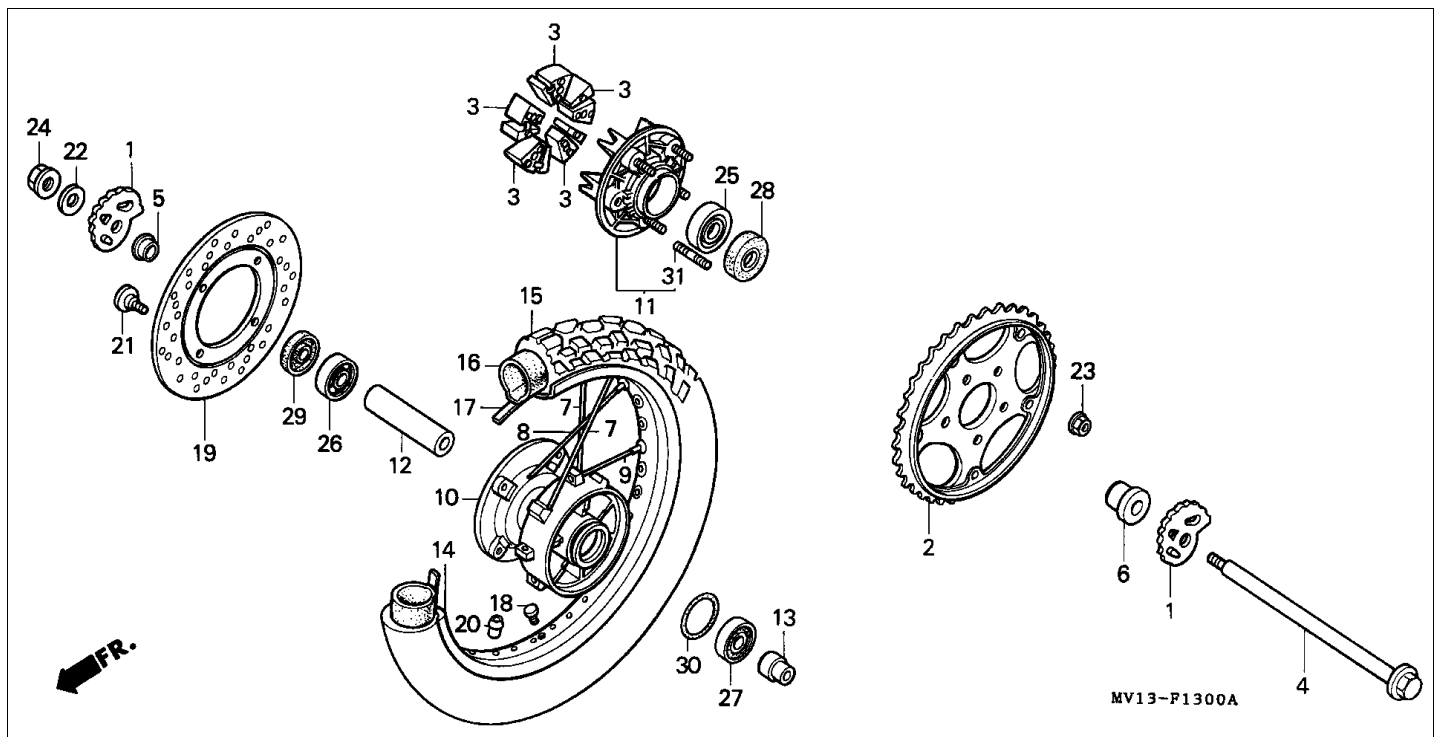


Block F-13 REAR WHEEL

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	40544-MS8-000	ADJUSTER, CHAIN	002	0
2	41200-MV1-000	SPROCKET COMP., FINAL DRIVEN (46T)	001	0
3	41241-MC8-670	DAMPER, RR. WHEEL	005	0
4	42301-MV1-000	AXLE, RR. WHEEL	001	0
5	42311-KS5-000	COLLAR, RR. WHEEL SIDE	001	0
6	42312-MV1-000	COLLAR, RR. WHEEL	001	0
7	426A0-MV1-000	SPOKE SET A, RR. (A9X178)	016	0
8	426B0-MV1-000	SPOKE SET B, RR. (A9X169)	008	0
9	426C0-MV1-000	SPOKE SET C, RR. (A9X173)	008	0
10	42601-MV1-000	HUB COMP., RR. WHEEL	001	0
11	42610-MV1-000	FLANGE ASSY., FINAL DRIVEN	001	0
12	42620-MV1-000	COLLAR, RR. AXLE DISTANCE	001	0
13	42625-MA6-000	COLLAR B, RR. AXLE DISTANCE	001	0
14	42701-MV1-003	RIM, RR. WHEEL	001	0
15	42711-MV1-003	TIRE, RR. (BS) (130/90-17 68S TW48)	001	0
15	42711-MS8-004	TIRE, RR. (DUNLOP) (130/90-17 68S K560)	001	0
16	42712-MS8-003	TUBE, TIRE (BS) (130/90-17)	001	0
16	42712-MS8-004	TUBE, TIRE (DUNLOP) (130/90-17)	001	0
17	42713-MS8-003	FLAP, TIRE (BS) (2.75-17)	001	0
17	42713-MS8-004	FLAP, TIRE (DUNLOP) (2.75/3.00-17)	001	0
18	42717-329-000	CAP, RIM HOLE	001	0
19	43251-MV1-000	DISK, RR. BRAKE	001	0
20	44606-283-000	BALANCER (20G)	N	0
20	42705-MK4-850	BALANCER (10G)	N	0
20	42707-MK4-850	BALANCER (20G)	N	0
21	90105-MK5-010	BOLT, DISK, 8X22	004	0
22	90305-ME5-003	NUT, FLANGE, 16MM	001	0
23	90306-KF0-003	NUT, FLANGE, 12MM	005	0
24	90530-MS8-000	WASHER, SPECIAL	001	0
25	91052-MM5-003	BEARING, RADIAL BALL, 6204UU (NSK)	001	0
26	91053-MV1-003	BEARING, RADIAL BALL, 6203UU	001	0
27	91054-MT6-831	BEARING, RADIAL BALL, 6303UU (NIPPON SEIKO)	001	0
27	91054-MT6-832	BEARING, RADIAL BALL, 6303UU (NTN)	001	0
28	91252-MC4-003	OIL SEAL, 28X47.2X7 (ARAI)	001	0
28	91252-MC4-005	OIL SEAL, 28X47.2X7 (NOK)	001	0
29	91252-428-000	OIL SEAL, 25X40X7	001	0
30	91302-MA6-003	O-RING, 61X2	001	0
31	92900-120280E	BOLT, STUD, 12X28	005	0

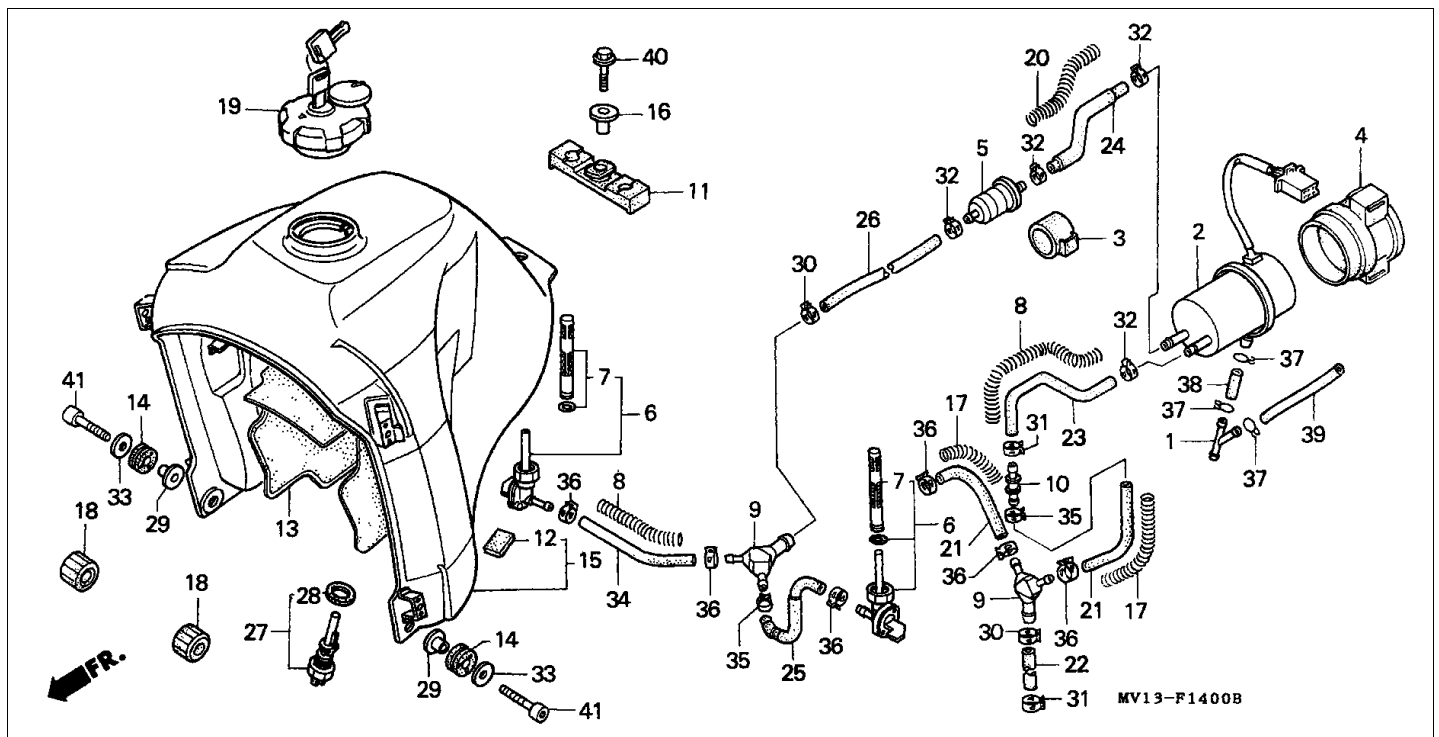


Block F-14 FUEL TANK/FUEL PUMP

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	16235-MG2-880	JOINT, VENT TUBE	001	0
2	16710-MV1-005	PUMP ASSY., FUEL	001	0
3	16711-MF2-000	HOLDER, STRAINER	001	0
4	16711-MN8-000	RUBBER, FUEL PUMP MOUNTING	001	0
5	16900-MG8-003	STRAINER COMP., FUEL	001	0
6	16950-MV1-000	COCK ASSY., FUEL	002	0
7	16952-MS8-005	SCREEN, FUEL STRAINER	002	0
9	16959-MF2-880	JOINT, FUEL TUBE	002	0
10	16966-MJ4-670	JOINT, FUEL TUBE	001	0
11	17503-MM9-000	RUBBER, RR. TANK	001	0
12	17511-MS8-300	CUSHION	001	0
13	17511-MV1-000	SILENCER, FUEL TANK	001	0
14	17513-HA5-000	RUBBER, FUEL TANK SETTING	002	0
15	17520-MV1-930	TANK SET, FUEL (WL) *TYPE1*	001	0
15	17520-MV1-930	TANK SET, FUEL (WL) *TYPE2*	001	0
15	17520-MV1-930	TANK SET, FUEL (WL) *TYPE3*	001	0
16	17525-KG7-830	COLLAR, FUEL TANK MOUNTING	001	0
17	17532-404-000	SPRING, FUEL TUBE COVER	002	0
18	17611-MM9-000	CUSHION, FUEL TANK FR.	002	0
19	17620-MN9-013	FUEL FILL CAP COMP.	001	0
20	17684-MS8-000	WIRE, GUARD	001	0
21	17684-MV1-000	TUBE F, FUEL	002	0
22	17685-MV1-000	TUBE E, FUEL	001	0
23	17686-MV1-000	TUBE A, FUEL	001	0
24	17687-MS8-000	TUBE B, FUEL	001	0
25	17688-MV1-000	TUBE C, FUEL	001	0
26	17689-MV1-000	TUBE D, FUEL	001	0
27	37810-MS8-008	SENSOR, FUEL RESERVE	002	0
28	37811-MB1-008	PACKING, FUEL RESERVE SENSOR	002	0
29	90505-HA5-000	WASHER, TANK SETTING	002	0
30	91405-MS8-000	CLAMP, TUBE, (D17)	002	0
31	91405-PH7-003	CLAMP, TUBE (D15)	002	0
32	91406-MS8-000	CLAMP, TUBE, (D14.5)	004	0
33	94103-08800-	WASHER, PLAIN, 8MM	002	0
34	95001-7535040	TUBE, FUEL, 7.3X350 (95001-75001-60M)	001	0
35	95002-02100-	CLIP, TUBE (B10)	002	0
36	95002-4120004	CLAMP, TUBE (D12)	006	0
37	95002-50000-	CLIP, TUBE (C9)	003	0

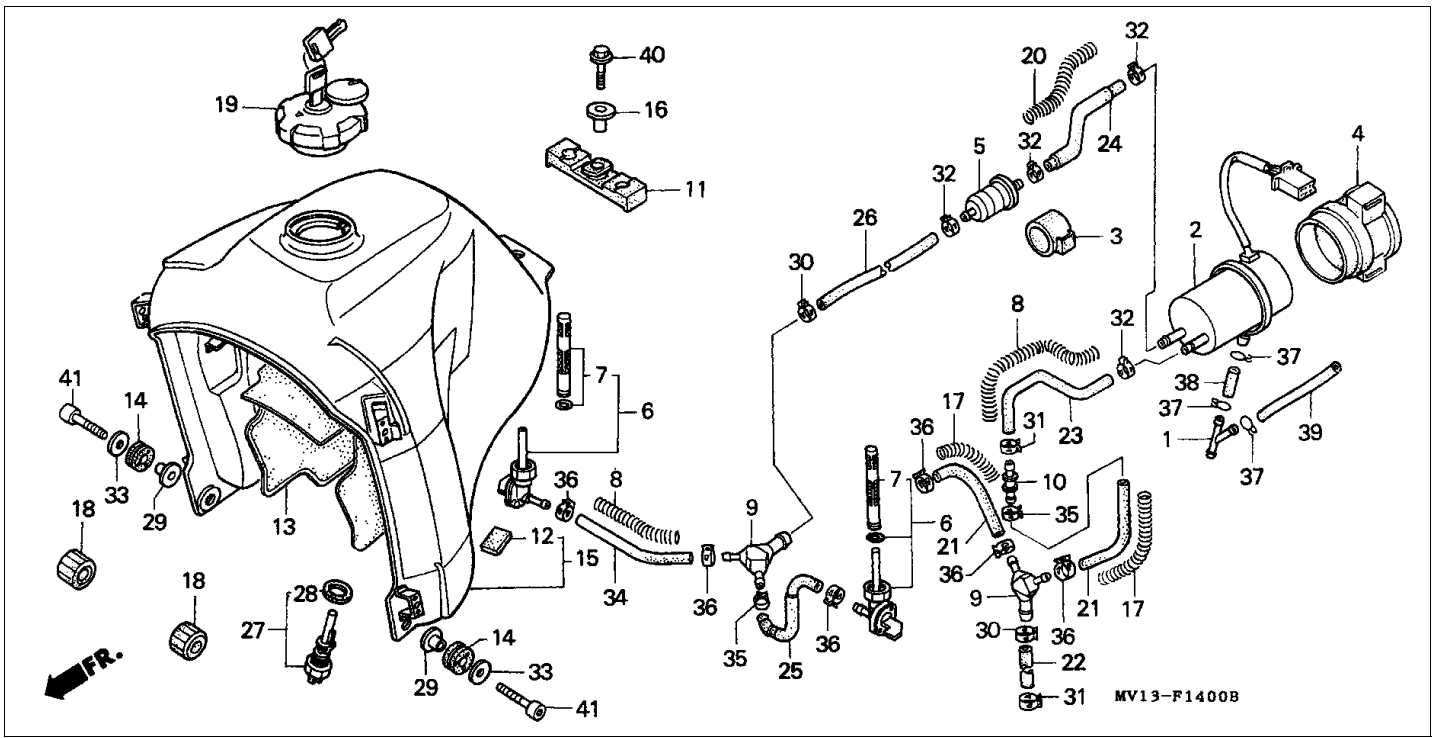


Block F-14 FUEL TANK/FUEL PUMP

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
38	95005-5003030	TUBE, 5X30 (95005-50001-30M)	001	0
39	95005-5039030	TUBE, 5X390 (95005-50001-30M)	001	0
40	95801-0803500	BOLT, FLANGE, 8X35	001	0
41	96600-0803507	BOLT, SOCKET, 8X35	002	0

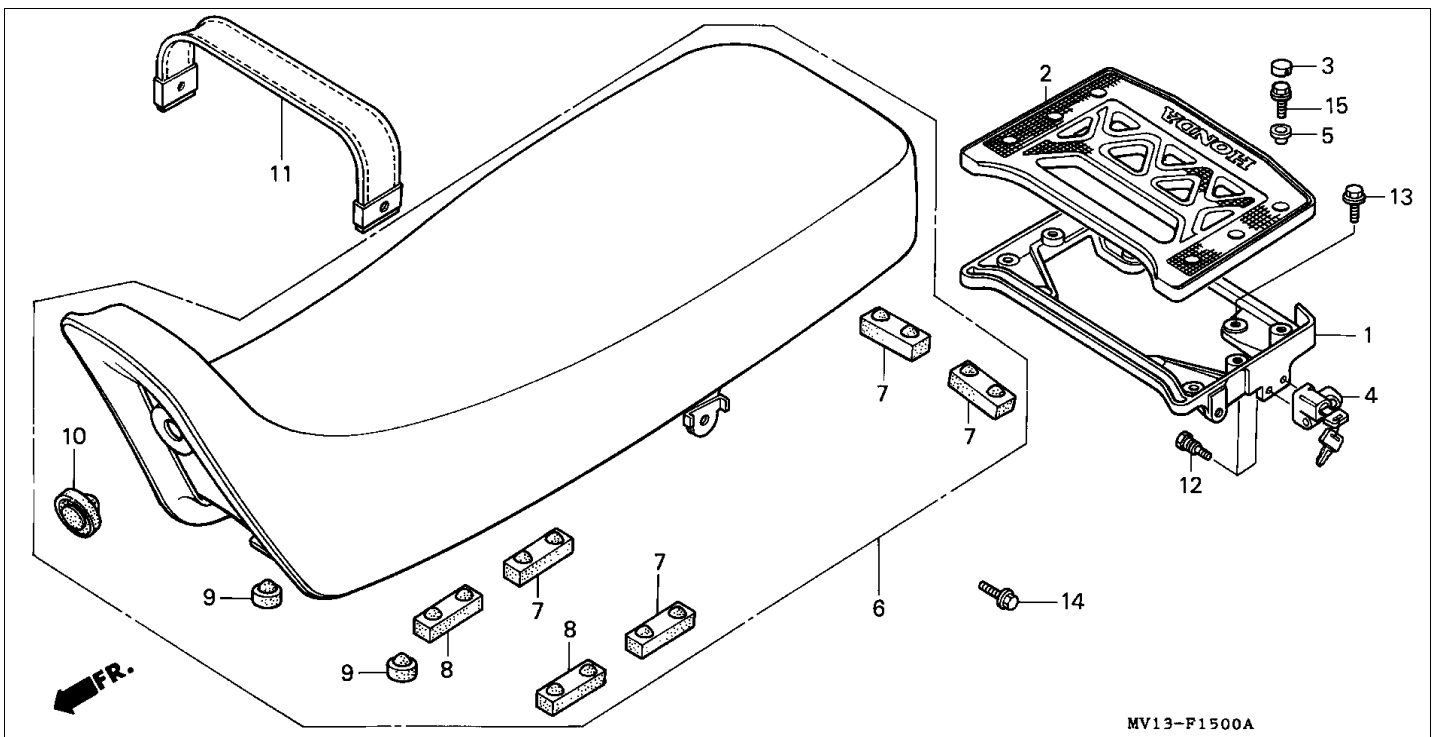


Block F-15 SEAT

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	50310-MV1-000	CARRIER, RR. *R134*	001	0
1	50310-MV1-000	CARRIER, RR. *NH1*	001	0
2	50315-MV1-000	BASE, RR. CARRIER *R134*	001	0
2	50315-MV1-000	BASE, RR. CARRIER *NH1*	001	0
3	50316-MK5-000	CUP, CARRIER BASE	006	0
4	50710-371-007	HOLDER ASSY., HELMET	001	0
5	61101-KB7-910	COLLAR, FR. FENDER SETTING	006	0
6	77200-MV1-000	SEAT COMP., DOUBLE *NH1L*	001	0
6	77200-MV1-000	SEAT COMP., DOUBLE *PB28L*	001	0
7	77205-MG2-000	RUBBER A, SEAT SETTING	004	0
8	77205-286-000	RUBBER B, SEAT SETTING	002	0
9	77206-GF0-000	RUBBER, SEAT CUSHION	002	0
10	77211-438-000	RUBBER, SEAT STOPPER	001	0
11	77216-MV1-930	SEATBELT COMP. *PB19L*	001	0
11	77216-MV1-930	SEATBELT COMP. *NH1L*	001	0
12	90107-ME5-830	BOLT, HELMET HOLDER SETTING	002	0
13	90123-MM2-000	BOLT, SPECIAL FLANGE, 8X25	004	0
14	95701-0601800	BOLT, FLANGE, 6X18	002	0
15	96001-0601800	BOLT, FLANGE, 6X18	006	0

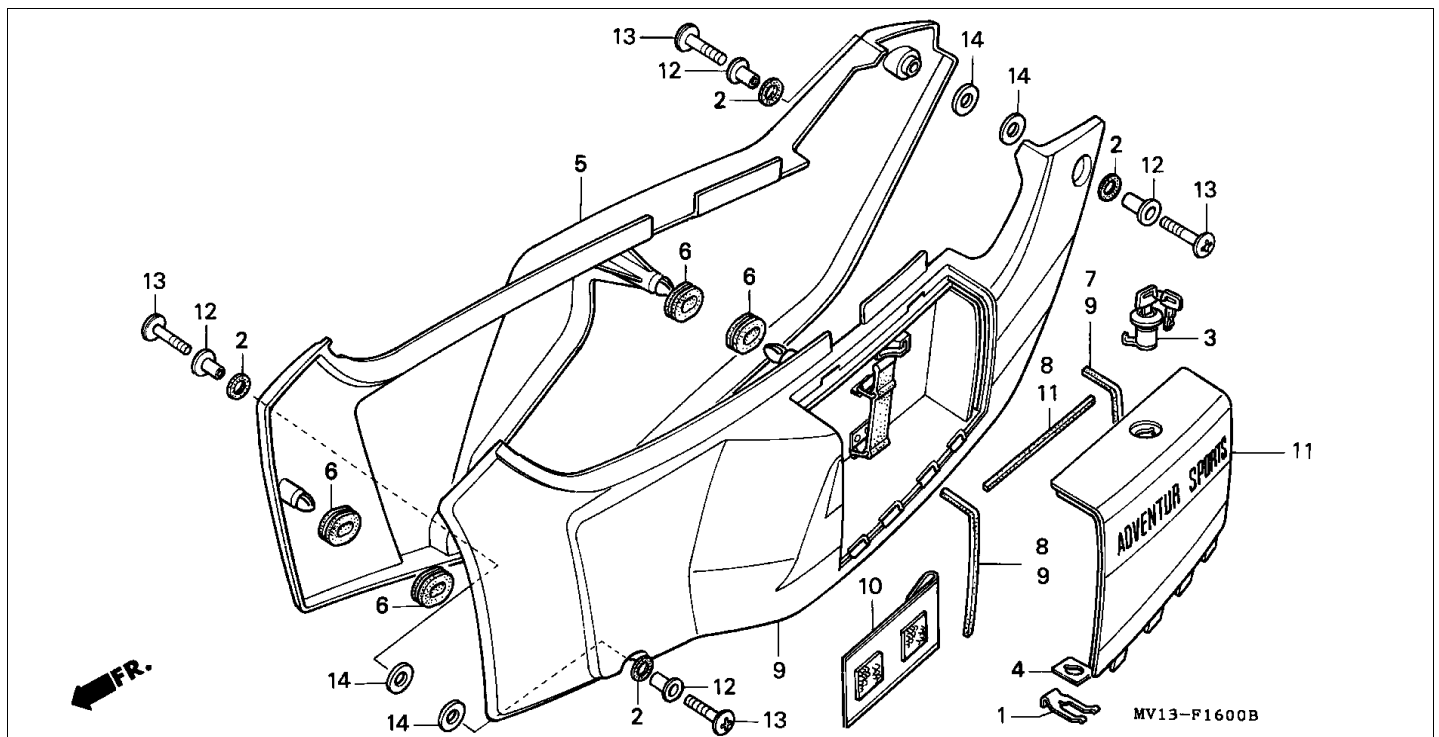


Block F-16 SIDE COVER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	75581-GN8-920	SPRING, LOCK KEY SETTING	001	0
2	77218-GB2-720	RUBBER, SEAT HINGE	004	0
3	77232-GW0-000	LOCK ASSY., FUEL LID	001	0
4	77236-GW0-000	WASHER, SEAT LOCK	001	0
5	83520-MV1-930	COVER SET, R. SIDE (WL) *TYPE1*	001	0
5	83520-MV1-930	COVER SET, R. SIDE (WL) *TYPE2*	001	0
5	83520-MV1-930	COVER SET, R. SIDE (WL) *TYPE3*	001	0
6	83551-300-000	GROMMET, AIR CLEANER CASE	004	0
7	83601-MV1-300	CUSHION, SIDE COVER (A)	001	0
8	83603-MS8-000	CUSHION, SIDE COVER LID (B)	002	0
9	83610-MV1-930	COVER COMP., L. SIDE (WL) *TYPE1*	001	0
9	83610-MV1-930	COVER COMP., L. SIDE (WL) *TYPE2*	001	0
9	83610-MV1-930	COVER COMP., L. SIDE (WL) *TYPE3*	001	0
10	83642-GM2-000	BAG, OWNERS MANUAL	001	0
11	83660-MV1-930	COVER SET, TOOL BOX (WL) *TYPE1*	001	0
11	83660-MV1-930	COVER SET, TOOL BOX (WL) *TYPE2*	001	0
11	83660-MV1-930	COVER SET, TOOL BOX (WL) *TYPE3*	001	0
12	84702-KV0-670	COLLAR, NUMBER PLATE BRACKET	004	0
13	90101-463-770	BOLT, GARNISH SETTING	004	0
14	90501-MV1-000	WASHER, NYLON, 5.8MM	004	0

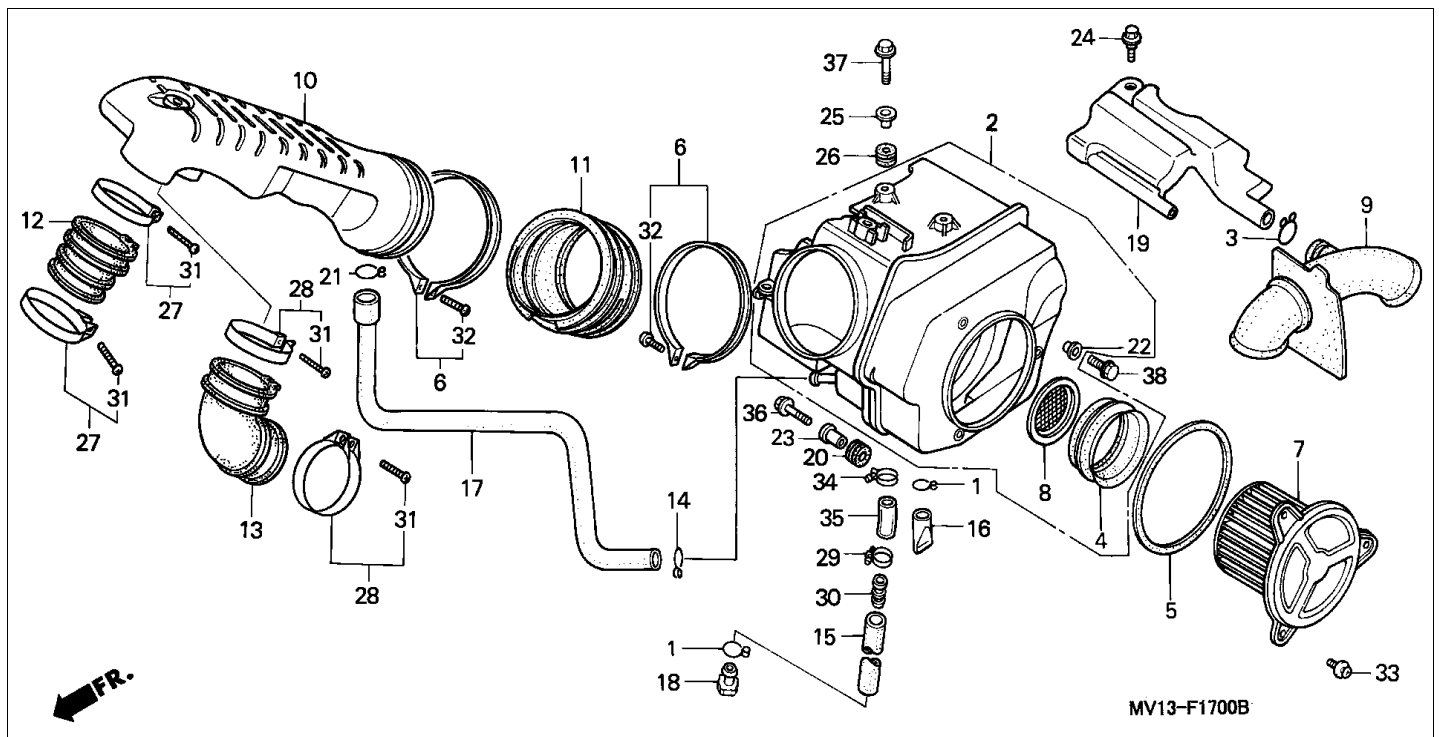


Block F-17 AIR CLEANER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	15772-292-010	CLIP, BREATHER TUBE	002	0
2	17210-MV1-000	CASE COMP., AIR CLEANER	001	0
3	17211-GG0-000	BAND, TUBE	001	0
4	17213-MM9-300	SEAL, ELEMENT	001	0
5	17217-MF5-000	SEAL, AIR CLEANER CAP	001	0
6	17228-MM9-000	BAND, AIR CLEANER CONNECTING	002	0
7	17230-MV1-000	ELEMENT COMP., AIR CLEANER	001	0
8	17240-MM9-000	TRAP COMP., FRAME	001	0
9	17241-MV1-000	DUCT, AIR CLEANER INTAKE	001	0
10	17253-MV1-000	CHAMBER, AIR CLEANER	001	0
11	17257-MV1-000	TUBE, MAIN CONNECTING	001	0
12	17258-MV1-000	TUBE, FR. CONNECTING	001	0
13	17259-MV1-000	TUBE, RR. CONNECTING	001	0
14	17316-611-000	CLIP, BREATHER TUBE	001	0
15	17357-MM9-000	TUBE B, DRAIN	001	0
16	17358-HA0-680	TUBE, DRAIN	001	0
17	17358-MV1-000	TUBE, OIL BREATHER	001	0
18	17370-382-870	PLUG, BREATHER TUBE	001	0
19	17410-MV1-000	RESONATOR	001	0
20	17611-MB1-000	CUSHION, FUEL TANK FR.	001	0
21	18533-634-670	CLIP, AIR HOSE, 19	001	0
22	33118-MC7-000	COLLAR	001	0
23	61104-MA6-720	COLLAR	001	0
24	90111-162-000	BOLT, FLANGE, 6MM	001	0
25	90501-MC4-000	COLLAR A, AIR CLEANER CASE	002	0
26	90505-MC4-000	GROMMET A, AIR CLEANER CASE	002	0
27	90652-GHB-730	BAND, AIR CLEANER CONNECTING TUBE (60)	002	0
28	90652-GHB-760	BAND, AIR CLEANER CONNECTING TUBE (66)	002	0
29	91462-393-780	CLIP, TUBE	001	0
30	91463-393-780	JOINT, TUBE	001	0
31	93500-040250G	SCREW, PAN, 4X25	004	0
32	93500-050250A	SCREW, PAN, 5X25	002	0
33	93891-0601207	SCREW-WASHER, 6X12	003	0
34	95002-01160-	CLIP, TUBE (A16)	001	0
35	95003-3700631	TUBE, VINYL, 11X15X60 (95003-37001-60M)	001	0
36	95701-0602007	BOLT, FLANGE, 6X20	001	0
37	95701-0602008	BOLT, FLANGE, 6X20	002	0
38	95701-0601208	BOLT, FLANGE, 6X12	001	0

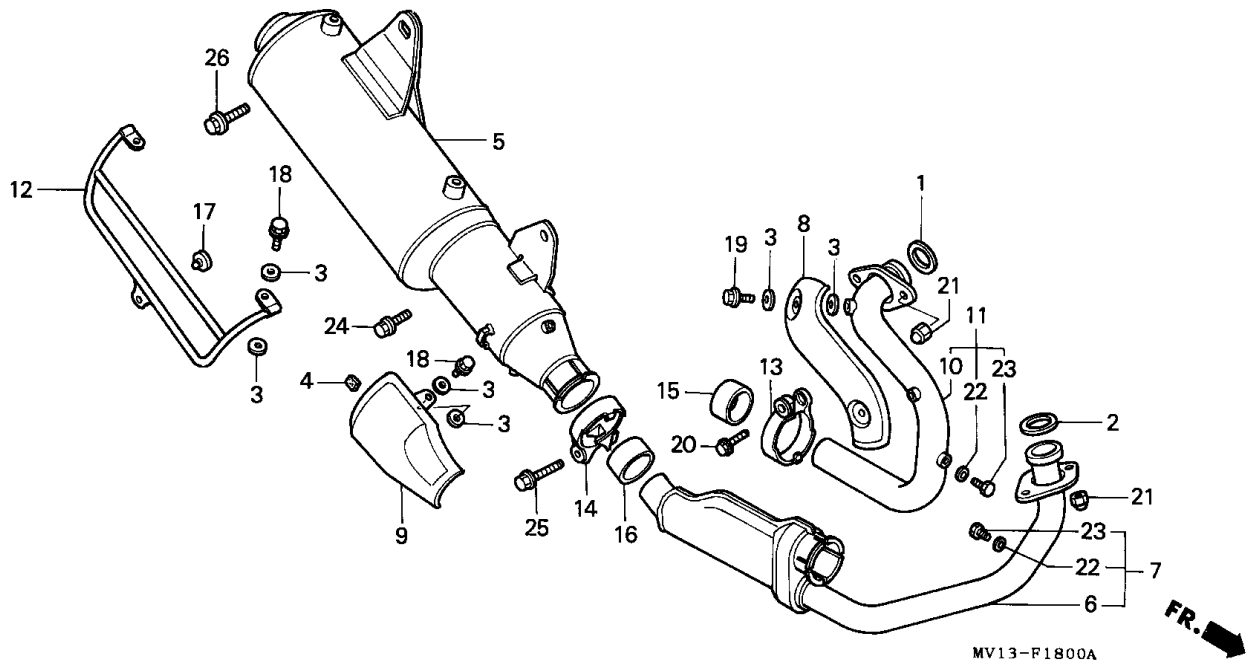

Block F-18 EXHAUST MUFFLER


Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	18291-MN4-920	GASKET, EX. PIPE	001	0
2	18291-MM5-860	GASKET, EX. PIPE	001	0
3	18292-MM9-740	PACKING, PROTECTOR	012	0
4	18293-147-000	RUBBER, PROTECTOR PACKING	001	0
5	18310-MV1-013	MUFFLER COMP.	001	0
6	18320-MV1-830	PIPE COMP., FR. EX.	001	0
8	18326-MV1-000	PROTECTOR, RR. EX. PIPE	001	0
9	18327-MV1-000	PROTECTOR, LOWER EX.	001	0
10	18330-MV1-000	PIPE, RR. EX.	001	0
12	18340-MV1-000	PROTECTOR, MUFFLER	001	0
13	18373-ML0-000	BAND, R. EX. PIPE	001	0
14	18376-KK9-720	BAND, L. RR. MUFFLER	001	0
15	18391-MN5-650	PACKING, MUFFLER	001	0
16	18392-MJ4-670	PACKING, RR. MUFFLER	001	0
17	83512-KA4-700	RUBBER, SIDE COVER	001	0
18	90101-MM9-000	BOLT, FLANGE, 6X12	004	0
19	90101-MS8-000	BOLT, FLANGE, 6X10	002	0
20	90216-MM9-000	BOLT, FLANGE, 8X32	001	0
21	90304-ME1-670	NUT, CAP, 8MM	004	0
24	96300-0801607	BOLT, FLANGE, 8X16	001	0
25	96300-0803802	BOLT, FLANGE, 8X38	001	0
26	96300-1003007	BOLT, FLANGE, 10X30	001	0

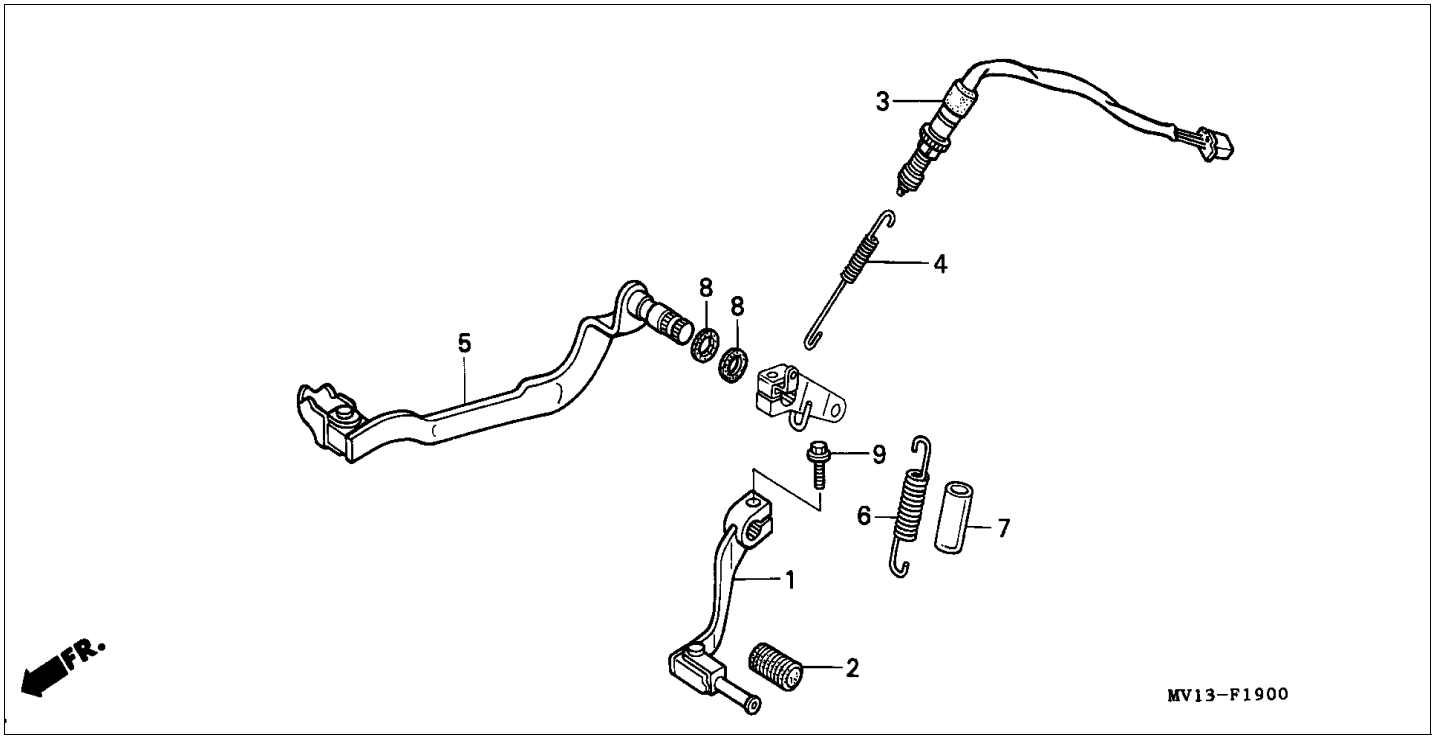

MV13-F1900


Block F-19 PEDAL

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	24700-MS8-000	PEDAL COMP., CHANGE	001	0
2	24781-KE1-000	RUBBER, CHANGE PEDAL	001	0
3	35350-MM9-010	SWITCH ASSY., RR. STOP (TOYO)	001	0
4	35357-MG2-000	SPRING, STOP SWITCH	001	0
5	46510-MS8-610	PEDAL COMP., BRAKE	001	0
6	46514-KN5-670	SPRING, BRAKE PEDAL	001	0
7	46515-KS6-700	TUBE, BRAKE PEDAL SPRING	001	0
8	46525-KK0-003	DUST SEAL, 17X20X2.5	002	0
9	95701-0602007	BOLT, FLANGE, 6X20	001	0

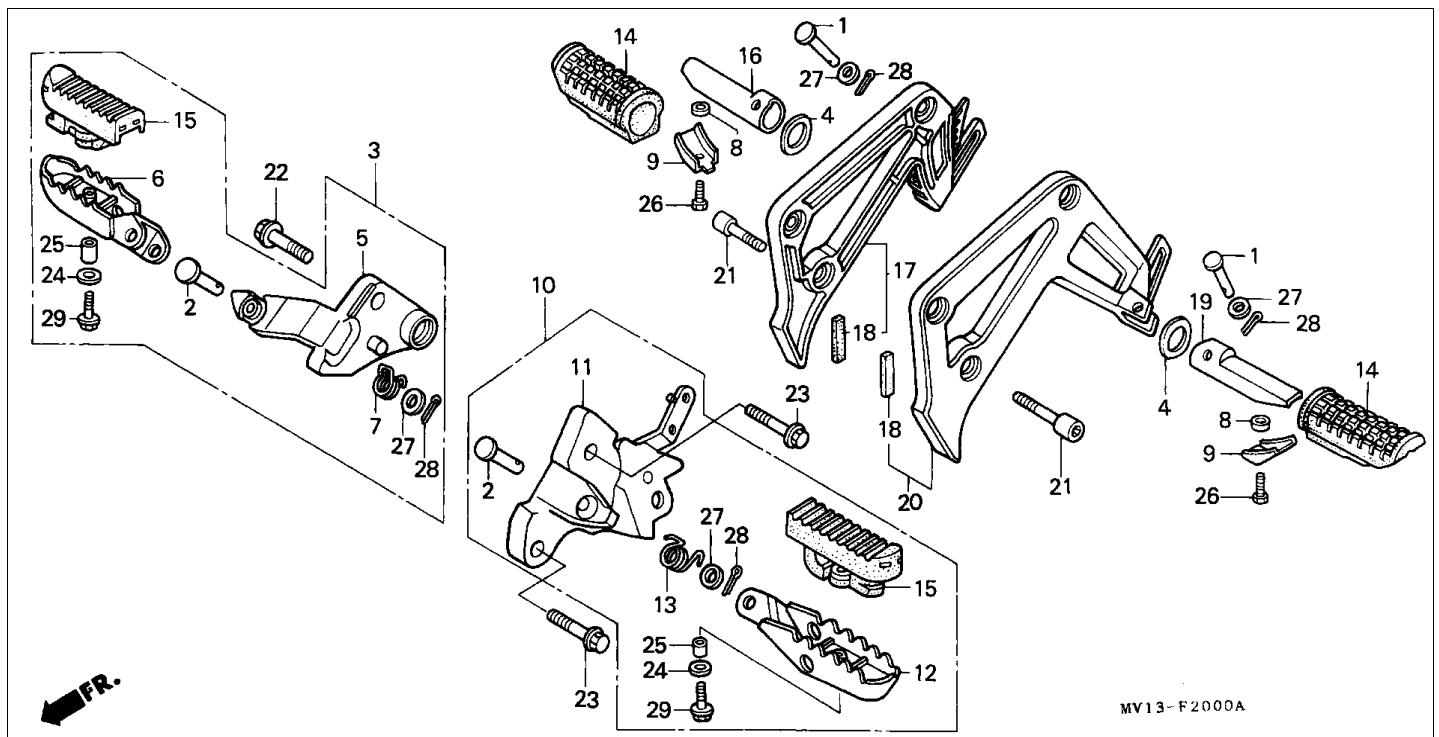


Block F-20 STEP

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	50603-MN1-670	PIN, STEP BAR JOINT	002	0
2	50603-033-010	PIN, STEP BAR JOINT	002	0
3	50610-MV1-000	ARM ASSY., R. STEP *NH146M*	001	0
4	50614-KE8-000	PLATE, MAIN STEP SIDE	002	0
5	50615-MV1-000	ARM, R. STEP *NH146M*	001	0
6	50616-MM9-000	STEP COMP., R.	001	0
7	50617-MM9-000	SPRING, R. STEP RETURN	001	0
8	50618-KE8-000	COLLAR, 6.5X11X3	002	0
9	50619-KE8-000	PLATE, MAIN STEP LOWER	002	0
10	50620-MS8-000	ARM ASSY., L. STEP *NH146M*	001	0
11	50625-MS8-000	BASE COMP., L. STEP *NH146M*	001	0
12	50642-MM9-000	STEP COMP., L.	001	0
13	50644-MM9-000	SPRING, L. STEP RETURN	001	0
14	50661-KE7-000	RUBBER, MAIN STEP	002	0
15	50661-MS8-000	RUBBER, STEP	002	0
16	50701-MS8-000	BAR, R. PILLION STEP	001	0
17	50710-MV1-000	HOLDER COMP., R. PILLION STEP	001	0
18	50714-MS8-000	RUBBER, PROTECTOR	002	0
19	50801-MS8-000	BAR, L. PILLION STEP	001	0
20	50810-MS8-000	HOLDER, L. PILLION STEP	001	0
21	90109-MS8-000	BOLT, SOCKET, 8X10	006	0
22	90212-MM9-000	BOLT, FLANGE, 12X38	001	0
23	90213-MM9-000	BOLT, FLANGE, 10X38	002	0
24	90485-MB2-000	WASHER, 6MM	002	0
25	90503-MG7-000	SPACER, HANDLE END GUARD	002	0
26	92101-060120A	BOLT, HEX., 6X12	002	0
27	94101-08000-	WASHER, PLAIN, 8MM	004	0
28	94201-20150-	PIN, SPLIT, 2.0X15	004	0
29	95801-0602207	BOLT, FLANGE, 6X22	002	0

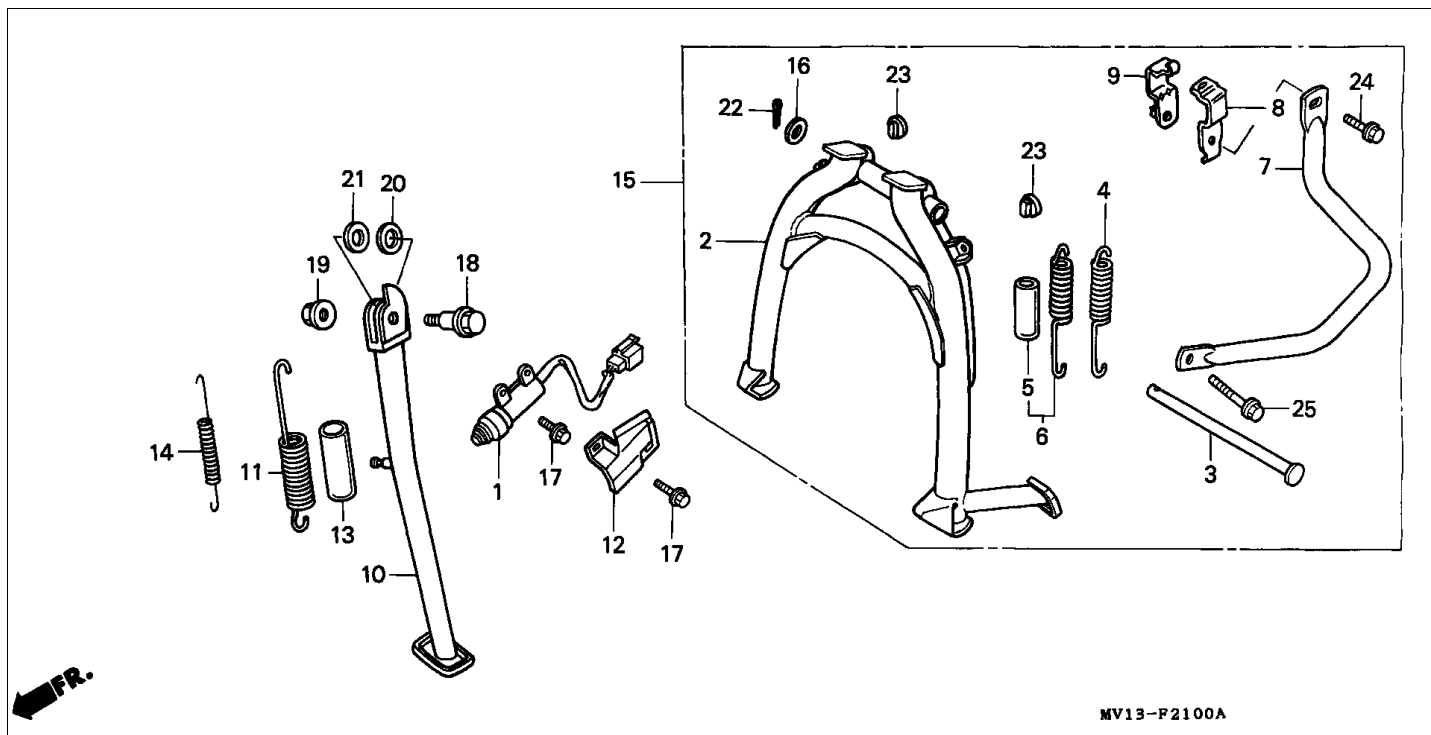


Block F-21 STAND

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	35710-MV1-003	SWITCH ASSY., SIDE STAND	001	0
2	50500-MS8-010	STAND COMP., MAIN	(1)	0
3	50501-MS8-010	SHAFT, MAIN STAND	(1)	0
4	50520-MF2-610	SUB SPRING, MAIN STAND	(1)	0
5	50521-MS8-700	TUBE	(1)	0
6	50522-KE8-000	SPRING, MAIN STAND	(1)	0
7	50525-MV1-000	GRIP, MAIN STAND	(1)	0
8	50526-MV1-000	BAND A, GRIP FIXING *NH138*	(1)	0
9	50527-MV1-000	BAND B, GRIP FIXING *NH138*	(1)	0
10	50530-MV1-000	BAR COMP., SIDE STAND	001	0
11	50535-MM9-610	SPRING, SIDE STAND	001	0
12	50535-MS8-000	COVER, SIDE STAND SWITCH	001	0
14	50542-MM9-830	SUB SPRING, SIDE STAND	001	0
15	50600-MV1-810	STAND SET, MAIN *NH138*	(1)	0
16	50715-KE8-000	PLATE, PILLION STEP SIDE	(1)	0
17	90103-MM9-830	BOLT, FLANGE, 6X16	003	0
18	90108-KV6-000	SCREW, SIDE STAND PIVOT	001	0
19	90203-MF9-710	NUT, SIDE STAND	001	0
20	90501-MF9-710	WASHER, THRUST, 24X13	001	0
21	90502-MF9-710	WASHER, THRUST, 24X10	001	0
22	94201-25350-	PIN, SPLIT, 2.5X35	(1)	0
23	95011-62000-	RUBBER B, STAND STOPPER	(2)	0
24	96300-0802000	BOLT, FLANGE, 8X20	(1)	0
25	96300-0803800	BOLT, FLANGE, 8X38	(1)	0

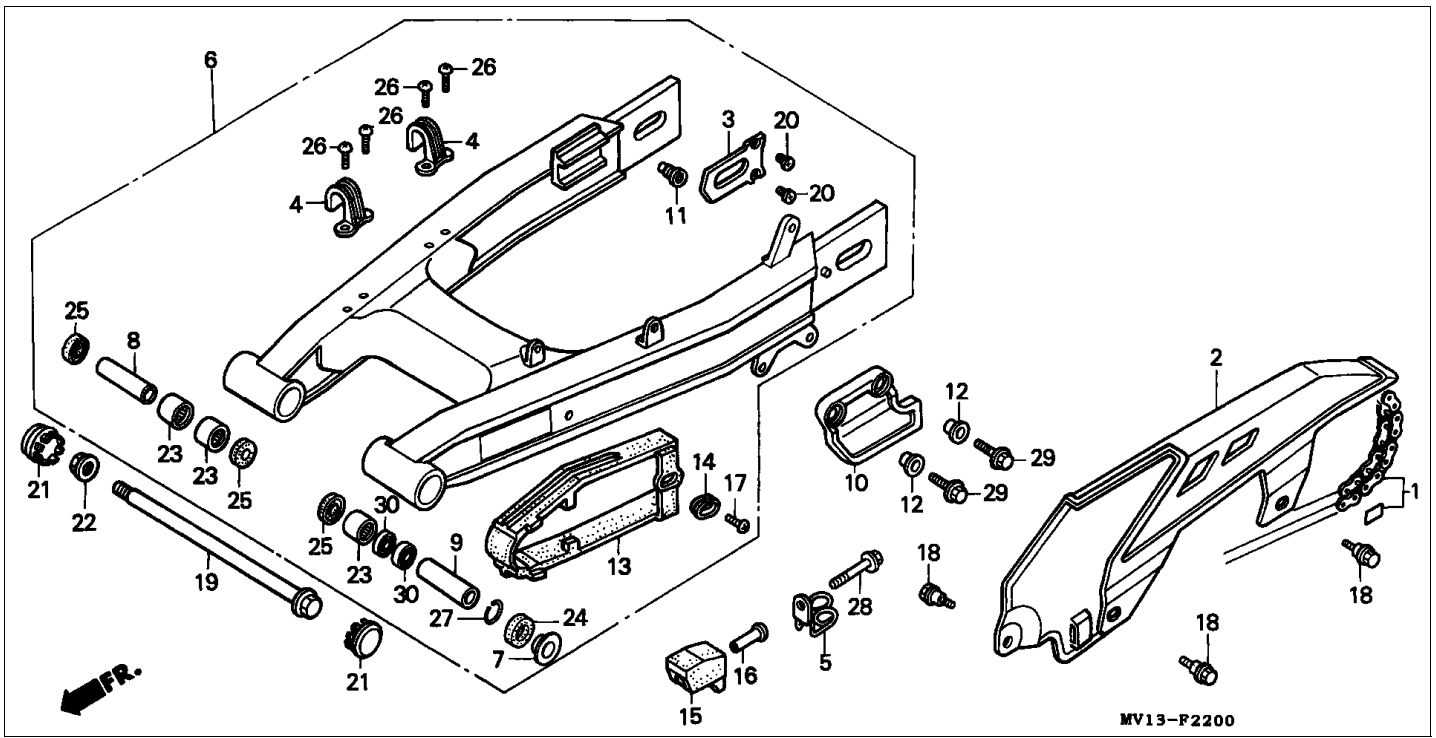


Block F-22 REAR FORK/CHAIN CASE

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	405A3-MV1-003	CHAIN SET, DRIVE (DAIDO) (DID525V8-124LE)	001	0
1	405A3-MV1-005	CHAIN SET, DRIVE (TAKASAGO) (RK525SM0-Z3X124LE)	001	0
2	40510-MV1-000	CASE, DRIVE CHAIN	001	0
3	42307-MK5-000	WASHER, RR. FORK INNER	002	0
4	43468-KS6-700	GUIDE, RR. BRAKE HOSE	002	0
5	50178-MS8-000	CLAMP, BREATHER TUBE	001	0
6	52100-MV1-000	FORK ASSY., RR.	001	0
7	52105-KM4-000	COLLAR B, RR. FORK PIVOT	001	0
8	52141-MV1-000	COLLAR, R. RR. FORK	001	0
9	52142-MV1-000	COLLAR, L. RR. FORK	001	0
10	52156-KB7-000	GUARD, CHAIN	001	0
11	52156-KV6-000	PIN, CHAIN ADJUSTER	002	0
12	52159-KB7-000	COLLAR, CHAIN GUARD	002	0
13	52170-MS8-005	SLIDER, CHAIN	001	0
14	52171-KR6-000	WASHER, CHAIN SLIDER	001	0
15	52181-MM9-000	SLIDER, CHAIN LOWER	001	0
16	53209-HA0-000	COLLAR, HANDLE COVER MOUNTING	001	0
17	90115-KV3-700	SCREW, PAN, 5X8	001	0
18	90116-ME9-000	BOLT, FLANGE, 6MM	003	0
19	90121-MS8-000	BOLT, RR. FORK PIVOT	001	0
20	90124-KA3-830	SCREW, FLAT, 5X4.5	004	0
21	90302-MM9-000	CAP, PIVOT	002	0
22	90305-GE8-003	NUT, U, 14MM	001	0
23	91071-KS6-004	BEARING, SWINGARM PIVOT (NTN)	003	0
24	91212-KM1-005	OIL SEAL, 22X32X5	001	0
25	91254-KS6-003	DUST SEAL, 20X26X4.5 (ARAI)	003	0
25	91254-KS6-005	DUST SEAL, 20X26X5 (NOK)	003	0
26	93500-050080A	SCREW, PAN, 5X8	004	0
27	94520-32000-	CIRCLIP, INTERNAL, 32MM	001	0
28	95701-0604000	BOLT, FLANGE, 6X40	001	0
29	96001-0602000	BOLT, FLANGE, 6X20	002	0
30	96100-6002010	BEARING, RADIAL BALL, 6002	002	0

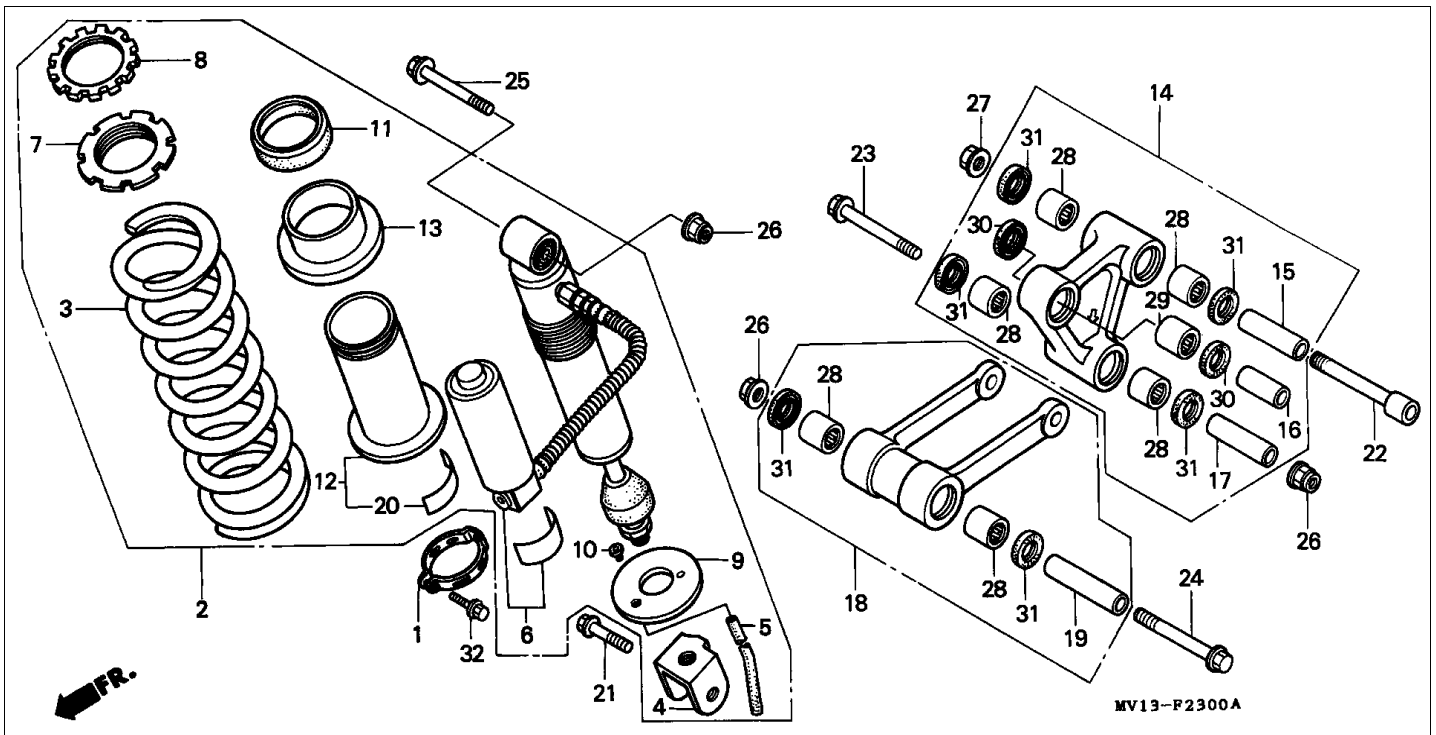


Block F-23 REAR CUSHION

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	50252-KR6-000	BAND, SUB TANK	001	0
2	52400-MV1-931	CUSHION ASSY., RR. (SHOWA)	001	0
3	52401-MV1-003	SPRING, RR. CUSHION (SHOWA)	001	0
4	52403-MM9-003	METAL, JOINT	001	0
6	52410-MV1-931	DAMPER COMP., RR. (SHOWA)	001	0
7	52422-MA0-003	ADJUSTER, SPRING	001	0
8	52423-KA3-711	NUT, ADJUSTER	001	0
9	52424-KB7-003	STOPPER, SPRING SEAT	001	0
11	52457-KB7-003	DUST SEAL	001	0
12	52458-MV1-003	GUIDE COMP., SPRING (SHOWA)	001	0
13	52459-KB7-003	SEAT C, SPRING (SHOWA)	001	0
14	52460-MV1-000	ARM ASSY., CUSHION	001	0
15	52463-MS8-000	COLLAR A, CUSHION ARM	001	0
16	52464-KW3-000	COLLAR, DAMPER LOWER	001	0
17	52464-MS8-000	COLLAR B, CUSHION ARM	001	0
18	52470-MS8-000	ROD ASSY., CUSHION CONNECTING	001	0
19	52473-MS8-000	COLLAR, CUSHION CONNECTING ROD	001	0
20	87516-MR7-721	LABEL, RR. DAMPER WARNING	001	0
21	90126-KT2-000	BOLT, FLANGE, 10X42	001	0
22	90128-MV1-000	BOLT, SOCKET, 12X100	001	0
23	90130-KA3-730	BOLT, FLANGE, 10X98	001	0
24	90151-MM9-000	BOLT, FLANGE, 10X118	001	0
25	90154-HA6-000	BOLT, FLANGE, 10X60	001	0
26	90304-GE8-003	NUT, U, 10MM	003	0
27	90306-KF0-003	NUT, FLANGE, 12MM	001	0
28	91079-KA3-831	BEARING, NEEDLE, 17.5X24.5X22	006	0
29	91079-KN5-003	BEARING, CONNECTING ROD	001	0
30	91201-GG0-003	OIL SEAL, 15X24X5	002	0
31	91205-KT2-005	OIL SEAL, 17.5X26X5	006	0
32	96500-0602500	BOLT, FLANGE, 6X25	001	0

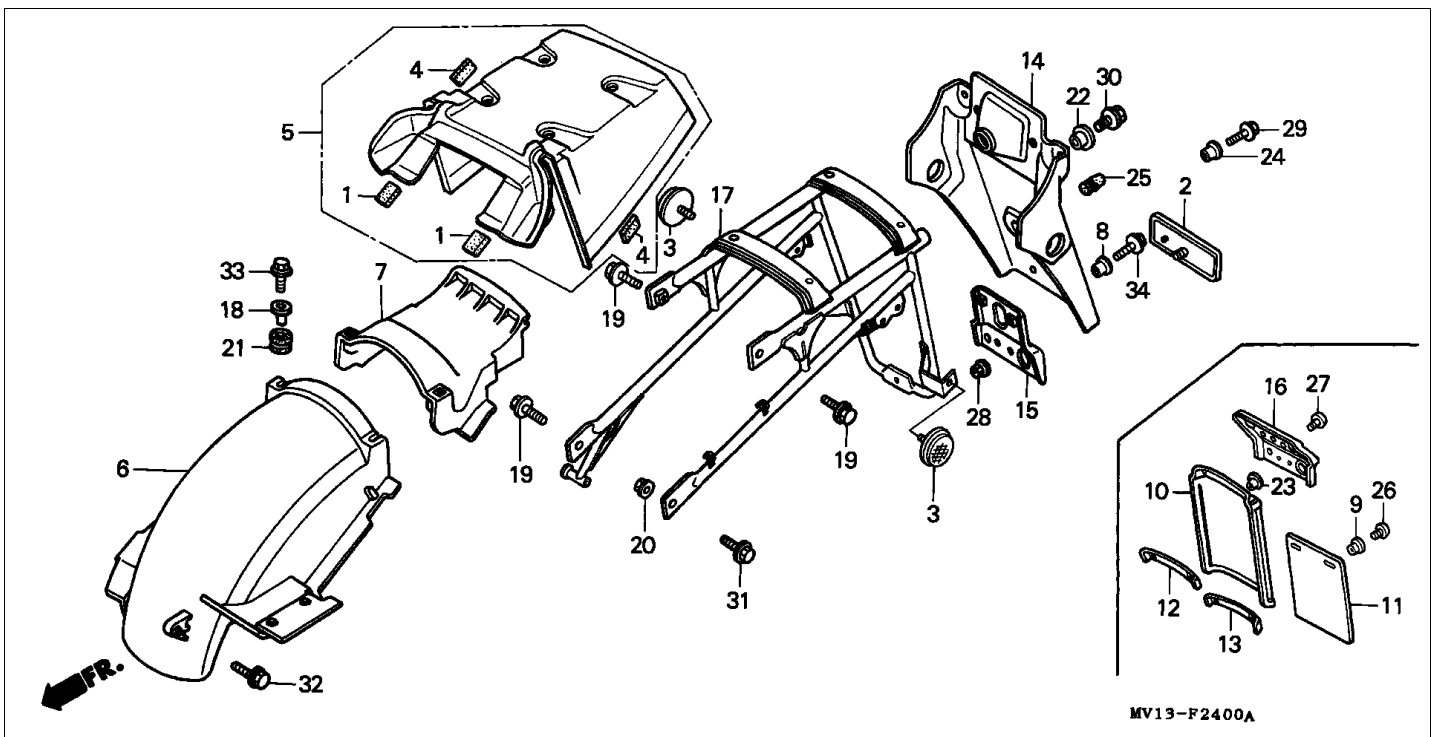


Block F-24 REAR FENDER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	19105-MR8-300	CUSHION	002	0
2	33741-MS6-921	REFLECTOR, REFLEX	001	0
4	64251-GG2-730	RUBBER, FR. COVER	002	0
5	80100-MV1-000	FENDER, RR. *NH138*	001	0
5	80100-MV1-000	FENDER, RR. *NH1*	001	0
5	80100-MV1-000	FENDER, RR. *PB136*	001	0
6	80102-MV1-000	FENDER COMP., RR. (B)	001	0
7	80103-MS8-000	FENDER C, RR.	001	0
10	80124-MK5-610	SUB MUDGUARD, RR.	001	0
12	80126-MG7-660	PLATE, RR. MUDGUARD	001	0
14	80211-MS8-610	MUDGUARD, RR.	001	0
16	80402-MK5-610	STAY, REFLECTOR	001	0
17	84710-MV1-000	STAY, TAILLIGHT BRACKET	001	0
18	90120-102-000	COLLAR, AIR CLEANER CASE	002	0
19	90157-HA7-670	BOLT, SPECIAL FLANGE, 8X18	003	0
20	90309-KF0-003	NUT, FLANGE, 8MM	001	0
21	90506-MC4-000	GROMMET B, AIR CLEANER CASE	002	0
22	90512-KB5-000	WASHER, 8X18	002	0
23	90520-134-000	WASHER, HEADLIGHT CASE SETTING	002	0
24	90556-MB4-000	WASHER	001	0
25	90899-422-610	PLUG, CONE TYPE	002	0
27	93500-050140G	SCREW, PAN, 5X14	002	0
28	94050-05000-	NUT, FLANGE, 5MM	001	0
29	95701-0601207	BOLT, FLANGE, 6X12	001	0
30	95701-0801607	BOLT, FLANGE, 8X16	002	0
31	95701-0803500	BOLT, FLANGE, 8X35	001	0
32	95701-0601208	BOLT, FLANGE, 6X12	001	0
33	95701-0602008	BOLT, FLANGE, 6X20	002	0

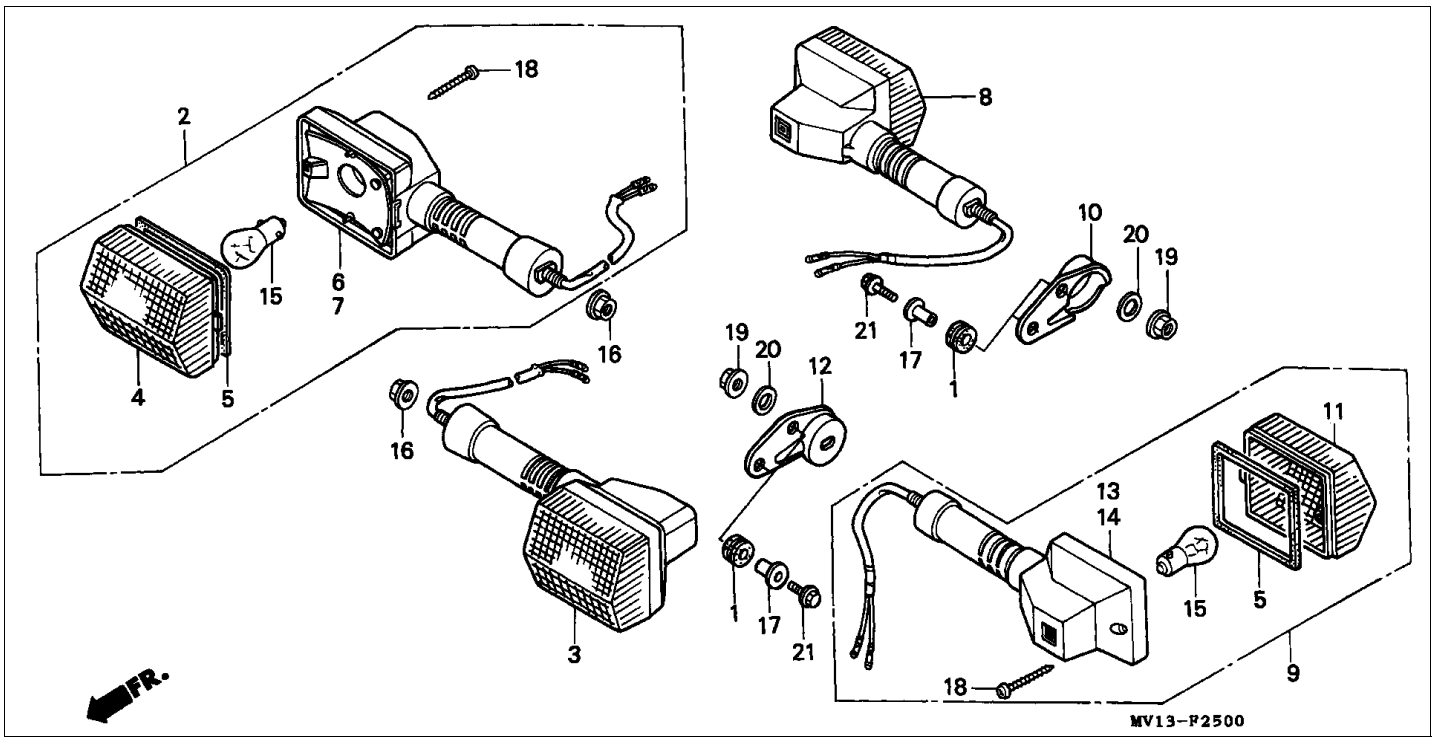


Block F-25 WINKER

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	17622-GB7-900	RUBBER, CUSHION	004	0
2	33300-MS8-621	WINKER SET, R. FR. (12V 21W)	001	0
3	33350-MS8-621	WINKER SET, L. FR. (12V 21W)	001	0
4	33402-MG2-003	LENS, WINKER	002	0
5	33407-MG2-003	GASKET, LENS	004	0
6	33420-MS8-621	BASE COMP., R. FR. WINKER	001	0
7	33470-MS8-621	BASE COMP., L. FR. WINKER	001	0
8	33500-MV1-630	WINKER ASSY., R. RR. (12V 21W)	001	0
9	33550-MV1-630	WINKER ASSY., L. RR. (12V 21W)	001	0
10	33601-MS8-000	STAY, R. RR. WINKER	001	0
11	33602-MG2-601	LENS, WINKER	002	0
12	33602-MS8-000	STAY, L. RR. WINKER	001	0
13	33620-MV1-630	BASE COMP., R. RR. WINKER	001	0
14	33670-MV1-630	BASE COMP., L. RR. WINKER	001	0
15	34908-634-611	BULB (12V 21W) (ECE) (STANLEY)	004	0
16	90303-428-900	NUT, FLANGE, 10MM	002	0
17	90501-KC2-750	WASHER, REGULATOR SETTING	004	0
18	91901-MG2-003	SCREW, TAPPING, 3X25	004	0
19	94050-10000-	NUT, FLANGE, 10MM	002	0
20	94102-10000-	WASHER, PLAIN, 10MM	002	0
21	96400-0601607	BOLT, FLANGE, 6X16	004	0

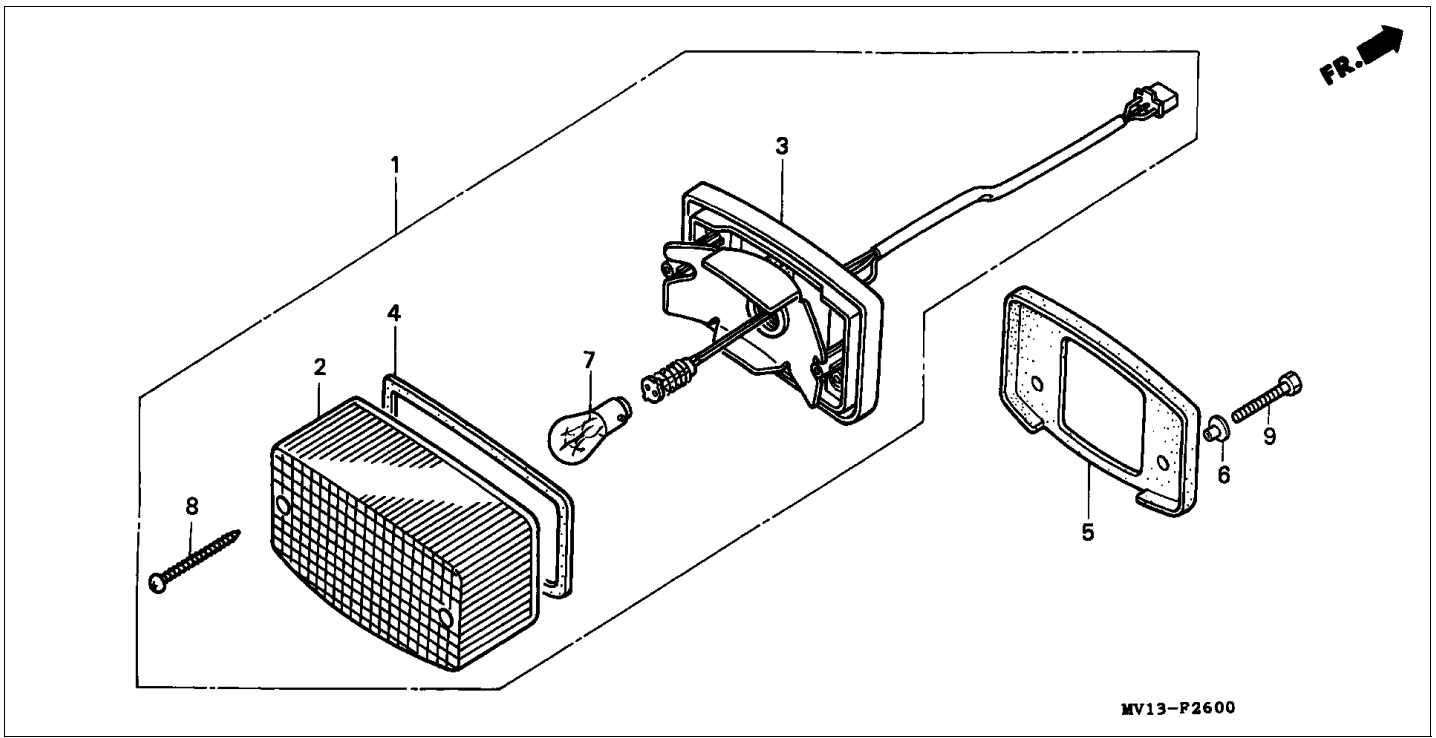


Block F-26 TAILLIGHT

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	33701-MV1-630	TAILLIGHT UNIT (12V 21/5W)	001	0
2	33702-KB7-013	LENS, TAILLIGHT (STANLEY)	001	0
3	33703-MV1-630	SOCKET COMP., TAILLIGHT	001	0
4	33709-KB7-003	PACKING, TAILLIGHT LENS	001	0
5	33718-MG2-000	PACKING, TAILLIGHT	001	0
6	33719-437-970	COLLAR, TAILLIGHT PACKING	002	0
7	34906-447-711	BULB, TAILLIGHT (STANLEY) (12V 21/5W)	001	0
8	90105-KB7-910	SCREW, TAPPING, 4X40	002	0
9	92101-050250A	BOLT, HEX., 5X25	002	0

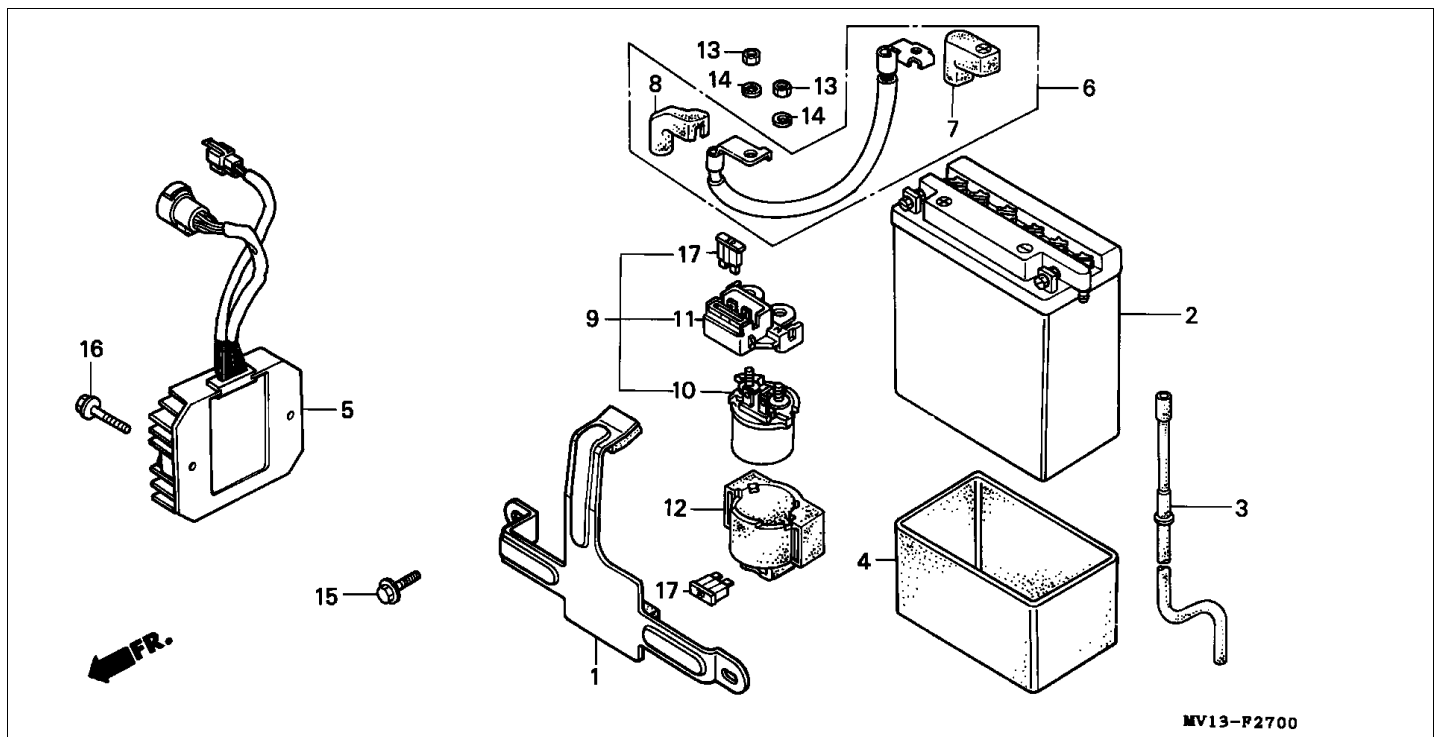


Block F-27 BATTERY

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	17250-MV1-000	BAND, BATTERY	001	0
2	31500-ML5-692	BATTERY (YB14-B2 YUASA)	001	0
3	31503-MM9-000	TUBE, BATTERY BREATHER	001	0
4	31511-MM0-620	CASE, BATTERY	001	0
5	31600-MV1-941	RECTIFIER ASSY., REGULATE	001	0
6	32401-MV1-000	CABLE, STARTER MAGNETIC BATTERY	001	0
7	32414-MM9-000	COVER A, BATTERY TERMINAL	001	0
8	32416-MF5-000	COVER B, MAGNETIC SWITCH	001	0
9	35850-MK3-671	SWITCH ASSY., STARTER MAGNETIC	001	0
10	35851-MF5-751	SWITCH COMP., STARTER MAGNETIC	001	0
11	35855-MG7-751	HOLDER ASSY., FUSE	001	0
12	35856-MF5-751	RUBBER, SHOCK	001	0
13	94002-060800S	NUT, HEX., 6MM	002	0
14	94111-06800-	WASHER, SPRING, 6MM	002	0
15	95701-0600807	BOLT, FLANGE, 6X8	002	0
16	95701-0602500	BOLT, FLANGE, 6X25	002	0
17	98200-33000-	FUSE, BLADE (30A)	002	0

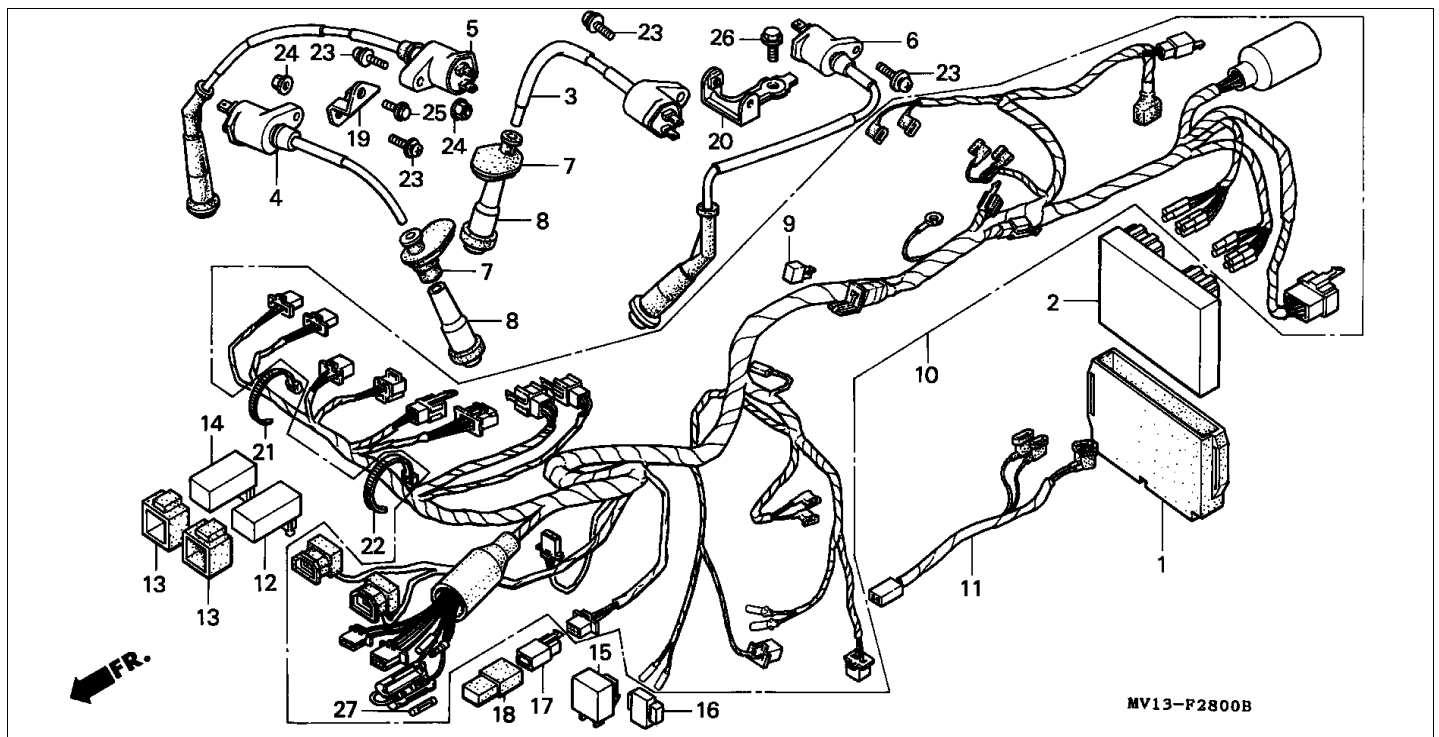


Block F-28 WIRE HARNESS/ IGNITION COIL

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	30401-MV1-000	CUSHION, C.D.I. UNIT	001	0
2	30410-MV1-003	C.D.I. UNIT	001	0
3	30510-MV1-000	COIL COMP., R. RR. IGNITION	001	0
4	30520-MV1-000	COIL COMP., L. FR. IGNITION	001	0
5	30540-MV1-000	COIL COMP., R. FR. IGNITION	001	0
6	30550-MV1-000	COIL COMP., L. RR. IGNITION	001	0
7	30605-MF5-000	SEAL, PLUG CAP	002	0
8	30701-MF5-000	CAP ASSY., NOISE SUPPRESSOR	002	0
9	31700-124-008	RECTIFIER ASSY., SILICON (SHINDENGEN)	002	0
10	32100-MV1-610	HARNESS, WIRE	001	0
11	32102-MS8-000	SUB HARNESS	001	0
12	36100-MG7-008	RELAY, FUEL CUT	001	0
13	36101-MB1-000	SUSPENSION, FUEL CUT RELAY	002	0
14	37640-MB1-701	CHECK UNIT, PILOT LAMP	001	0
15	38301-MF8-771	RELAY COMP., WINKER (TATEISHI)	001	0
16	38306-KJ6-740	SUSPENSION, WINKER RELAY	001	0
17	38501-GN2-014	RELAY COMP., STARTER (MITSUBA)	002	0
18	38506-GC7-611	SUSPENSION, STARTER RELAY (MITSUBA)	002	0
19	50155-MM9-000	STAY, FR. IGNITION COIL	001	0
20	50191-MV1-000	STAY, RR. IGNITION COIL	001	0
21	90650-KV6-003	BAND, WIRE	001	0
22	90650-KV6-003	BAND, WIRE	001	0
23	93893-0502207	SCREW-WASHER, 5X22	004	0
24	94050-05000-	NUT, FLANGE, 5MM	002	0
25	95701-0601208	BOLT, FLANGE, 6X12	001	0
26	95701-0601000	BOLT, FLANGE, 6X10	001	0
27	98200-20500-	FUSE B (5A)	001	0

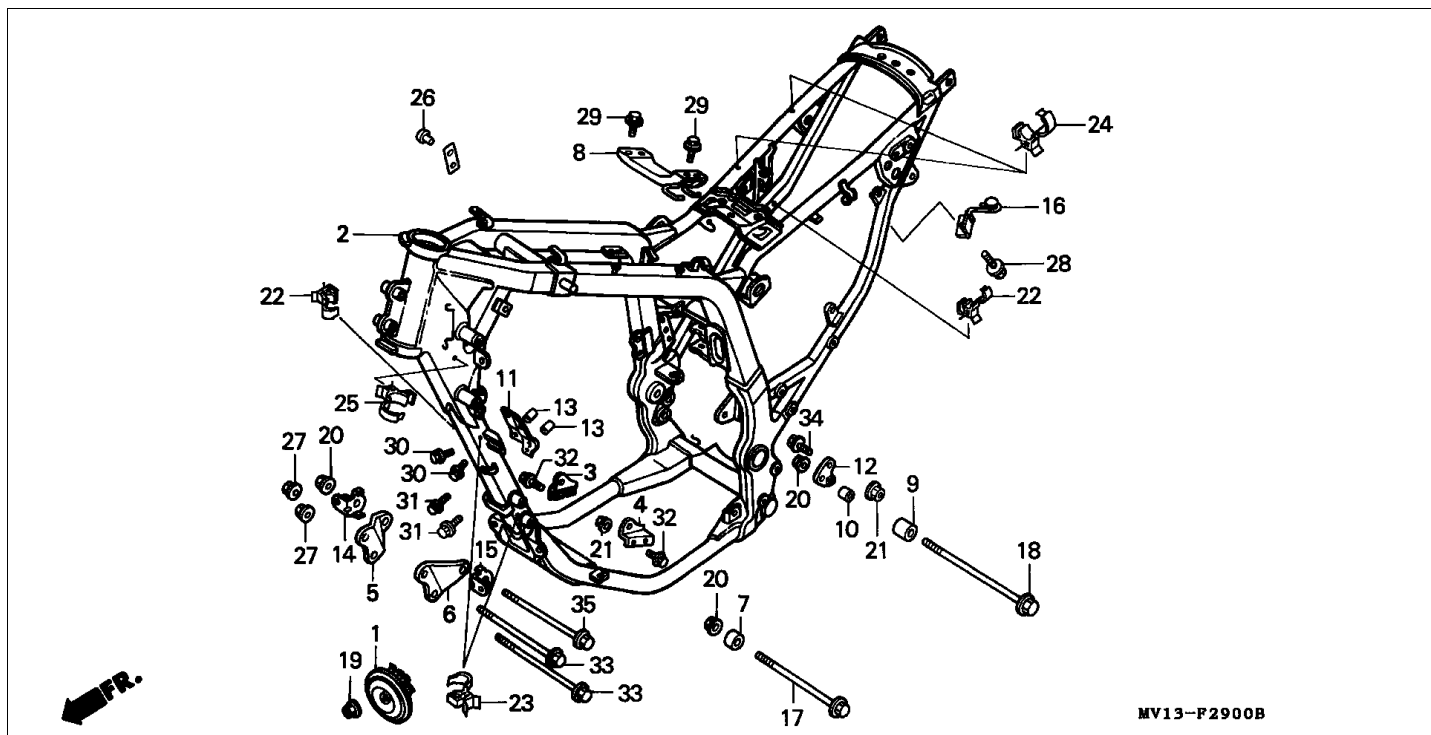

Block F-29 FRAME BODY


Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	38110-KW3-008	HORN COMP. (HIGH)	001	0
2	50100-MV1-610	BODY COMP., FRAME *NH138*	001	0
3	50123-MV1-000	PLATE, R. ENGINE HANGER LOWER *NH138*	001	0
4	50124-MV1-000	PLATE, L. ENGINE HANGER LOWER *NH138*	001	0
5	50181-MS8-000	PLATE, R. FR. ENGINE HANGER	001	0
6	50182-MS8-000	PLATE, L. FR. ENGINE HANGER	001	0
7	50184-MM9-000	COLLAR, R. ENGINE HANGER LOWER	001	0
8	50185-MS8-000	BRIDGE, MAIN PIPE	001	0
9	50186-MS8-000	COLLAR A, ENGINE MOUNTING	001	0
10	50187-MS8-000	COLLAR, ENGINE MOUNTING (B)	001	0
11	50188-MV1-000	PLATE, FR. HEAD ENGINE HANGER	001	0
12	50202-MS8-000	PLATE, R. RR. ENGINE HANGER UPPER *NH138*	001	0
13	50204-MS8-000	COLLAR, FR. ENGINE HANGER (B)	002	0
14	64207-MS8-000	STAY, R. LOWER COWL	001	0
15	64208-MS8-000	STAY, L. LOWER COWL	001	0
16	80113-MV1-000	STAY, RR. FENDER RUBBER	001	0
17	90108-GE1-670	BOLT, FLANGE, 10X155	001	0
18	90117-KW3-000	BOLT, FLANGE, 10X250	001	0
19	90208-425-870	NUT, FLANGE, 8MM	001	0
20	90308-382-670	NUT, FLANGE, 10MM	003	0
21	90309-357-000	NUT, HEX., 8MM	003	0
22	90690-GHB-631	CLIP, CABLE, 8MM	002	0
23	90690-GHB-641	CLIP, CABLE, 10MM	002	0
24	90690-GHB-651	CLIP, CABLE, 15MM	002	0
25	90690-GHB-661	CLIP, CABLE, 20MM	001	0
26	90841-001-000	SCREW, RIVET, 1.8X5	002	0
27	94050-08000-	NUT, FLANGE, 8MM	002	0
28	95701-0600800	BOLT, FLANGE, 6X8	001	0
29	95701-0601400	BOLT, FLANGE, 6X14	004	0
30	95701-0801408	BOLT, FLANGE, 8X14	002	0
31	95701-0804008	BOLT, FLANGE, 8X40	002	0
32	95701-0804508	BOLT, FLANGE, 8X45	004	0
33	95701-0809500	BOLT, FLANGE, 8X95	002	0
34	96300-0802200	BOLT, FLANGE, 8X22	002	0
35	96400-1016000	BOLT, FLANGE, 10X160	001	0

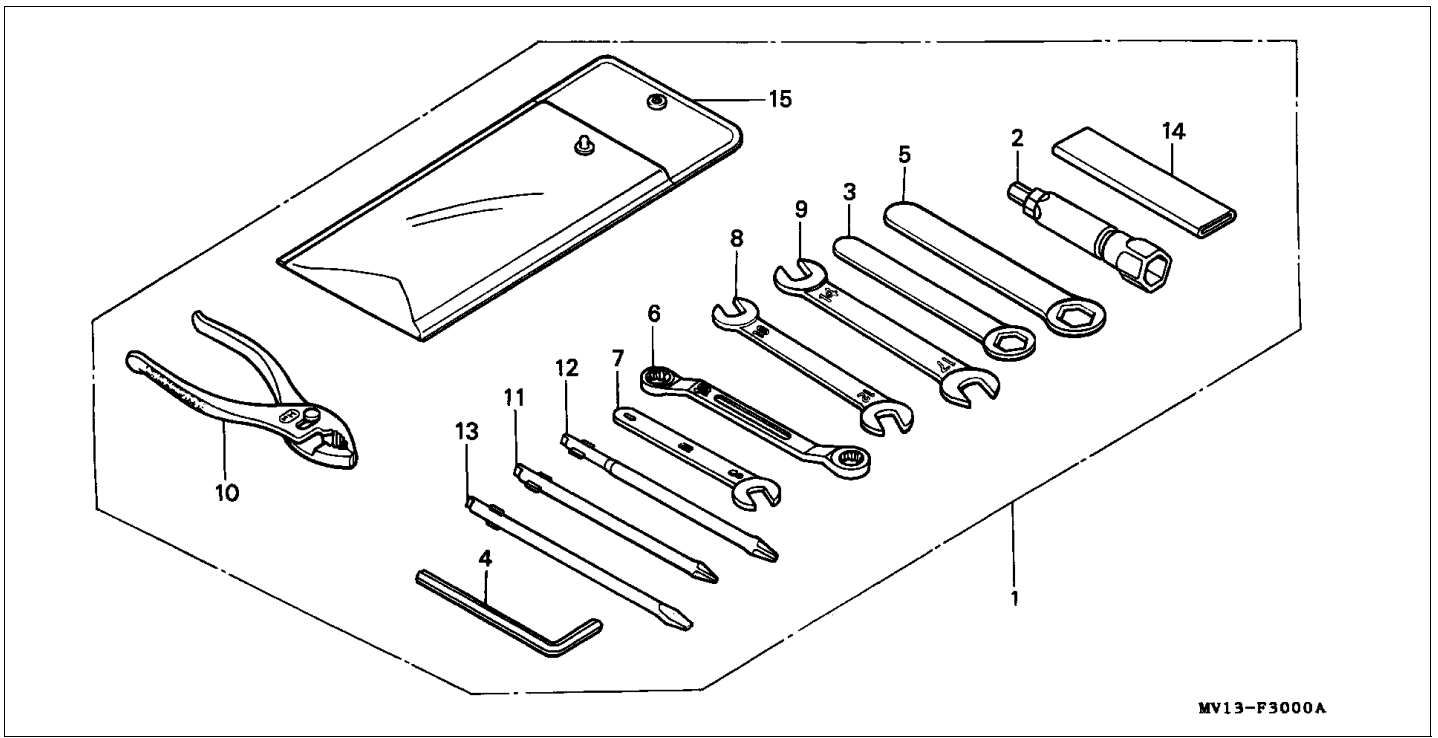

MV13-F3000A


Block F-30 TOOLS

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	89010-MV1-000	TOOL SET	001	0
2	89216-MJ1-000	WRENCH, PLUG	001	0
3	89218-MF5-000	WRENCH, EYE, 17MM	001	0
4	89221-371-000	WRENCH, HEX., 6MM	001	0
5	89223-MM9-000	WRENCH, EYE, 24MM	001	0
6	89227-461-000	WRENCH, EYE, 10X12	001	0
7	99001-08000-	SPANNER, 8	001	0
8	99001-10120-	SPANNER, 10X12	001	0
9	99001-14170-	SPANNER, 14X17	001	0
10	99002-13500-	PLIERS, 135	001	0
11	99003-10000-	DRIVER 1, PLUS SCREW (NO.2)	001	0
12	99003-20000-	DRIVER 2, PLUS SCREW (NO.3)	001	0
13	99003-30000-	DRIVER 3, MINUS SCREW (NO.2)	001	0
14	99006-12000-	HANDLE, EYE WRENCH, 12MM	001	0
15	99008-02000-	BAG, TOOL, 200MM	001	0

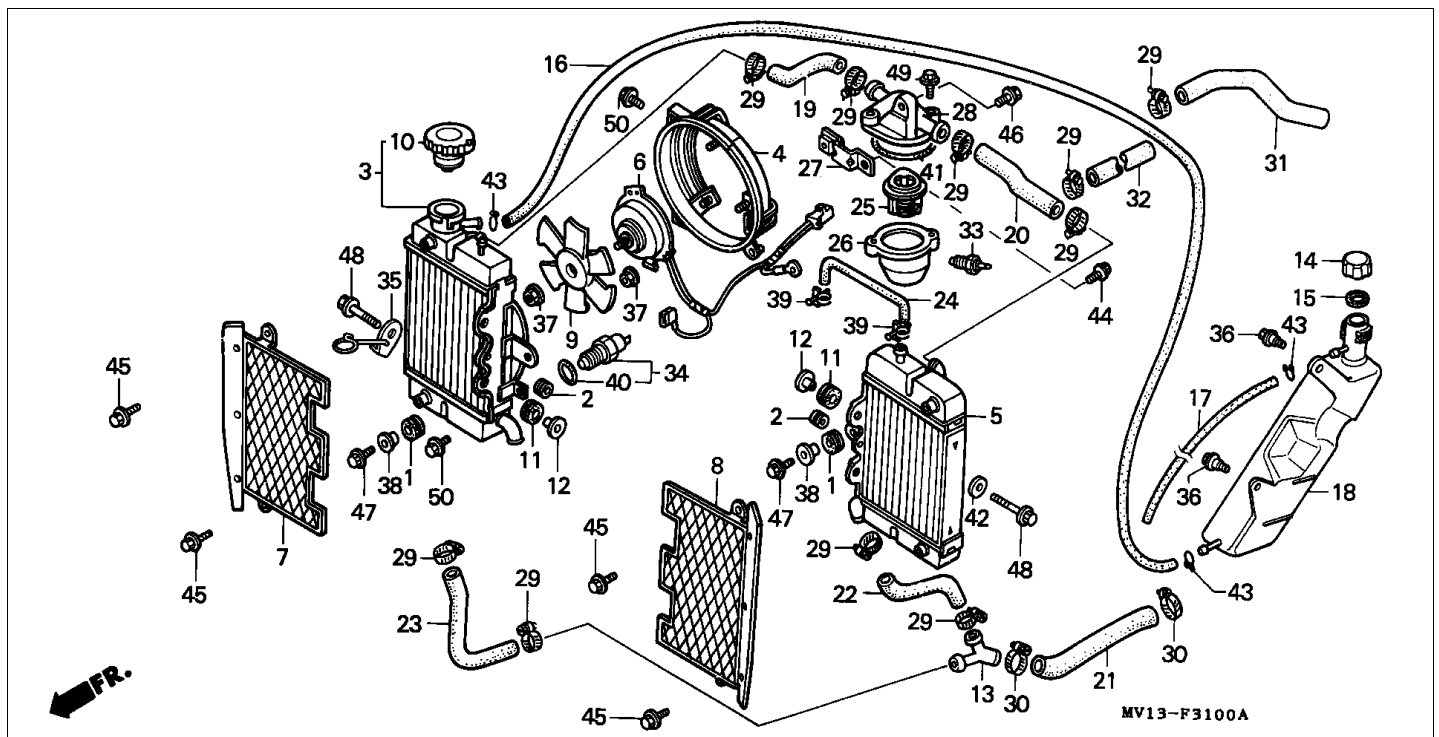


Block F-31 RADIATOR/SHROUD

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	17245-107-010	RUBBER, AIR CLEANER CASE MOUNTING	002	0
2	18624-634-670	GROMMET, AIR BYPASS	002	0
3	19011-MS8-003	RADIATOR COMP., R.	001	0
4	19013-MV1-000	SHROUD COMP.	001	0
5	19020-MS8-003	RADIATOR COMP., L.	001	0
6	19030-MV1-003	MOTOR ASSY., FAN	001	0
7	19031-MV1-000	GRILLE, R. RADIATOR	001	0
8	19032-MV1-000	GRILLE, L. RADIATOR	001	0
9	19040-MF5-751	FAN, COOLING (TOYO)	001	0
10	19045-ML0-901	CAP COMP. (TOYO)	001	0
11	19051-MS8-000	RUBBER, RADIATOR MOUNTING	004	0
12	19052-MS8-000	COLLAR, RADIATOR MOUNTING	004	0
13	19069-MS8-000	JOINT, WATER HOSE	001	0
14	19104-ME9-000	CAP, RESERVE TANK	001	0
15	19107-MG8-000	PACKING, RESERVE TANK	001	0
16	19107-MV1-000	TUBE, OVERFLOW	001	0
17	19108-MV1-000	TUBE, DRAIN	001	0
18	19110-MV1-000	TANK, RESERVE	001	0
19	19222-MS8-000	HOSE, WATER (NO.5)	001	0
20	19223-MS8-000	HOSE, WATER (NO.6)	001	0
21	19231-MS8-000	HOSE, WATER	001	0
22	19232-MS8-000	HOSE, L. WATER	001	0
23	19234-MS8-000	HOSE, R. WATER	001	0
24	19235-MV1-000	TUBE, RADIATOR JOINT	001	0
25	19300-KE8-000	THERMOSTAT ASSY.	001	0
26	19311-MS8-000	CASE, THERMOSTAT	001	0
27	19312-MS8-010	BRACKET, THERMOSTAT	001	0
28	19315-MM9-000	COVER, THERMOSTAT	001	0
29	19506-KS6-700	CLAMP B, WATER HOSE	010	0
30	19516-MB6-000	CLAMP, WATER HOSE	002	0
31	19521-MS8-000	HOSE, FR. OUTER WATER	001	0
32	19522-MS8-000	HOSE, RR. OUTER WATER	001	0
33	37750-PC1-004	THERMO UNIT (DENSO)	001	0
34	37760-MR1-003	THERMOSWITCH ASSY.	001	0
35	50716-MV1-000	GUIDE, CLUTCH CABLE	001	0
36	90111-162-000	BOLT, FLANGE, 6MM	002	0
37	90315-MK3-003	NUT, SERRATE, 5MM	004	0
38	90501-MA3-770	COLLAR, 6.2X12	002	0

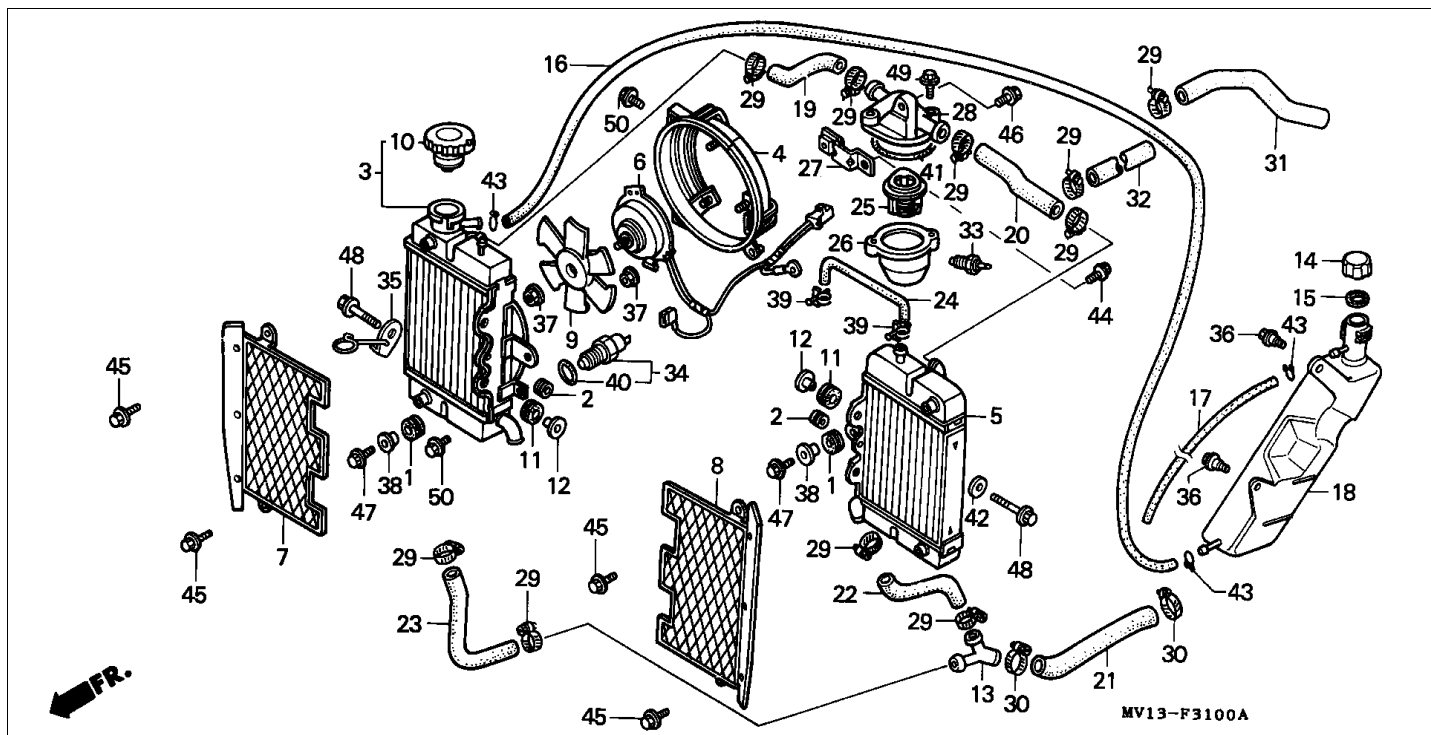


Block F-31 RADIATOR/SHROUD

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
39	90661-MV1-000	CLIP	002	0
40	91307-611-000	O-RING, 13.5X1.4	001	0
41	91311-KE8-000	O-RING, 47.5X2	001	0
42	94103-06700-	WASHER, PLAIN, 6MM	003	0
43	95002-02100-	CLIP, TUBE (B10)	003	0
44	95701-0601200	BOLT, FLANGE, 6X12	001	0
45	95701-0601207	BOLT, FLANGE, 6X12	004	0
46	95701-0601800	BOLT, FLANGE, 6X18	001	0
47	95701-0602007	BOLT, FLANGE, 6X20	002	0
48	95801-0602807	BOLT, FLANGE, 6X28	004	0
49	96000-0602007	BOLT, FLANGE, 6X20	002	0
50	96001-0601007	BOLT, FLANGE, 6X10	003	0

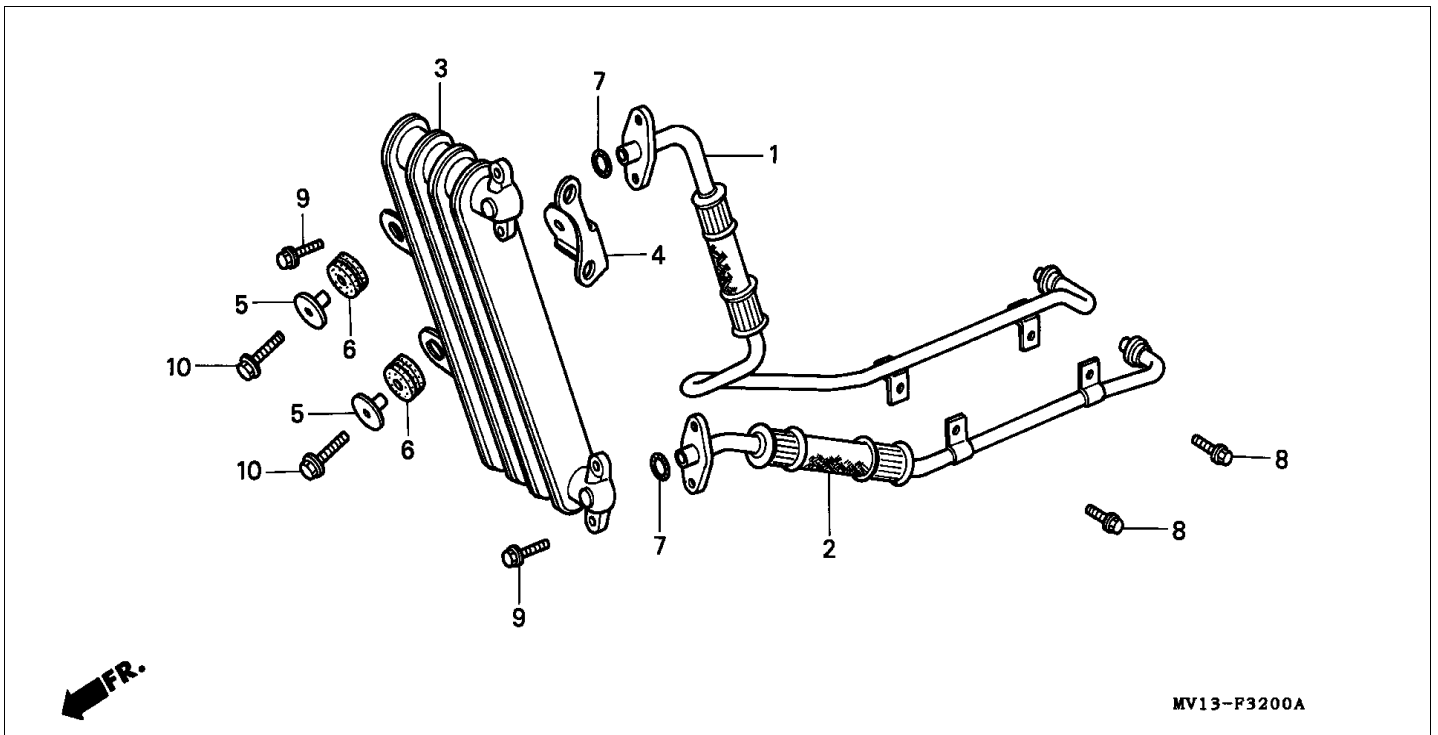


Block F-32 OIL COOLER

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	15510-MV1-000	HOSE COMP. A, OIL	001	0
2	15520-MV1-000	HOSE COMP. B, OIL	001	0
3	15600-MV1-000	COOLER COMP., OIL	001	0
4	50185-MV1-000	STAY, OIL COOLER	001	0
5	61104-422-000	COLLAR, SETTING	002	0
6	64122-KV0-000	RUBBER, SIDE SHELTER (B)	002	0
7	91314-ME5-003	O-RING, 10X2.6 (ARAI)	002	0
8	95701-0601207	BOLT, FLANGE, 6X12	002	0
9	95701-0602007	BOLT, FLANGE, 6X20	004	0
10	95701-0602507	BOLT, FLANGE, 6X25	002	0

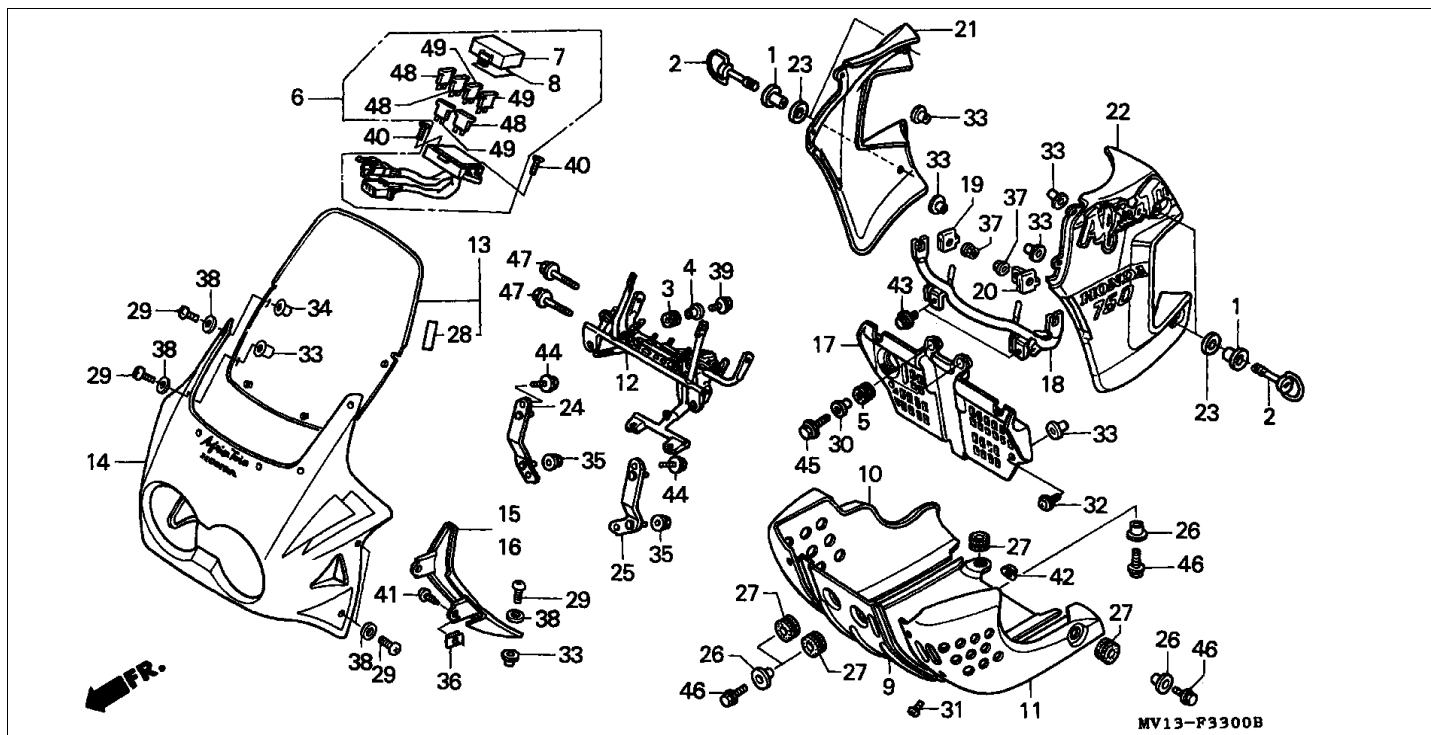


Block F-33 COWL

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	17223-KN5-670	COLLAR, AIR CLEANER COVER SETTING	004	0
2	17225-KN5-670	STUD, 6X21	004	0
3	19051-GE2-000	RUBBER, RADIATOR MOUNTING	002	0
4	19052-MB0-000	COLLAR, RADIATOR MOUNTING	002	0
5	33712-KT1-670	RUBBER, TAILLIGHT	002	0
6	38200-MV1-611	BOX ASSY., FUSE	001	0
7	38210-KR0-005	COVER, FUSE BOX	001	0
9	50352-MV1-000	BOTTOM, SKID PLATE	001	0
10	50353-MV1-000	BODY, R. SKID PLATE	001	0
11	50354-MV1-000	BODY, L. SKID PLATE	001	0
12	61310-MV1-930	STAY, FR. COWL	001	0
13	64100-MV1-930	SCREEN COMP., FR.	001	0
14	64200-MV1-930	COWL SET, UPPER (WL) *TYPE1*	001	0
14	64200-MV1-930	COWL SET, UPPER (WL) *TYPE2*	001	0
14	64200-MV1-930	COWL SET, UPPER (WL) *TYPE3*	001	0
15	64202-MV1-000	SUB COWL, R. UPPER *NH138*	001	0
15	64202-MV1-000	SUB COWL, R. UPPER *NH1*	001	0
15	64202-MV1-000	SUB COWL, R. UPPER *PB136*	001	0
16	64203-MV1-000	SUB COWL, L. UPPER *NH138*	001	0
16	64203-MV1-000	SUB COWL, L. UPPER *NH1*	001	0
16	64203-MV1-000	SUB COWL, L. UPPER *PB136*	001	0
17	64206-MV1-000	COWL, CENTER	001	0
18	64209-MV1-000	PIPE COMP., COWL MOUNTING	001	0
19	64211-MS8-000	PLATE, R. NUT, 8MM	001	0
20	64212-MV1-000	PLATE, L. NUT, 8MM	001	0
21	64220-MV1-930	COWL SET, R. SIDE (WL) *TYPE1*	001	0
21	64220-MV1-930	COWL SET, R. SIDE (WL) *TYPE2*	001	0
21	64220-MV1-930	COWL SET, R. SIDE (WL) *TYPE3*	001	0
22	64230-MV1-930	COWL SET, L. SIDE (WL) *TYPE1*	001	0
22	64230-MV1-930	COWL SET, L. SIDE (WL) *TYPE2*	001	0
22	64230-MV1-930	COWL SET, L. SIDE (WL) *TYPE3*	001	0
23	64297-MR7-000	RETAINER	004	0
24	64303-MV1-000	SUB STAY, R. UPPER COWL	001	0
25	64304-MV1-000	SUB STAY, L. UPPER COWL	001	0
26	80101-KB7-600	COLLAR, 8X12	004	0
27	80152-958-680	RUBBER, RR. FENDER	004	0
28	87522-KE8-600	LABEL, VISOR CAUTION	001	0
29	90001-MG1-000	SCREW, SPECIAL, 5X16	012	0

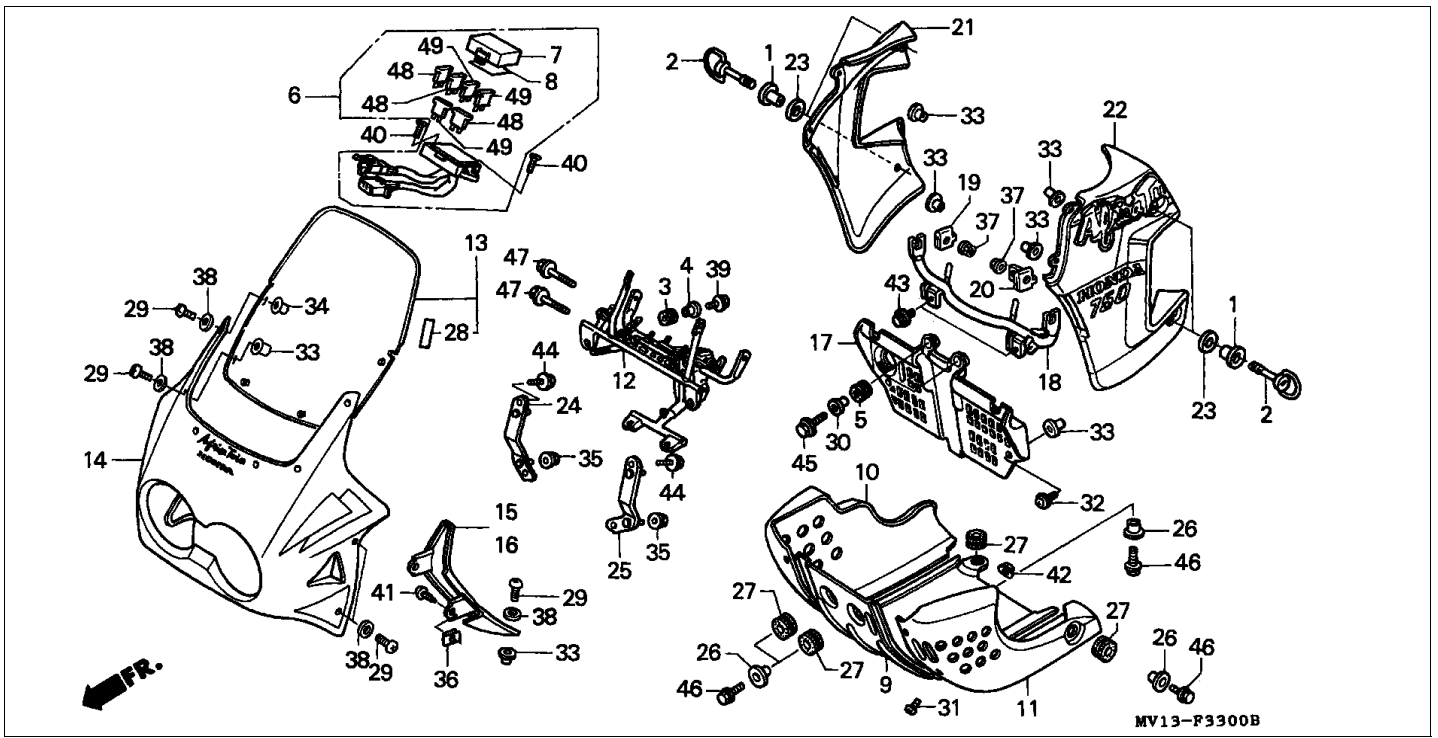


Block F-33 COWL

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
30	90001-961-670	COLLAR, SIDE MOUNTING	002	0
31	90106-KAE-000	SCREW, TORUS, 6X12	012	0
32	90109-SB6-000	SCREW, TRUSS, 5X16	002	0
33	90111-MM9-000	NUT, COWL SETTING, 5MM	012	0
34	90156-SE3-003	BLIND, FASTENER	002	0
35	90203-PD1-000	NUT, FLANGE, 6MM	004	0
36	90301-KE1-003	NUT, SPRING, 5MM	004	0
37	90301-SA0-000	NUT, FLANGE CAP, 8MM	002	0
38	90504-964-000	WASHER, THRUST, 5MM	012	0
40	93500-040120G	SCREW, PAN, 4X12	002	0
41	93903-25280-	SCREW, TAPPING, 5X12	004	0
42	94050-06000-	NUT, FLANGE, 6MM	012	0
43	95701-0601200	BOLT, FLANGE, 6X12	002	0
44	96300-0601007	BOLT, FLANGE, 6X10	004	0
45	96300-0601807	BOLT, FLANGE, 6X18	002	0
46	96300-0802500	BOLT, FLANGE, 8X25	004	0
47	96400-0803807	BOLT, FLANGE, 8X38	002	0
48	98200-31000-	FUSE, BLADE (10A)	003	0
49	98200-32000-	FUSE, BLADE (20A)	004	0

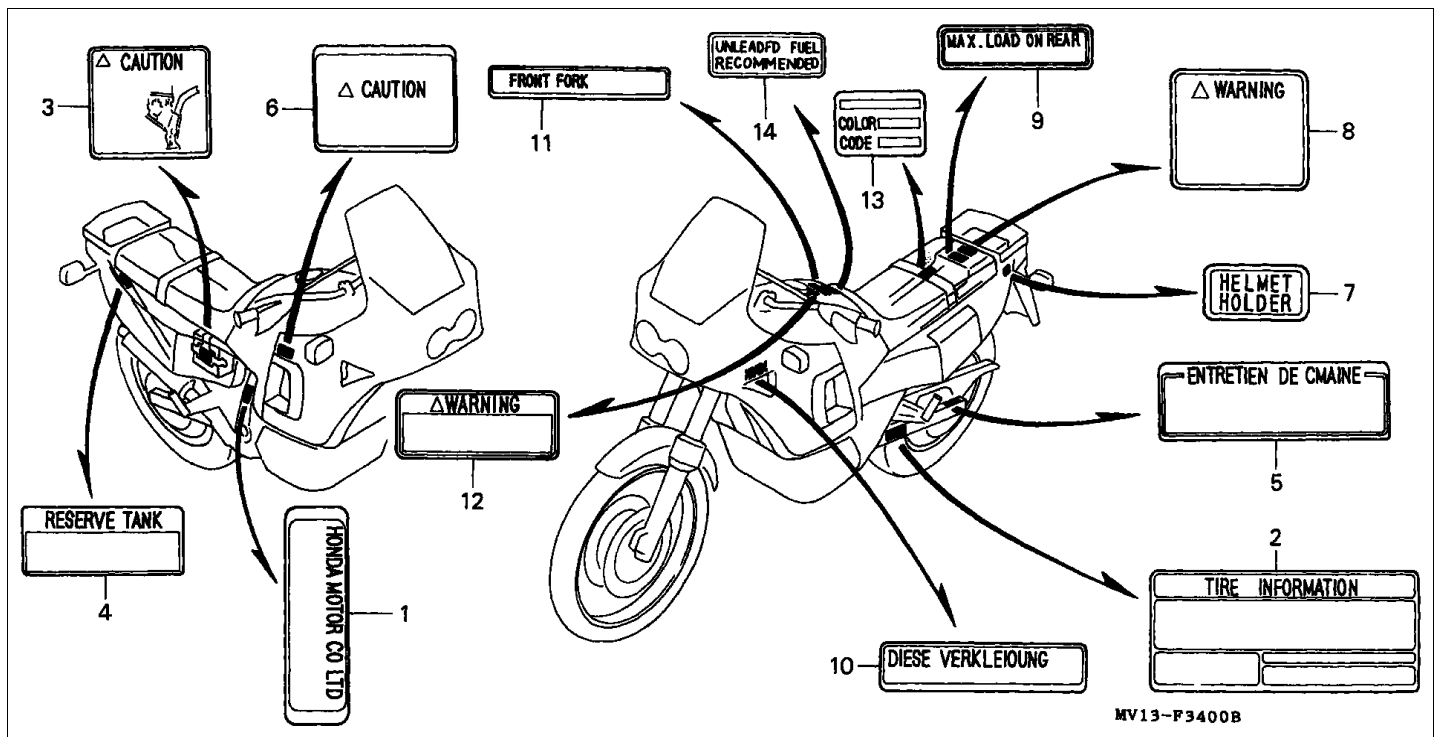


Block F-34 CAUTION LABEL

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
1	87501-MV1-630	PLATE, REGISTERED NUMBER	001	0
2	87505-MV1-830	LABEL, TIRE	001	0
3	87506-MM9-670	LABEL, BATTERY	001	0
4	87507-MB4-670	LABEL, RESERVE TANK	001	0
5	87507-MV1-680	MARK, DRIVE CHAIN CAUTION	001	0
6	87508-MM9-670	LABEL, RADIATOR	001	0
7	87511-323-670	LABEL, HELMET HOLDER	001	0
8	87512-MV1-680	LABEL, ACCESSORIES & LOADING	001	0
9	87513-MV1-600	LABEL, LUGGAGE CARRIER CAUTION	001	0
10	87515-MV1-620	LABEL, FAIRING MARK	001	0
11	87517-KM9-640	LABEL, FR. FORK CAUTION	001	0
12	87560-ME9-670	MARK, DRIVE CAUTION *TYPEG*	001	0
13	87565-MV1-930	LABEL, COLOR *TYPE1* (NH138H)	001	0
13	87565-MV1-930	LABEL, COLOR *TYPE2* (NH1A)	001	0
13	87565-MV1-930	LABEL, COLOR *TYPE3* (PB136I)	001	0

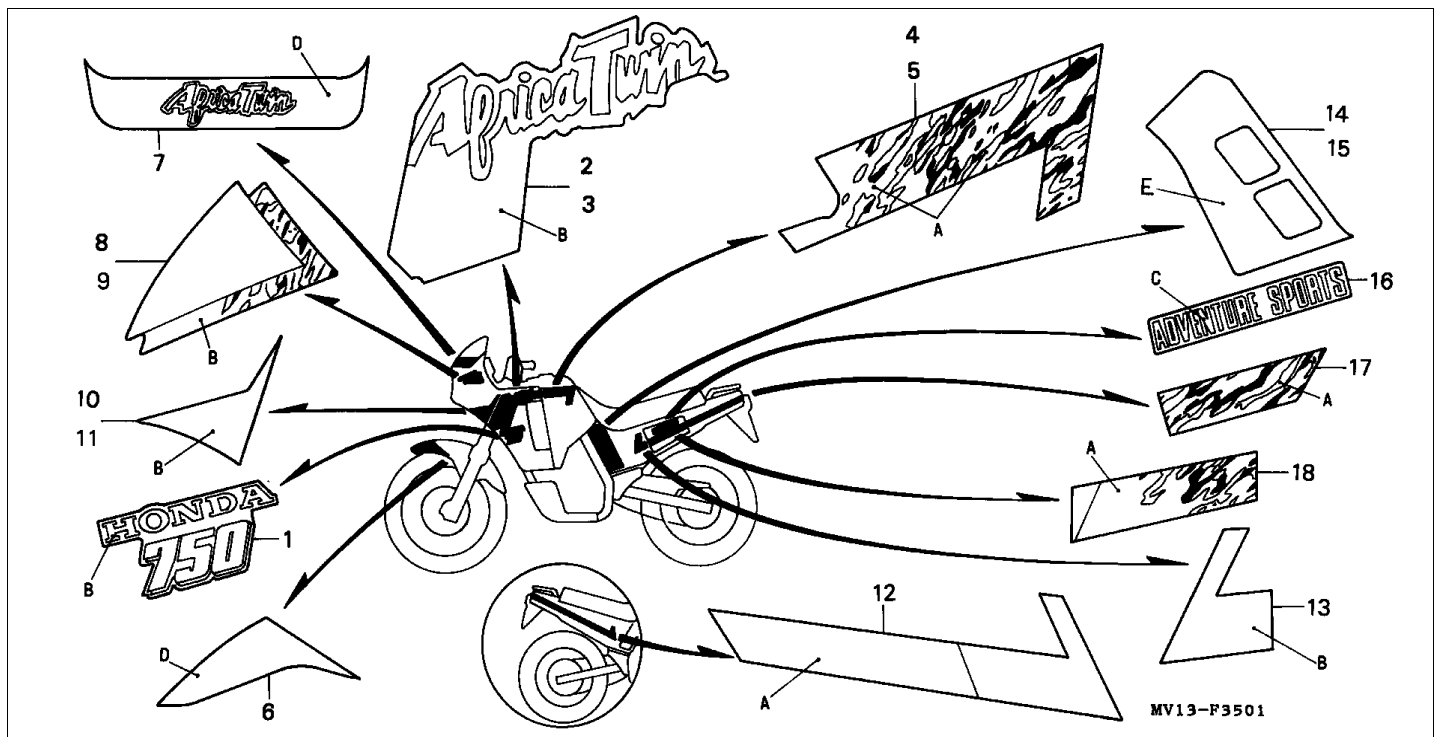

Block F-35-1 STRIPE/MARK (XRV750N)

Refrn	Part Number	Parts Description	Unit Qty	Repair Qty
1	87135-MV1-930	MARK, SIDE COWL *TYPE1*	002	0
1	87135-MV1-930	MARK, SIDE COWL *TYPE2*	002	0
1	87135-MV1-930	MARK, SIDE COWL *TYPE3*	002	0
2	87136-MV1-930	STRIPE, R. SIDE COWL *TYPE1*	001	0
2	87136-MV1-930	STRIPE, R. SIDE COWL *TYPE2*	001	0
2	87136-MV1-930	STRIPE, R. SIDE COWL *TYPE3*	001	0
3	87137-MV1-930	STRIPE, L. SIDE COWL *TYPE1*	001	0
3	87137-MV1-930	STRIPE, L. SIDE COWL *TYPE2*	001	0
3	87137-MV1-930	STRIPE, L. SIDE COWL *TYPE3*	001	0
4	87138-MV1-930	STRIPE, R. FUEL TANK *TYPE1*	001	0
4	87138-MV1-930	STRIPE, R. FUEL TANK *TYPE2*	001	0
4	87138-MV1-930	STRIPE, R. FUEL TANK *TYPE3*	001	0
5	87139-MV1-930	STRIPE, L. FUEL TANK *TYPE1*	001	0
5	87139-MV1-930	STRIPE, L. FUEL TANK *TYPE2*	001	0
5	87139-MV1-930	STRIPE, L. FUEL TANK *TYPE3*	001	0
6	87143-MV1-930	STRIPE, FR. FENDER *TYPE1*	001	0
6	87143-MV1-930	STRIPE, FR. FENDER *TYPE2*	001	0
6	87143-MV1-930	STRIPE, FR. FENDER *TYPE3*	001	0
7	87144-MV1-930	STRIPE A, UPPER COWL *TYPE1*	001	0
7	87144-MV1-930	STRIPE A, UPPER COWL *TYPE2*	001	0
7	87144-MV1-930	STRIPE A, UPPER COWL *TYPE3*	001	0
8	87145-MV1-930	STRIPE B, R. UPPER COWL *TYPE1*	001	0
8	87145-MV1-930	STRIPE B, R. UPPER COWL *TYPE2*	001	0
8	87145-MV1-930	STRIPE B, R. UPPER COWL *TYPE3*	001	0
9	87146-MV1-930	STRIPE B, L. UPPER COWL *TYPE1*	001	0
9	87146-MV1-930	STRIPE B, L. UPPER COWL *TYPE2*	001	0
9	87146-MV1-930	STRIPE B, L. UPPER COWL *TYPE3*	001	0
10	87147-MV1-930	STRIPE C, R. UPPER COWL *TYPE1*	001	0
10	87147-MV1-930	STRIPE C, R. UPPER COWL *TYPE2*	001	0
10	87147-MV1-930	STRIPE C, R. UPPER COWL *TYPE3*	001	0
11	87148-MV1-930	STRIPE C, L. UPPER COWL *TYPE1*	001	0
11	87148-MV1-930	STRIPE C, L. UPPER COWL *TYPE2*	001	0
11	87148-MV1-930	STRIPE C, L. UPPER COWL *TYPE3*	001	0
12	87161-MV1-930	STRIPE, R. SIDE COVER *TYPE1*	001	0
12	87161-MV1-930	STRIPE, R. SIDE COVER *TYPE2*	001	0
12	87161-MV1-930	STRIPE, R. SIDE COVER *TYPE3*	001	0
13	87162-MV1-930	STRIPE A, L. SIDE COVER *TYPE1*	001	0
13	87162-MV1-930	STRIPE A, L. SIDE COVER *TYPE2*	001	0

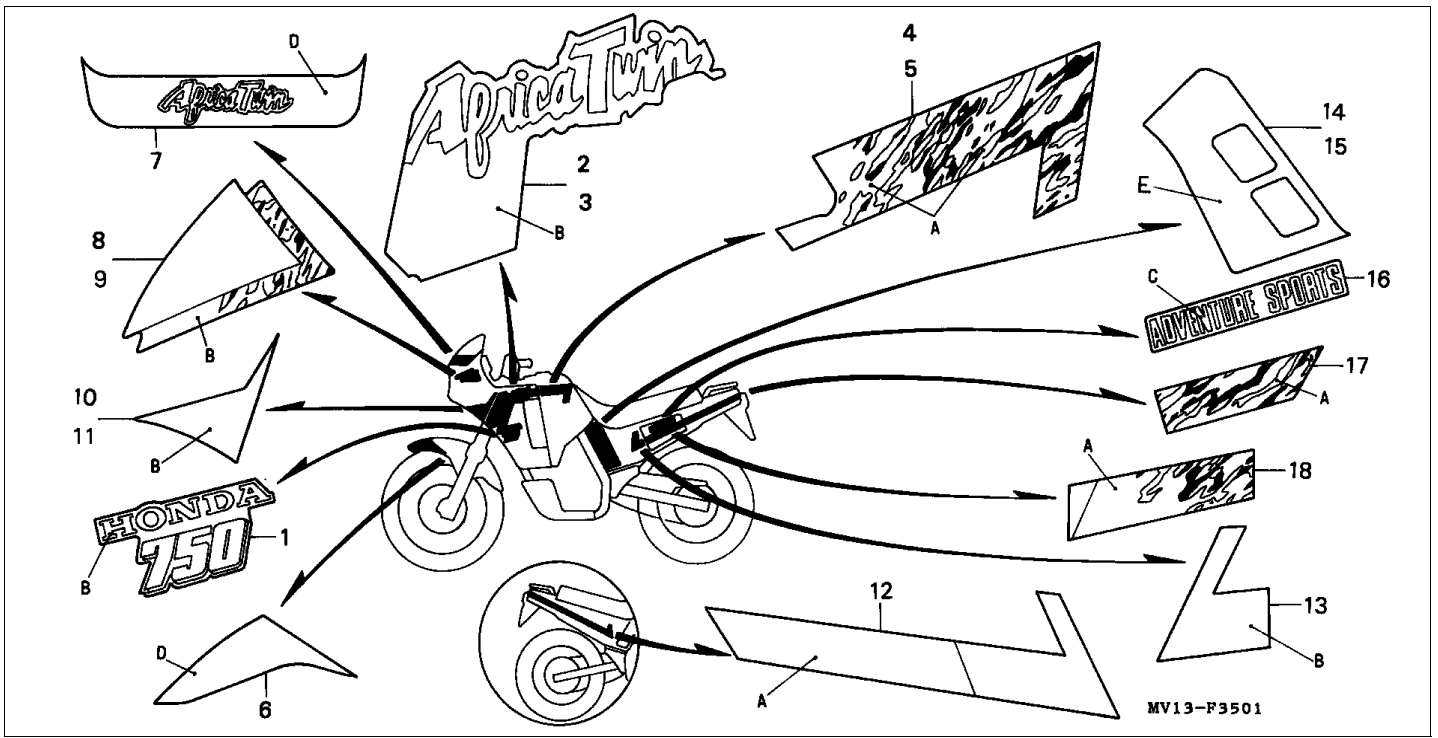

Block F-35-1 STRIPE/MARK (XR750N)

Refnr	Part Number	Parts Description	Unit Qty	Repair Qty
13	87162-MV1-930	STRIPE A, L. SIDE COVER *TYPE3*	001	0
14	87163-MV1-300	LABEL, R. SIDE COVER	001	0
15	87164-MV1-300	LABEL, L. SIDE COVER	001	0
16	87165-MV1-930	MARK, SIDE COVER *TYPE1*	002	0
16	87165-MV1-930	MARK, SIDE COVER *TYPE2*	002	0
16	87165-MV1-930	MARK, SIDE COVER *TYPE3*	002	0
17	87166-MV1-930	STRIPE B, L. SIDE COVER *TYPE1*	001	0
17	87166-MV1-930	STRIPE B, L. SIDE COVER *TYPE2*	001	0
17	87166-MV1-930	STRIPE B, L. SIDE COVER *TYPE3*	001	0
18	87167-MV1-930	STRIPE, TOOL BOX COVER *TYPE1*	001	0
18	87167-MV1-930	STRIPE, TOOL BOX COVER *TYPE2*	001	0
18	87167-MV1-930	STRIPE, TOOL BOX COVER *TYPE3*	001	0